



OLYMPIA FAUCETS, INC.

Interchange City Distribution Center #20
1277 Heil Quaker Boulevard
La Vergne, TN 37086
(888) 772-7701
www.olympiafaucets.com

Model Number: K-5030, K-5050(CP, PVD BN, ORB)

INSTALLATION

Tools:



Adjustable Wrench



Plumbers Putty



Teflon Tape



Rags




Warnings and Notes:


Check with local plumbing code requirements before installation.
This product should be installed by a local listed plumber.
Do not use plumbers putty on threads.

Installation Steps:


Single Handle Pull-Out Kitchen Faucet

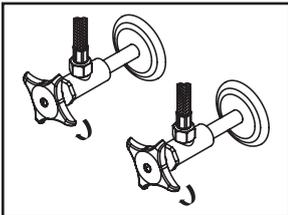


(1) Shut off water supplies. Remove old faucet. Clean mounting surface in preparation for new faucet.

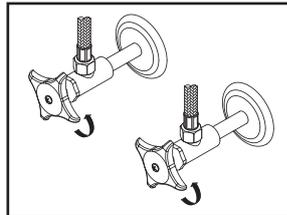


(6) Connect hot and cold inlet supply hoses to supply stops. For 1/2" connection; use 3/8" male to 1/2" female adapter for installation. Adapters are optional and not provided with faucet. Turn on both side supply stops.

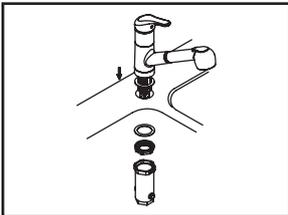


(2) **For 1-Hole Installation:-** Make sure washer is under escutcheon, slide escutcheon for 1-hole installation to the faucet body. Insert faucet through mounting hole. Make sure spout swivel angle are even to the right and to the left. From underneath of the sink, thread locknut and washer to the faucet body, tighten locknut with help of supplied mounting tool.

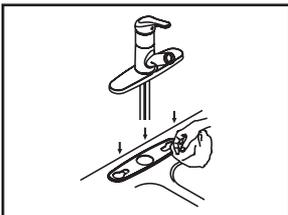

(3) **For 3-Hole Installation:-** Thread mounting bolts to deck plate. Apply plumbers putty under the base gasket. Place faucet with deck plate in position on the sink. Make sure spout swivel angle are even to the right and to the left. From underneath of the sink, thread locknut and washer to the faucet body, tighten locknut with help of supplied mounting tool.

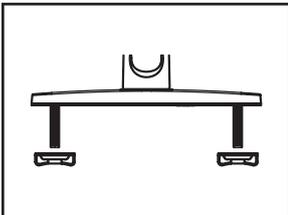

(4) Thread and tighten both mounting nuts to mounting bolt to secure deck plate.

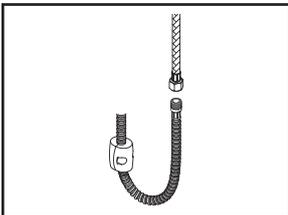

(5) Connect spray head hose to faucet outlet hose from underneath of the sink. Install weight on spray head hose, adjust weight's position so the spray head can be retracted properly.

