



NEW
Custom
Emergency
Signaling
Systems **pg**
55

Emergency Fixtures

Drench Showers

Eye and Eye/Face Washes

Combination Drench Shower Eye and Eye/Face Washes

Enclosed Safety Showers

Tankless Tempering Systems

Emergency Signaling Systems

Drench Hoses

Laboratory Fixtures

Emergency Thermostatic Mixing Valves

Portable Eyewashes



BRADLEYCORP.COM

What's New



Stainless Steel Fixtures with Halo
Pages 20, 29, 42, 43

See Classic Model vs Halo Cross Reference on page 100 or on bradleycorp.com



Enclosed Safety Showers
Pages 48–50



Keltech Tankless Tempering Systems
Pages 51, 52



Emergency Signaling Systems
Pages 55–57



Laboratory Eye & Eye/Face Washes with Halo
Pages 68–71, 74, 75

New ANSI Quick Compliance Guide booklet available!

Order or download at <http://www.bradleycorp.com/customerservice/litrequest.jsp#EmergencyFixtures>

Standard Products

Drench Showers

Freestanding	8
Quick Compliance Guide	9
Horizontal	12
Vertical	13

Eye & Eye/Face Washes

Pedestal-mounted	15
Quick Compliance Guide	16
S19214 Series Configurator	22
Wall-mounted	23
S19224 Series Configurator	31

Combination Drench Showers

Shower with Eyewash, Eye/Face Wash or Eye/Face Spray Ring	32
Quick Compliance Guide	33
S19314 Series Configurator	45
Heat Trace	46

Enclosed Safety Showers

Indoor and Outdoor Models	48
Quick Compliance Guide	49

Keltech Tankless Heaters

Tankless Tempering Systems	51
----------------------------	----

Emergency Thermostatic Mixing Valves

Thermostatic Mixing Valves	53
----------------------------	----

Emergency Signaling Systems

Signaling Systems	55
Flow Switches	58
S19324 Series Configurator	59
S19324D1 Series Configurator	60
S19324D2 Series Configurator	61

Drench Hoses

Drench Hoses	62
Quick Compliance Guide	63
Deck-mounted	64
Wall-mounted	64
Backflow Preventers	65

Plumbed Laboratory Safety Solutions

Deck- and Wall-mounted Eye and Eye/Face Washes	66
Swing-activated Eye and Eye & Eye/Face Washes	68
Quick Compliance Guide	69
Recessed Drench Showers, Eye and Eye/Face Washes	72

Portable Safety Solutions

On-Site® Portable Gravity-Fed Eyewashes	78
Quick Compliance Guide	79
Portable Pressurized Eyewashes	81

Accessories

Portable Eyewash Accessories	83
Drench Hose Spray Kits	83
Privacy Curtain and Drench Shower Tester	83
Emergency Signaling Systems	84
Retrofit Classic Dust Covers	85

Replacement Parts: Spintec and Drench Showers

Handles	86
Retrofit Kits	86
Ball Valves	87
Hoses, Guide Brackets, Spray Valve	91, 92
Backflow Prevention	92

Replacement Parts: Other

On-Site Preservative Kit	93
On-Site Foam Liner	93
On-Site Gravity Fed Tank	93
Safety Signs	93
Safety Yellow Paint	93
Inspection Tag	93
Eyewash Test Gauge	93
Foot Treadle Kits	94
Adapters	94
Freeze Protection Kits	54, 94
Scald Protection Kits	54, 94

Standard Specifications 95

Halo vs Classic Cross Reference 100

Halo Certification Reference 102

Numerical Index 106

Barrier Free

Drench Showers

Freestanding

S19-110BF	10
S19-110BFSS, S19-110BFSSZ	10

Horizontal Mounted

S19-120BF	13
S19-120ABF	13
S19-120SSBF, S19-120SSBFZ	13
S19-120FMBF	13

Vertical Mounted	
S19-130BF	14
S19-130ABF	14
S19-130SSBF, S19-130SSBFZ	14
Recess Mounted	
S19-125BF	73
S19-125FMBF	73
S19-125SBF	73
S19-125SFMBF	73
Eye & Eye/Face Washes	
Pedestal Mounted	
All Halo Models	17
S19214 Series Configurator	22
Wall Mounted	
All Halo Models	24
S19224 Series Configurator	31
Swing Activated	
S19274HDB	70
S19274HWB	70
S19-280D	70
S19-280W	70
S19274JDB	71
S19274JWB	71
S19-290D	71
S19-290W	71
Cabinet Concealed, Swing Activated	
S19284HB	74
S19284JB	74
S19294HB	75
S19294HBT	75
S19294JB	75
S19294JBT	75
Combination Drench Shower and Eye & Eye/Face Washes	
S19314BFPB, S19314BFPBZ	39
S19314BFPBZS	39
S19314BF, S19314BFZ	39
S19314BFZS	40
S19314DCBF, S19314DCBFZ	41
S19314DCBFZS	41
S19314BFSS, S19314BFSSZ	42
S19314 Series Configurator	45
Recessed, Swing Activated	
S19345HXB	76
S19345HXBT	76
S19345HFB	76
S19345HFBT	76
S19345JXB	76

S19345JXBT	76
S19345JFB	76
S19345JFBT	76

FROST PROOF

Drench Showers (Through Wall)	
S19-120HFP Series	12
Eye & Eye/Face Washes (Through Wall)	
S19-220HFP Series	29
Combination Drench Shower and Eye & Eye/Face Washes	
S19-310 Series	42
Heat Trace	
S19-300	47

Corrosion Resistant

Drench Showers	
Freestanding, Stainless Steel	
S19-110SS, S19-110SSZ	10
S19-110BFSS, S19-110BFSSZ	10
Horizontal Mounted, Stainless Steel	
S19-120SS, S19-120SSZ	12
S19-120SSBF, S19-120SSBFZ	13
Vertical Mounted, Stainless Steel	
S19-130SS, S19-130SSZ	13
S19-130SSBF, S19-130SSBFZ	14
Eye & Eye/Face Washes	
Pedestal Mounted, Stainless Steel	
S19214BSS, S19214BSSZ	20
S19214SC, S19214SCZ	20
S19214SS, S19214SSZ	20
Wall Mounted, Stainless Steel	
S19224SC, S19224SCZ	29
S19224SS, S19224SSZ	29
Portable Pressurized, Stainless Steel	
S19-690	82
S19-690LHS	82
S19-788	82
S19-788LHS	82
Combination Drench Shower and Eye & Eye/Face Washes	
Stainless Steel	
S19314BFSS, S19314BFSSZ	42
S19314FSS, S19314FSSZ	42
S19314SC, S19314SCZ	42
S19314SS, S19314SSZ	43
S19314SS16, S19314SS16Z	43

Shower Accessories

Foot Treadle Kits	
S45-1314SS	94
S45-1314SS16	94

BradEX®

On-Site® Eyewash Kit	
S19-949	80
Eyewashes	
Freestanding	
S19214EW	17
Swing Activated	
S19-270C	70
S19-270HD	70
S19-270HW	70
S19-270E	71
Laboratory	
S19-200B	67
S19-270B	67
Gravity Fed	
S19-921	80
Drench Showers	
S19-120	12
S19-130	13
Combination Drench Shower and Eye & Eye/Face Washes	
S19314EW	34
S19314SBFW	37
Emergency Thermostatic Mixing Valves	
S19-2000	54
S19-2100	54
S19-2150	54
S19-2200	54
S19-2250	54
S19-2300	54
S19-2350	54

Fast Shipping

Bradley's **BradEX®** shipping program allows you to prepare for upcoming inspections and respond to changing workplace needs. Fast replacements are just a phone call away and will ship within two days. The **BradEX®** shipping feature is available for a wide range of product, at no extra cost.

Halo EYE/FACEWASH

Halo™ surrounds you with the fastest, most effective relief in the industry. Bradley's new eye & eye/face wash provides the most washdown coverage for your face of any model on the market. In an emergency, your eyes and face can't afford to trust anything but the best in the industry.

- 1** Enhanced dust cover design in clear translucent yellow allowing for easy inspection. When the cover is opened, water flow starts automatically giving the user instant relief.
- 2** New ergonomic hand activation is easy to reach from any direction.
- 3** Separate supply waste and pipes to eye/face wash are industry first and exclusive to Bradley!
- 4** The Aquaduct™ design is the only selfdraining design for standard eyewash models – another industry first and Bradley exclusive. The self-draining Aquaduct helps reduce the risk of bacteria growth when unit is not in use. Integral strainer inside the Aquaduct reduces debris in the water for additional eye protection and also prevents clogging.
- 5** New dust cover caps on the eyewash are hinged for a more secure hold – keeping dust and debris off the water spouts.




SpinTec™ SHOWERHEADS

SpinTec™ showerheads incorporate the latest technology in fluid dynamics and provide the most consistent distribution of water from a drench shower. That means the fastest, most effective removal of contaminants in the industry.

SpinTec Standard Showerhead

Showerhead is constructed of ABS plastic so it is highly corrosion resistant.

- 1** Integral flow control provides a minimum of 20GPM (761 L/Min)
- 2** Contoured shape focuses water for faster washdown
- 3** Spinning motion of water creates optimal spray pattern

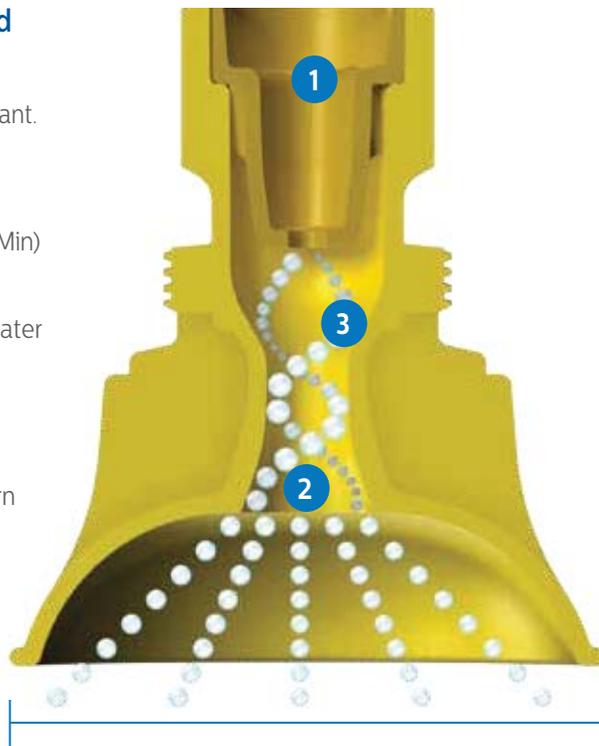

Smaller profile reduces risk of damage in busy industrial environments

SpinTec Uniform Distribution



OLD Uneven Distribution



SpinTec High Performance Stainless Steel

The 304 & 316 Stainless Steel showerhead provides the maximum corrosion resistance and durability for highly corrosive and abusive applications.



Recessed Flush-Mounted SpinTec Showerhead

Provides the smallest footprint and clean appearance of in-ceiling mounting. Easy to install.



SpinTec Showerhead with Stainless Steel Shroud

Provides new showerhead with a traditional looking shroud.



Keltech

Electric Water Heaters

Tough enough for the most extreme environments on earth

On demand supply of ANSI-required tepid water for safety showers and eye/face washes – in seconds.

- No need to keep a 300 gal (1136 L) tank heated 24/7/365
- Easy to install – just add water and power. All you need is one electrical connection and a cold water line
- Under constant flow and pressure, temperatures stay within $\pm 1^\circ$ F of set point
- Precision systems custom engineered to fit your application
- Meets ANSI/ISEA Z358.1 standards and third-party verified to UL/CSA standards
- Only electric tankless water heaters registered with the National Board and certified with the HLW stamp
- Optional features include NEMA 4X stainless steel enclosures, explosion proof purge system, and freeze protection to -20° F



For information contact your Bradley Representative or visit bradleycorp.com

Environmental and hazardous chemicals and site conditions



Within these industries warranting additional consideration are shown below. This list is not intended to be exhaustive, but rather, to serve as a starting point to begin the evaluation process of what types of hazards warrant the installation of a drench shower or eyewash fixture that provides an ANSI-compliant 15-minute flush. Industries subject to a higher accident ratio and an increased rate of OSHA audits are:

- Healthcare
- Industrial
- Education
- Construction
- Agriculture
- Government
- Hospitality
- Retail
- Laboratories
- Food Processing
- Paper Mills
- Automotive
- Mining
- Trades
- Aerospace
- Ethanol/Oil Refineries
- Wastewater Treatment
- Utilities

Common hazards that require a 15-minute flush

- Dust, dirt, salt, sand, cardboard, wood chips, powder, fine particulate
- Nails, wood splinters, staples
- Metal shavings, filings, dust, concrete, cement chips,
- Smoke, flammable or poisonous gases
- Insecticides, pesticides, herbicides, fumigants
- Solvents, stains, paint, thinner, acetone
- Bloodborne pathogens; blood, bodily fluids and remains
- Caustic water treatment chemicals
- Gas, diesel, cleaning solvents, antifreeze
- Laboratory chemicals, oxygen
- Bleach, chlorine, ammonia
- Battery acid, starter fluid, paints, oils, hydraulic fluid
- Bacteria, germs, biohazards
- Falling, flying or shifting debris, rocks, building materials and glass
- Thermal hazards, UV radiation burns (welder's flash), electrical arcs
- Acids, bases, solvents, lime
- Flammable liquids



Important information about compliance


The U.S. Code of Federal Regulations 29CFR 1910.151 states: "Where the eyes or body of any person may be exposed to injurious corrosive materials, suitable facilities for quick drenching or flushing of the eyes and body shall be provided within the work area for immediate emergency use."

The American National Standards Institute (ANSI) establishes standards for minimum performance and use requirements for eyewash and shower equipment.

The ANSI/ISEA Z358.1-2014 for Emergency Eyewash and Shower Equipment provides detailed guidelines to which OSHA, State OSHA and other regulatory agencies commonly refer.

The Joint Commission 2014 EC Standard for Hospitals requires: "The hospital takes action to minimize or eliminate identified safety and security risks in the physical environment." Furthermore, hospitals are required to "Minimize risk associated with selecting, handling, storing, transporting, using, and disposing hazardous chemicals." Surveyors commonly refer to OSHA requirements and the ANSI Standard for further guidance on best demonstrated practices.

Canadian Provincial authorities also typically refer to ANSI standards when auditing for or advising proper requirements for emergency eyewash showers.

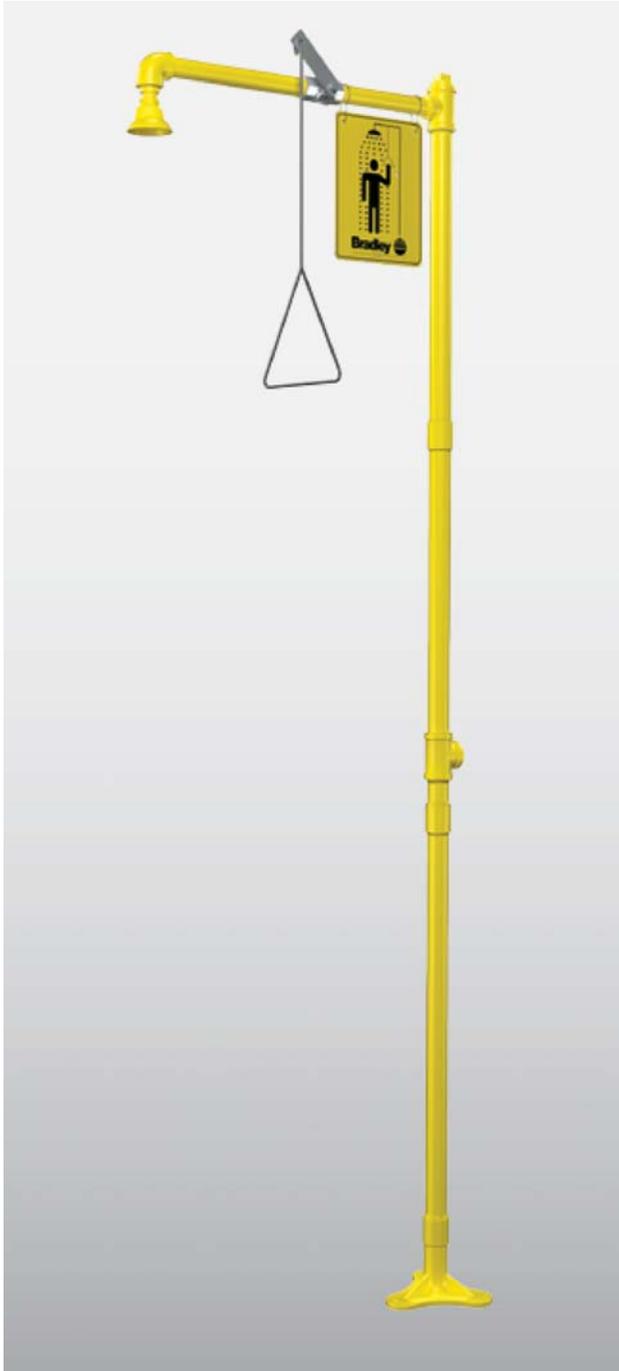

S19-110 Series

Overview

When there's the possibility of full-body chemical contamination, the first choice is an ANSI-compliant, full-body drench shower. Bradley drench showers, the S19-110 line of products, are a great choice when a wall-mounted drench shower isn't practical. And with the BradTect® corrosion-resistant yellow coating standard on most units, these drench showers are not only easy to see, but durable enough for your tough work environment.

Key Features

- SpinTec showerhead improves water distribution
- Exceeds ANSI minimum water flow of 20 GPM (76 L/Min) at 30 psi (207 kPa)
- Stay-open ball valve with single-step activation
- Triangular stainless steel pull rod
- Universal ID sign
- BradTect corrosion-resistant yellow coating (except on stainless steel, PVC and chrome models)
- 1¼" (32 mm) NPT inlet
- One-year warranty
- Top- or mid-level supply standard on all drench showers and combination units
- ANSI/ISEA Z358.1 certified models available
- European EN 15154-1 certified models available
- AS/NZS4775:2007 & AS4020 certified models available
- DVGW certified models available

Emergency Fixture Facts

Drench showers are required to have 16" (406 mm) of clearance around the fixture, from the center of the spray pattern. ANSI /ISEA Z358.1 Section 4.1.4

Suggested Accessories

Freeze and Scald Protection Valves	page 54
Standard and Explosion-Proof Signaling Systems	page 55-57
Drench Hose Spray Kits	page 83

Other parts and accessories are listed beginning on page 83

Recommended Emergency TMV

Navigator® EFX 25 (S19-2100)

The current ANSI standard calls for emergency eyewashes and drench showers to deliver tepid water (60–100°F/15.5–37.7°C) for 15 minutes. A thermostatic mixing valve is needed to mix the hot and cold water supply. Bradley's Navigator® TMVs are the most reliable emergency TMVs on the market. One valve is required per plumbed unit.



Quick Compliance Guide





This guide serves as a supplement to the ANSI/ISEA Z358.1-2014 standard.

Safety Drench Showers

- Valve mechanism opens in one second or less; it stays open until manually closed. (Section 4.2) ①
- Supply with flushing fluid ("potable water, preserved water, preserved buffered saline solution or other medically acceptable solution..."). (Definitions, Sections 4.1.1, 4.4.1)
- Locate 10 seconds or 55' (16.8 m) from contaminants or hazardous materials. Locate on the same plane as hazard and free of obstructions. (Section 4.5.2, Appendix B5)
- Doors are an obstruction. (Appendix B5)
- Must resist corrosion in the presence of flushing fluid. (Section 4.1.5)
- Audible, visual and central control signal systems deter vandals and notify personnel that an accident occurred. (Appendix B4)
- Environmental conditions often require freeze or scald protection equipment. (Section 4.5.5)

Top down view

Requires a 16" (406 mm) radius from the center of the drench shower spray pattern to be free of obstructions. (Section 4.1.4) ②

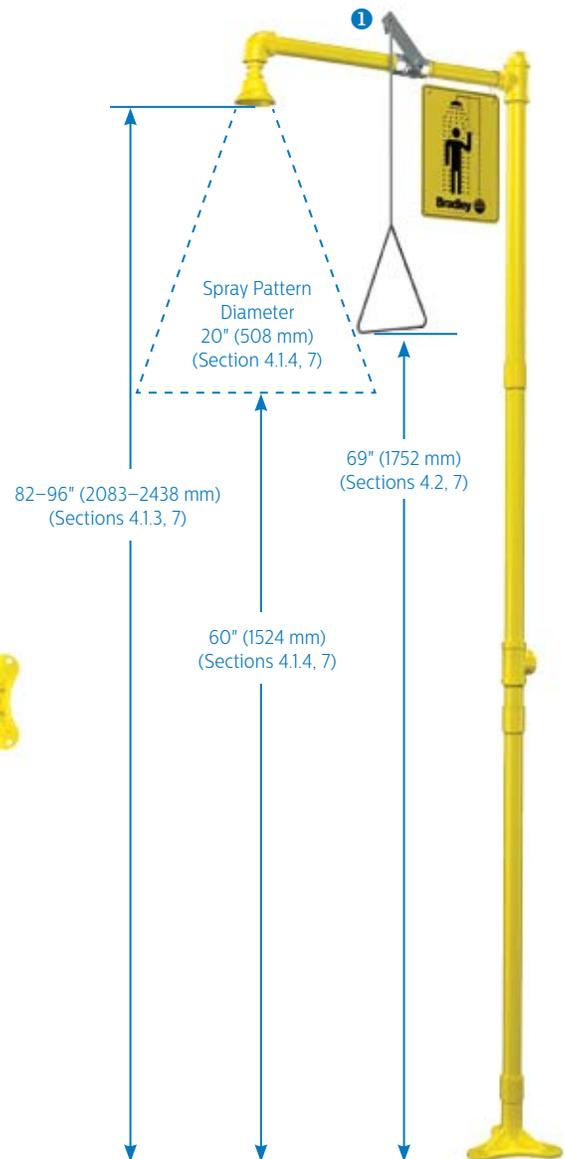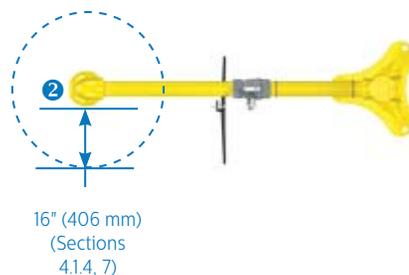

15-minute Flush	Tepid Water	Third-Party Certifications	Weekly Activations:	Annual Inspections
Compliant showers release a continuous flow of at least 20 GPM (76 L/Min) of tepid flushing fluid for a period of at least 15 minutes. (Sections 4.1.2, 4.4.1, 4.5.5, 4.5.6)	(lukewarm) 60–100°F (15.6–37.8°C) encourages full 15 minute flush or until medical personnel arrive. (Definitions, Sections 4.5.6, Appendix B6)	Manufacturers may have their safety fixtures independently evaluated by a third-party testing organization. Look for certification when selecting a compliant fixture. (Definitions)	Flush lines and test by activating weekly. Inspection tags are often included with fixtures to document testing and to satisfy a safety audit. (Section 4.6.2)	ANSI recommends a comprehensive annual inspection of the facility to evaluate modified work space, assess new hazards introduced into the area, and to identify fixtures needing replacement or repair. (Section 4.6.5)

FREE Confidential Safety Evaluation • 800.BRADLEY • bradleysafety.com

Freestanding Drench Showers

S19-110

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic showerhead

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1



S19-110

S19-110SS

Same features as S19-110, except is an all stainless steel fixture

Bradley's stainless steel emergency fixtures in 304 stainless recommended for harsh environments

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1



S19-110SS

S19-110SSZ

Same features as S19-110SS except with BSPP thread

Certified to AS4775 and AS4020

Barrier-Free, Freestanding Drench Showers

S19-110BF



Barrier-free design – fully accessible to people with physical disabilities

BradTect corrosion-resistant yellow coating

Plastic showerhead

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1



S19-110BF

S19-110BFSS



Same features as S19-110BF, except is an all stainless steel fixture

Bradley's stainless steel emergency fixtures in 304 stainless recommended for harsh environments

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1

S19-110BFSSZ



Same features as S19-110BFSS except with BSPP thread

Certified to AS4775 and AS4020

Please see Table of Contents for a complete listing of Bradley's barrier-free emergency products.

S19-120 and S19-130 series

Overview

A drench shower is required anywhere a MSDS sheet indicates that a full body flush may be required or where exposure to hazardous material is likely. Bradley's drench showers provide a complete full body deluge of water, to ensure that contaminants are rinsed from the body as rapidly and efficiently as possible. With water resources at a premium, Bradley's patented design features an integral 22 GPM (83 L/Min) flow restrictor that works in tandem with the showerhead flow pattern to ensure that the most effective ANSI 15-minute flush is achieved. Maximize your precious water resources by choosing Bradley.

Key Features

- SpinTec showerhead improves water distribution
- Stainless steel pull rod with triangular handle
- Stay-open ball valve
- BradTect coated galvanized steel pipe
- Horizontal/vertical: 1" (25 mm) water supply
- Freestanding: 1¼" (32 mm) water supply
- ANSI/ISEA Z358.1 certified models available
- European EN 15154-1 certified models available
- AS/NZS4775:2007 & AS4020 certified models available
- DVGW certified models available
- One-year warranty

Emergency Fixture Facts

Bradley equips all ANSI-compliant emergency fixtures with a valve that will stay open until manually closed, allowing the user free use of their hands during an emergency. ANSI/ISEA Z358.1 Section 4.2

Suggested Accessories

Freeze and Scald Protection Valves	page 54
Standard and Explosion-Proof Signaling Systems	page 55–57
Drench Hose Spray Kits	page 83

Other parts and accessories are listed beginning on page 83



Recommended Emergency TMV

Navigator EFX 25 (S19-2100)

The current ANSI standard calls for emergency eyewashes and drench showers to deliver tepid water (60–100°F/15.5–37.7°C) for 15 minutes. A thermostatic mixing valve is needed to mix the hot and cold water supply. Bradley's Navigator TMVs are the most reliable emergency TMVs on the market. One valve is required per plumbed unit.



Horizontal Drench Showers

S19-120

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Impact-resistant plastic showerhead

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1



S19-120

S19-120A

Same features as S19-120, except with stainless steel shroud

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1



S19-120A

S19-120SS

Same features as S19-120, except is an all stainless steel fixture

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1



S19-120SS

S19-120SSZ

Same features as S19-120SS except with BSPP thread

Certified to AS4775 and AS4020

Cord-Operated Horizontal Drench Showers

S19-120G

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Impact-resistant plastic showerhead

Includes self-closing ball valve

Does not comply with ANSI/ISEA Z358.1



S19-120G

Frost Proof Horizontal Drench Showers

S19-120HFP



Galvanized steel protected with BradTect corrosion-resistant yellow coating

Impact-resistant plastic showerhead

Available in three wall thicknesses:

S19-120HFP8 0–8" (0–203 mm)

S19-120HFP12 8–12" (203–305 mm) – standard

S19-120HFP18 12–18" (305–457 mm)

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1



S19-120HFP

Horizontal Drench Shower with Hose Spray

S19-120P

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Impact-resistant plastic showerhead

Includes 8' (2.4 m) drench hose for body rinse

Easily wall mounted

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1



S19-120P

Chrome-Plated Brass Horizontal Drench Shower

S19-120T

Chrome-plated, brass pipe and fittings for bright, mirror finish

Impact-resistant stainless steel shroud

Easily wall mounted

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1



S19-120T

Flush-Mounted Horizontal Drench Shower

S19-120FM

Integral flange mounts flush with ceiling

Concealed pipe and fittings

Galvanized steel protected with BradTect corrosion-resistant yellow coating

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1



Barrier-Free, Flush-Mounted Horizontal Drench Shower

S19-120FMBF



Integral flange mounts flush with ceiling

Concealed pipe and fittings

Galvanized steel protected with BradTect corrosion-resistant yellow coating

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1

Barrier-Free Horizontal Drench Showers

S19-120BF



Galvanized steel protected with BradTect corrosion-resistant yellow coating

Impact-resistant plastic showerhead

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1



S19-120ABF



Same features as S19-120BF, except with stainless steel shroud

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1



S19-120SSBF



Same features as S19-120BF, except is an all stainless steel fixture

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1

S19-120SSBFZ



Same features as S19-120SSBF except with BSPP thread

Certified to AS4775 and AS4020

Vertical Drench Showers

S19-130

Impact-resistant plastic showerhead

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1



S19-130A

Same features as S19-130, except with stainless steel shroud

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1



S19-130SS

Same features as S19-130, except is an all stainless steel fixture

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1



S19-130SSZ

Same features as S19-130SS, except with BSPP thread

Certified to AS4775 and AS4020

Vertical Drench Showers

Cord-Operated Vertical Drench Showers

S19-130F

Impact-resistant plastic showerhead

Includes self-closing ball valve

Self-closing valve does not comply with ANSI/ISEA Z358.1



Flow Controls

In the interest of water conservation, each shower head features an integral 20 GPM (76 L/Min) flow control. This item must be purchased separately for most competing brands.



Barrier-Free Vertical Drench Showers

S19-130BF



Impact-resistant plastic showerhead


UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1



Frost Proof

Bradley features frost-proof emergency fixtures for when an adjacent outside wall of a heated building is available. They can also be free standing with a buried supply pipe. See your local plumbing codes for code compliance.

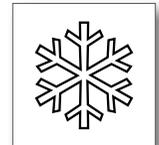

S19-130ABF



Same features as S19-130BF, except with stainless steel showerhead

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1

S19-130SSBF



Same features as S19-130ABF, except is an all stainless steel fixture

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1

S19-130SSBFZ



Same features as S19-130SSBF except with BSPP thread

Certified to AS4775 and AS4020

Barrier Free

Halo models are barrier-free. This provides ease of use for individuals with disabilities.





S19214 Series

Overview

Safety and maintenance personnel often select pedestal-mounted eyewashes where a wall-mounted fixture is not practical due to site conditions. As a leading manufacturer of emergency fixtures, Bradley provides a variety of eyewash solutions; barrier-free, frost-proof or stainless steel fixtures with a variety of different spray patterns. Committed to providing a strong value proposition, Bradley also offers complimentary safety inspections to facilities, providing expert advice about emergency fixture solutions.

Key Features

- Halo eyewashes and eye/face washes provide the most washdown coverage available
- Exceed ANSI-mandated flow rates
- Universal activation
- BradTect coated galvanized steel pipe
- ½" (13 mm) water supply, 1¼" (32 mm) waste
- All pedestal-mounted units with Halo meet barrier-free requirements
- One-year warranty
- ANSI/ISEA Z358.1 certified models available
- European EN 15154-2 certified models available
- AS/NZS4775:2007 & AS4020 certified models available
- DVGW certified models available

Emergency Fixture Facts

The emergency fixture must provide a continuous flow of flushing fluid. ANSI/ISEA Z358.1 Section 5.4.5, 6.4.5

Suggested Accessories

Freeze and Scald Protection Valves	page 54
Standard and Explosion-Proof Signaling Systems	page 55–57
Drench Hose Spray Kits	page 83
Retrofit Dust Cover Kits	page 85, 89
Foot Treadle Kits	page 94

Other parts and accessories are listed beginning on page 83

Recommended Emergency TMV

Navigator EFX 8 (S19-2000)

The current ANSI standard calls for emergency eyewashes and drench showers to deliver tepid water (60–100°F/15.5–37.7°C) for 15 minutes. A thermostatic mixing valve is needed to mix the hot and cold water supply. Bradley's Navigator TMVs are the most reliable emergency TMVs on the market. One valve is required per plumbed unit.



Don't see the product you are looking for? Go to page 22 to use the S19214 Configurator


Quick Compliance Guide

This guide serves as a supplement to the ANSI/ISEA Z358.1-2014 standard.



Eye and Eye/Face Wash Fixtures


- Valve mechanism opens in one second or less; it stays open until manually closed. (Sections 5.2, 6.2) **1**
- Supply with flushing fluid, ("potable water, preserved water, preserved buffered saline solution or other medically acceptable solution...") Definitions, Sections 5.1.1, 6.1.1)
- Locate 10 seconds or 55' (16.8 m) from contaminants or hazardous materials. Locate on the same plane as hazard and free of obstructions. (Sections 5.4.2, 6.4.2, Appendix B5)
- Must resist corrosion in the presence of flushing fluid. (Sections 5.1.5, 6.1.5) **2**
- Protect eye and eye/face wash heads from contaminants. (Sections 5.1.3, 6.1.3)
- Flow Rates: **Eyewash** unit delivers a minimum of .4 GPM (1.5 L/Min) for 15 minutes. (Section 5.1.6) **Eye/face wash** unit delivers a minimum of 3.0 GPM (11 L/Min) for 15 minutes. (Section 6.1.6)
- Use a flow meter to test flow rate; use a test gauge to test flow pattern. (Sections 5.1.8, 5.3.1, 6.1.7, 6.1.8, 6.3, 6.3.1)
- Audible, visual and central control signal systems deter vandalism and alert safety personnel. (Appendix B4)
- Environmental conditions often require freeze or scald protection equipment. (Sections 5.4.5, 6.4.5)

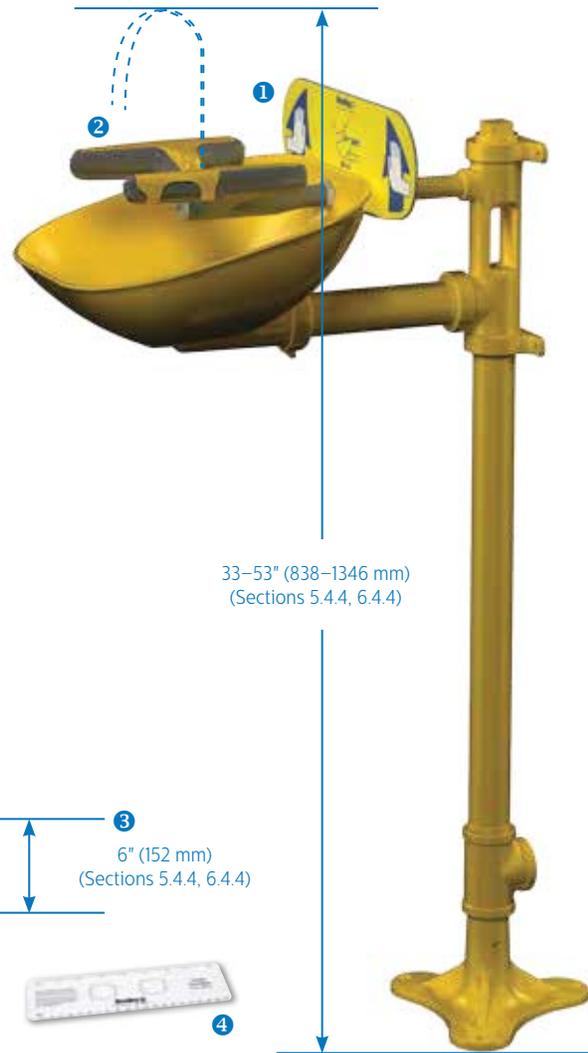

Top down view

Required to be free of obstructions a minimum of 6" (152 mm) from the outside of the eye or eye/face wash sprayheads. (Sections 5.4.4, 6.4.4) **3**

Use a Bradley test gauge (Model 269-1444) to check flow pattern. **4**

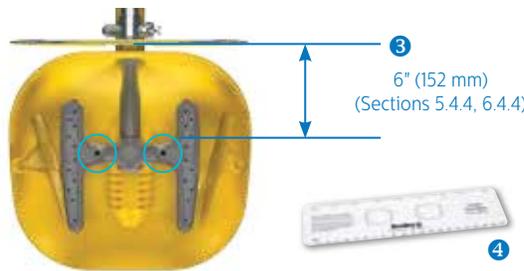

15-minute Flush	Tepid Water	Third-Party Certifications	Weekly Activations:	Annual Inspections
Compliant fixtures release a continuous flow of tepid flushing fluid for a minimum of 15 minutes. (Sections 5.1.6, 5.4.5, 5.4.6, 6.1.6, 6.4.5, 6.4.6)	(lukewarm) 60–100°F (15.6–37.8°C) encourages full 15 minute flush or until medical personnel arrive. (Definitions, Sections 5.4.6, 6.4.6, Appendix B6)	Manufacturers may have their safety fixtures independently evaluated by a third-party testing organization. Look for certification when selecting a compliant fixture. (Definitions)	Flush lines and test by activating weekly. Inspection tags are often included with fixtures to document testing and to satisfy a safety audit. (Sections 5.5.2, 6.5.2)	ANSI recommends a comprehensive annual inspection of the facility to evaluate modified work space, assess new hazards introduced into the area, and to identify fixtures needing replacement or repair. (Sections 5.5.2, 5.5.5, 6.5.2, 6.5.5)

FREE Confidential Safety Evaluation • 800.BRADLEY • bradleysafety.com

Pedestal-Mounted Eyewashes

S19214EW

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic bowl

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2



S19214EW

S19214BZS

All stainless steel piping

Stainless steel bowl

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19214BZS

S19214EWZ

Same features as S19214EW except with BSPP thread

Listed by Intertek to EN 15154-2

S19214EWZS

All stainless steel piping

Plastic bowl

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19214EWZS

Pedestal-Mounted Eyewashes with Hinged Dust Cover

S19214PDC

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic bowl and dust cover

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2



S19214PDC

S19214PDCZ

Same features as S19214PDC except with BSPP thread

Listed by Intertek to EN 15154-2



S19214B

S19214B

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Stainless steel bowl

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2

S19214PDCZS

All stainless steel piping

Plastic bowl and dust cover

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19214PDCZS

S19214BZ

Same features as S19214B except with BSPP thread

Listed by Intertek to EN 15154-2

Pedestal-Mounted Eyewashes and Eye/Face Washes

S19214DC

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Stainless steel bowl and dust cover

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2



S19214DC

S19214FWZS

All stainless steel piping

Plastic bowl

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19214FWZS

S19214DCZ

Same features as S19214DC except with BSPP thread

Listed by Intertek to EN 15154-2

S19214DCZS

All stainless steel piping

Stainless steel bowl and dust cover

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19214DCZS

S19214Y

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Stainless steel bowl

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2



S19214Y

S19214YZ

Same features as S19214Y except with BSPP thread

Listed by Intertek to EN 15154-2

S19214YZS

All stainless steel piping

Stainless steel bowl

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19214YZS

Pedestal-Mounted Eye/Face Washes

S19214FW

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic bowl

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2



S19214FW

S19214FWZ

Same features as S19214FW except with BSPP thread

Listed by Intertek to EN 15154-2

S19214YF

Hand or foot operation

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Stainless steel bowl

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2



S19214YF

S19214YFZ

Same features as S19214YF except with BSPP thread

Listed by Intertek to EN 15154-2

S19214YFZS

Hand or foot operation

All stainless steel piping

Stainless steel bowl

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19214YFZS

Pedestal-Mounted Eye/Face Wash with Hose Spray

S19214P

8' (2.4 m) hand-held drench hose attachment for body rinse

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Stainless steel bowl

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2



S19214P

S19214PZ

Same features as S19214P except with BSPP thread

Listed by Intertek to EN 15154-2

AS4775 & AS4020 DVGW certified

Pedestal-Mounted Eyewashes with Hinged Dust Cover

S19214PDCFW

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic bowl and dust cover

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2



S19214PDCFW

S19214PDCFWZ

Same features as S19214PDCFW except with BSPP thread

Listed by Intertek to EN 15154-2

S19214PDCFWZS

All stainless steel piping

Plastic bowl and dust cover

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19214PDCFWZS

S19214DCFW

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Stainless steel bowl and dust cover

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2



S19214DCFW

S19214DCFWZ

Same features as S19214DCFW except with BSPP thread

Listed by Intertek to EN 15154-2

Pedestal-Mounted Eyewashes and Eye/Face Washes

S19214DCFWZS

- All stainless steel piping
- Stainless steel bowl and dust cover
- BSPP thread
- Certified to AS4775 and AS4020
- DVGW certified



S19214DCFWZS

S19214SCZ

- Same features as S19214SC except with BSPP thread
- Listed by Intertek to EN 15154-2
- DVGW certified

S19214SS

- All stainless steel fixture
- Hand or foot operation
- UL classified to meet ANSI/ISEA Z358.1
- Listed by Intertek to EN 15154-2



S19214SS

S19214SSZ

- Same features as S19214SS except with BSPP thread
- Listed by Intertek to EN 15154-2
- DVGW certified

All Stainless Steel Pedestal-Mounted Eye/Face Washes

S19214BSS

- All stainless steel fixture
- UL classified to meet ANSI/ISEA Z358.1
- Listed by Intertek to EN 15154-2



S19214BSS

S19214BSSZ

- Same features as S19214BSS except with BSPP thread
- Listed by Intertek to EN 15154-2
- Certified to AS4775 and AS4020
- DVGW certified

S19214SC

- All stainless steel fixture
- Hinged dust cover
- UL classified to meet ANSI/ISEA Z358.1
- Listed by Intertek to EN 15154-2



S19214SC



Eyewashes

When the safety risk targets the eye area, Bradley's eyewashes are the recommended solution for emergency care. The eyewash sprayheads flow at approximately 5.1 GPM (19 L/Min), exceeding ANSI's 0.4 GPM (1.5 L/Min) flow rate. The flow gently flushes water directly on the eye to wash out contaminants.



Eye/Face Washes

When chemicals and other hazardous liquids can contaminate the face and eyes, an eye/face wash is the solution. Bradley's eye/face wash heads feature integral flow controls that provide a soft flush of approximately 5.1 GPM (19 L/Min). Eye/face washes are considered premium fixtures that exceed ANSI's 3.0 GPM (11 L/Min) mandate.



Dust Covers

The most effective way to keep the unit clean and functioning properly is to have a dust cover over the eye or eye/face wash. See-through plastic dust covers provide effective dust protection, but also allow for easy inspection. These covers automatically open when the eye or eye/face wash is activated. Dust covers are available as standard equipment on many eye and eye/face washes, or can be ordered as a retrofit kit.



Foot Treadle

Foot treadles provide hands-free activation for eye and eye/face washes. Foot treadles are available as standard equipment on some eye and eye/face washes, or can be ordered as a retrofit kit.

S19214 Series Configurator

Don't see a model that meets your application? Use the selections below to build one to suit your needs. Select one option from each category. Fill in the squares below with the corresponding option letter or number. Use the resulting alphanumeric number to specify the model and configuration for your desired product.

1 Configuration



- B** 24 in (61 cm) Drain Height
- O** Standard, 6 in (15.2 cm) Drain Height

2 Pipe Material



- A** NPT †, Yellow BradTect Galvanized Steel, 1.25 in (32 mm)
- B** NPT †, All 304 Stainless Steel, 1.25 in (32 mm)
- C** NPT †, All 316 Stainless Steel,* 1.25 in (32 mm)
- D** NPT †, Chrome-Plated, 1.25 in (32 mm)
- F** BSPP †, Yellow BradTect Galvanized Steel, 1.25 in (32 mm)
- G** BSPP †, All 304 Stainless Steel, 1.25 in (32 mm)
- J** BSPP †, Chrome-Plated, 1.25 in (32 mm)

3 Ball Valve



- 1** Stay-Open Eyewash, Chrome-Plated Brass
- 2** Stay-Open Eyewash, 316 SS

4 Eyewash or Eye/Face Wash



- A** Halo Eyewash
- B** Halo Eye/Face Wash
- D** Halo Eyewash, 304 SS Yoke
- E** Halo Eye/Face Wash, 304 SS Yoke
- F** Halo 304 Stainless Eye/Face Wash, 304 SS Yoke
- G** Halo Eyewash, 316 SS Yoke
- H** Halo Eye/Face Wash, 316 SS Yoke
- J** Halo 316 Stainless Eye/Face Wash, 316 SS Yoke

5 Bowl and Dust Cover



- A** Plastic Bowl, No Dust Cover
- B** Plastic Bowl, Plastic Dust Cover
- D** 304 SS, No Dust Cover
- E** 304 SS, 304 SS Dust Cover
- F** 304 SS, Plastic Dust Cover
- G** 316 SS, No Dust Cover
- H** 316 SS, 316 SS Dust Cover
- J** 316 SS, Plastic Dust Cover
- O** No Bowl or Dust Cover

6 Activation



- A** 300 SS Handle
- B** 316 SS Handle
- C** 300 SS Handle with 300 SS Foot Pedal *
- D** 300 SS Handle with 316 SS Foot Pedal *
- E** 316 SS Handle with 316 SS Foot Pedal *

7 Drench Hose and Backflow Prevention



- A** Drench Hose Kit with Vacuum Breaker
- B** Drench Hose Kit with N9 Backflow Preventer
- C** Drench Hose Kit with 9D Backflow Preventer
- D** Drench Hose Kit without Backflow Preventer
- O** No Drench Hose and No Backflow Prevention

8 Freeze and Scald Protection



- N** Anti-Freeze Valve
- P** Anti-Scald Valve
- R** Anti-Freeze and Anti-Scald Valves
- O** No Anti-Freeze Valve and No Anti-Scald Valve

- ▶ NPT (National Pipe Thread).
- ◊ BSPP (British Standard Pipe Parallel Threads)
- * Not available with barrier-free configurations.

Fill in 1 through 8 to specify the Halo model and configuration for your desired project:

	1	2	3	4	5	6	7	8
S	1	9	2	1	4			



S19224 series

Overview

Wall-mounted emergency units are classic fixtures that originated from safety's early days. The classic fixture evolved from a basic eyewash model with little to no options, to the fixtures of today with standard high visibility, yellow corrosion-resistant coating, plastic and stainless steel dust covers, various flow rates and flow patterns to flush the most elusive contaminants from the face. Wall-mounted fixtures are among the most compact, versatile safety solutions on the market. They can be found in industrial facilities, airports, auto repair shops, food processing environments and paper mills to name a few.

Key Features

- Halo eyewashes and eye/face washes provide the most washdown coverage available
- Dust cover protects fixture from dust and debris
- Fixtures exceed ANSI-mandated flow rates
- Single-step activation
- BradTect corrosion-resistant yellow coating
- Wall-mounted units with Halo meet barrier-free requirements
- ANSI/ISEA Z358.1 certified models available
- European EN 15154-2 certified models available
- AS/NZS4775:2007 & AS4020 certified models available
- DVGW certified models available
- One-year warranty

Emergency Fixture Facts

An ANSI-compliant eyewash provides 15-minutes of flushing fluid. ANSI/ISEA Z358.1 Section 5.1.6, 6.1.6

Suggested Accessories

Freeze and Scald Protection Valves	page 54
Standard and Explosion-Proof Signaling Systems	page 55–57
Drench Hose Spray Kits	page 83
Retrofit Dust Cover Kits	page 85, 89
Foot Treadle Kits	page 94

Other parts and accessories are listed beginning on page 83

Recommended Emergency TMV

Navigator EFX 8 (S19-2000)

The current ANSI standard calls for emergency eyewashes and drench showers to deliver tepid water (60–100°F/15.5–37.7°C) for 15 minutes. A thermostatic mixing valve is needed to mix the hot and cold water supply. Bradley's Navigator TMVs are the most reliable emergency TMVs on the market. One valve is required per plumbed unit.



Don't see the product you are looking for? Go to page 31 to use the S19224 Configurator

Wall-Mounted Eyewashes and Eye/Face Washes

Wall-Mounted Eyewashes

S19224EW

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic bowl

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2



S19224EW

S19224BZS

All stainless steel piping

Stainless steel bowl

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19224BZS

S19224EWZ

Same features as S19224EW except with BSPP thread

Listed by Intertek to EN 15154-2

S19224EWZS

All stainless steel piping

Plastic bowl

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19224EWZS

S19224PT

Tailpiece and P-trap

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic bowl

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2



S19224PT

S19224PTZ

Same features as S19224PT except with BSPP thread

Listed by Intertek to EN 15154-2

S19224B

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Stainless steel bowl

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2



S19224B

S19224PTZS

Tailpiece and P-trap

All stainless steel piping

Plastic bowl

BSPP thread

DVGW certified



S19224PTZS

S19224BZ

Same features as S19224B except with BSPP thread

Listed by Intertek to EN 15154-2

S19224BPT

Tailpiece and P-trap

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Stainless steel bowl

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2



S19224BPT

S19224BPTZ

Same features as S19224BPT except with BSPP thread

Listed by Intertek to EN 15154-2

S19224BPTZS

Tailpiece and P-trap

All stainless steel piping

Stainless steel bowl

BSPP thread

DVGW certified



S19224BPTZS

Wall-Mounted Eyewashes with Hinged Dust Cover

S19224PDC

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic bowl and dust cover

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2



S19224PDC

S19224PDCZ

Same features as S19224PDC except with BSPP thread

Listed by Intertek to EN 15154-2

S19224PDCZS

All stainless steel piping

Plastic bowl and dust cover

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19224PDCZS

S19224DC

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Stainless steel bowl and dust cover

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2



S19224DC

S19224DCZ

Same features as S19224DC except with BSPP thread

Listed by Intertek to EN 15154-2

S19224DCZS

All stainless steel piping

Stainless steel bowl and dust cover

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19224DCZS

Wall-Mounted Eyewashes and Eye/Face Washes

S19224DCPT

Tailpiece and P-trap

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Stainless steel bowl and dust cover

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2



S19224DCPT

S19224FWZS

All stainless steel piping

Plastic bowl

BSPB thread

Certified to AS4775 and AS4020

DVGW certified



S19224FWZS

S19224DCPTZ

Same features as S19224DCPT except with BSPB thread

Listed by Intertek to EN 15154-2

S19224FWPT

Tailpiece and P-trap

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic bowl

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2



S19224FWPT

S19224DCPTZS

Tailpiece and P-trap

All stainless steel piping

Stainless steel bowl and dust cover

BSPB thread

DVGW certified



S19224DCPTZS

S19224FWPTZ

Same features as S19224FWPT except with BSPB thread

Listed by Intertek to EN 15154-2

S19224FWPTZS

Tailpiece and P-trap

All stainless steel piping

Plastic bowl

BSPB thread

DVGW certified



S19224FWPTZS

Wall-Mounted Eye/Face washes

S19224FW

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic bowl

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2



S19224FW

S19224FWZ

Same features as S19224FW except with BSPB thread

Listed by Intertek to EN 15154-2

S19224T

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Stainless steel bowl

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2



S19224T

S19224TZ

Same features as S19224T except with BSPP thread

Listed by Intertek to EN 15154-2

S19224TZS

All stainless steel piping

Stainless steel bowl

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19224TZS

S19224TPTZ

Same features as S19224TPT except with BSPP thread

Listed by Intertek to EN 15154-2

S19224TPTZS

Tailpiece and P-trap

All stainless steel piping

Stainless steel bowl

BSPP thread

DVGW certified



S19224TPTZS

S19224P

8' (2.4 m) hand-held drench hose for body rinse

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Stainless steel bowl

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2



S19224P

S19224Y

Hand or foot operation

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Stainless steel bowl

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2

Unit is not Barrier-Free



S19224Y

S19224PZ

Same features as S19224P except with BSPP thread

Listed by Intertek to EN 15154-2

S19224TPT

Tailpiece and P-trap

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Stainless steel bowl

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2



S19224TPT

S19224YZ

Same features as S19224Y except with BSPP thread

Listed by Intertek to EN 15154-2

Unit is not Barrier-Free

Wall-Mounted Eyewashes and Eye/Face Washes

S19224YZS

- Hand or foot operation
- All stainless steel piping
- Stainless steel bowl
- BSPP thread
- Certified to AS4775 and AS4020
- DVGW certified
- Unit is not Barrier-Free



S19224DCFW

- Galvanized steel protected with BradTect corrosion-resistant yellow coating
- Stainless steel bowl and dust cover
- UL classified to meet ANSI/ISEA Z358.1
- Listed by Intertek to EN 15154-2



S19224DCFWZ

- Same features as S19224DCFW except with BSPP thread
- Listed by Intertek to EN 15154-2

Wall-Mounted Eye/face Washes with Hinged Dust Cover

S19224PDCFW

- Galvanized steel protected with BradTect corrosion-resistant yellow coating
- Plastic bowl and dust cover
- UL classified to meet ANSI/ISEA Z358.1
- Listed by Intertek to EN 15154-2



S19224DCFWZS

- All stainless steel piping
- Stainless steel bowl and dust cover
- BSPP thread
- Certified to AS4775 and AS4020
- DVGW certified



S19224PDCFWZ

- Same features as S19224PDCFW except with BSPP thread
- Listed by Intertek to EN 15154-2

S19224PDCFWZS

- All stainless steel piping
- Plastic bowl and dust cover
- BSPP thread
- Certified to AS4775 and AS4020
- DVGW certified



S19224DCRPT

- Tailpiece and P-trap
- Galvanized steel protected with BradTect corrosion-resistant yellow coating
- Stainless steel bowl and dust cover
- UL classified to meet ANSI/ISEA Z358.1
- Listed by Intertek to EN 15154-2



S19224DCRPTZ

- Same features as S19224DCRPT except with BSPP thread
- Listed by Intertek to EN 15154-2

S19224DCRPTZS

Tailpiece and P-trap

All stainless steel piping

Stainless steel bowl and dust cover

BSPP thread

DVGW certified



S19224DCRPTZS

All Stainless Steel Eyewashes and Eye/Face Washes

S19224SC

All stainless steel fixture

Hinged dust cover

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2



S19224SC

S19224SCZ

Same features as S19224SC except with BSPP thread

Listed by Intertek to EN 15154-2

Certified to AS4775 and AS4020

DVGW certified

S19224SS

All stainless steel fixture

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-2



S19224SS

S19224SSZ

Same features as S19224SS except with BSPP thread

Listed by Intertek to EN 15154-2

Certified to AS4775 and AS4020

DVGW certified

Barrier-Free, Wall-Mounted Eye/Face Wash with Wrap-Around Skirt

S19-220BF



Stainless steel wrap-around skirt and eyewash bowl

Features chrome-plated circular spray ring for full face spray

UL classified to meet ANSI/ISEA Z358.1



S19-220BF

Frost-Proof, Wall-Mounted Eyewash

S19-220HFP



Galvanized steel protected with BradTect corrosion-resistant yellow coating

Stainless steel bowl

Available in three wall thicknesses:

S19-220HFP8 0-8" (0-203 mm)


S19-220HFP12 8-12" (203-305 mm) – standard

S19-220HFP18 12-18" (305-457 mm)

UL classified to meet ANSI/ISEA Z358.1



S19-220HFP

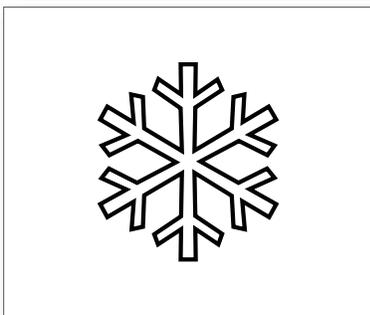

Eye and Eye/Face Wash Bowls

Bradley's eye and eye/face wash bowls come in two different materials – plastic and stainless steel. The high-visibility plastic bowls are intended for general use. The impact-resistant plastic will stand up to regular wear and tear. For the most durable bowl, select stainless steel bowls for rugged environments, where impact and corrosion could be a problem.

Dust Covers

The most effective way to keep the unit clean and functioning properly is to have a dust cover over the eye or eye/face wash. See-through plastic dust covers provide effective dust protection, but also allow for easy inspection. These covers automatically open when the eye or eye/face wash is activated. Dust covers are available as standard equipment on many eye and eye/face washes, or can be ordered as a retrofit kit.

Frost Proof

Bradley features frost-proof emergency fixtures for when an adjacent outside wall of a heated building is available. They can also be free standing with a buried supply pipe. See your local plumbing codes for code compliance.

Barrier Free

Halo models are barrier-free. This provides ease of use for individuals with disabilities.

S19224 Series Configurator

Don't see a model that meets your application? Use the selections below to build one to suit your needs. Select one option from each category. Fill in the squares below with the corresponding option letter or number. Use the resulting alphanumeric number to specify the model and configuration for your desired product.

1 Configuration



- O Standard Wall Mount

2 Pipe Material



- A NPT †, Yellow BradTect Galvanized Steel, 1.25 in (32 mm)
- B NPT †, All 304 Stainless Steel, 1.25 in (32 mm)
- C NPT †, All 316 Stainless Steel,* 1.25 in (32 mm)
- D NPT †, Chrome-Plated, 1.25 in (32 mm)
- F BSPP †, Yellow BradTect Galvanized Steel, 1.25 in (32 mm)
- G BSPP †, All 304 Stainless Steel, 1.25 in (32 mm)
- J BSPP †, Chrome-Plated, 1.25 in (32 mm)

3 Ball Valve



- 1 Stay-Open Eyewash, Chrome-Plated Brass
- 2 Stay-Open Eyewash, 316 SS

4 Eyewash or Eye/Face Wash



- A Halo Eyewash
- B Halo Eye/Face Wash
- D Halo Eyewash, 304 SS Yoke
- E Halo Eye/Face Wash, 304 SS Yoke
- F Halo 304 Stainless Eye/Face Wash, 304 SS Yoke
- G Halo Eyewash, 316 SS Yoke
- H Halo Eye/Face Wash, 316 SS Yoke
- J Halo 316 Stainless Eye/Face Wash, 316 SS Yoke

5 Bowl and Dust Cover



- A Plastic Bowl, No Dust Cover
- B Plastic Bowl, Plastic Dust Cover
- D 304 SS, No Dust Cover
- E 304 SS, 304 SS Dust Cover
- F 304 SS, Plastic Dust Cover
- G 316 SS, No Dust Cover
- H 316 SS, 316 SS Dust Cover
- J 316 SS, Plastic Dust Cover
- O No Bowl or Dust Cover

6 Activation



- A 300 SS Handle
- B 316 SS Handle
- D 300 SS Handle with 300 SS Foot Pedal *

7 Waste



- A Tailpiece
- D P-trap
- O No Waste

8 Drench Hose and Backflow Prevention



- A Drench Hose Kit with Vacuum Breaker
- B Drench Hose Kit with N9 Backflow Preventer
- C Drench Hose Kit with 9D Backflow Preventer
- D Drench Hose Kit without Backflow Preventer
- O No Drench Hose and No Backflow Prevention

9 Freeze and Scald Protection



- N Anti-Freeze Valve
- P Anti-Scald Valve
- R Anti-Freeze and Anti-Scald Valves
- O No Anti-Freeze Valve and No Anti-Scald Valve

‡ NPT (National Pipe Thread).
 † BSPP (British Standard Pipe Parallel Threads)
 * Not available with barrier-free configurations.

Fill in 1 through 9 to specify the Halo model and configuration for your desired project:

	1	2	3	4	5	6	7	8
S	1	9	2	2	4			

S19314 Series

Overview

Bradley's S19314 Series is the most complete safety fixture on the market. The drench shower provides full-body relief from contamination, and the eye or eye/face wash targets those areas of the body where a gentle spray of water is optimal.

Key Features

- Halo eyewashes and eye/face washes provide the most washdown coverage available
- SpinTec showerhead improves water distribution
- Stay-open ball valve with single-step activation
- Triangular stainless steel pull rod
- BradTect corrosion-resistant yellow coating (except on stainless steel, PVC and chrome models)
- Frost-proof and barrier-free models available
- Universal ID sign
- Top- or mid-level supply standard on all drench showers and combination units
- Integrated eye or eye/face wash with capped eyewash heads
- One-year warranty
- 1¼" (32 mm) NPT inlet
- Single-step eye or eye/face wash activation
- Single-step drench shower activation
- ANSI/ISEA Z358.1 certified models available
- European EN 15154-1 and EN 15154-2 certified models available
- AS/NZS4775:2007 & AS4020 certified models available
- DVGW certified models available

Emergency Fixture Facts

Locate safety fixtures 10 seconds or 55' (16.8 m) from a hazardous area. ANSI/ISEA Z358.1 Section 7.4.2, Appendix B5

Suggested Accessories

Freeze and Scald Protection Valves	page 54
Standard and Explosion-Proof Signaling Systems	page 55–57
Drench Hose Spray Kits	page 83
Retrofit Dust Cover Kits	page 85, 89
Foot Treadle Kits	page 94

Other parts and accessories are listed beginning on page 83



Recommended Emergency TMV

Navigator EFX 25 (S19-2100)

The current ANSI standard calls for emergency eyewashes and drench showers to deliver tepid water (60–100°F/ 15.5–37.7°C) for 15 minutes. A thermostatic mixing valve is needed to mix the hot and cold water supply. Bradley's Navigator TMVs are the most reliable emergency TMVs on the market. One valve is required per plumbed unit.



Don't see the product you are looking for? Go to page 45 to use the S19314 Configurator



Quick Compliance Guide

This guide serves as a supplement to the ANSI/ISEA Z358.1-2014 standard.

Combination Drench Shower, Eye and Eye/Face Washes



- Valve mechanism opens in one second or less; it stays open until manually closed. (Sections 4.2, 5.2, 6.2, 7.1.1, 7.1.2, 7.1.3) **1**
- Drench shower and eye or eye/face wash must operate simultaneously. (Section 7.4.4)
- Supply with flushing fluid ("potable water, preserved water, preserved buffered saline solution or other medically acceptable solution..."). (Definitions, Sections 4.1.1, 4.4.1, 5.1.1, 6.1.1, 7.1.2, 7.1.3)
- Locate 10 seconds or 55' (16.8 m) from contaminants or hazardous materials. Locate on same plane as the hazard, free of obstructions. (Sections 4.5.2, 5.4.2, 6.4.2, 7.1.1, 7.1.2, 7.1.3, 7.4.2, Appendix B5) **2**
- Must resist corrosion in the presence of flushing fluid (Sections 4.1.5, 5.1.5, 6.1.5, 7.1.1, 7.1.2, 7.1.3)
- Protect eye and eye/face wash heads from contaminants. (Sections 5.1.3, 6.1.3, 7.1.2, 7.1.3)
- Flow Rates: **Eyewash** unit delivers a minimum of .4 GPM (1.5 L/Min) for 15 minutes. (Section 5.1.6) **Eye/face wash** unit delivers a minimum of 3.0 GPM (11 L/Min) for 15 minutes. (Section 6.1.6)
- Use flow meter to check flow rate; use test gauge to test flow pattern. (Sections 5.1.8, 5.3.1, 6.1.7, 6.3, 7.1.2, 7.1.3)
- Environmental conditions often require freeze or scald protection equipment. (Sections 4.5.5, 5.4.5, 6.4.5, 7.1.1, 7.1.2, 7.1.3)

Top down view

Requires a 16" (406 mm) radius from the center of the drench shower spray pattern to be free of obstructions. (Sections 4.1.4, 7.1.1) **3**

Required to be free of obstructions a minimum of 6" (152 mm) from the outside of the eye or eye/face wash sprayheads. (Sections 5.4.4, 6.4.4, 7.1.2, 7.1.3)

Use a Bradley test gauge (Model 269-1444) to check flow pattern. **4**

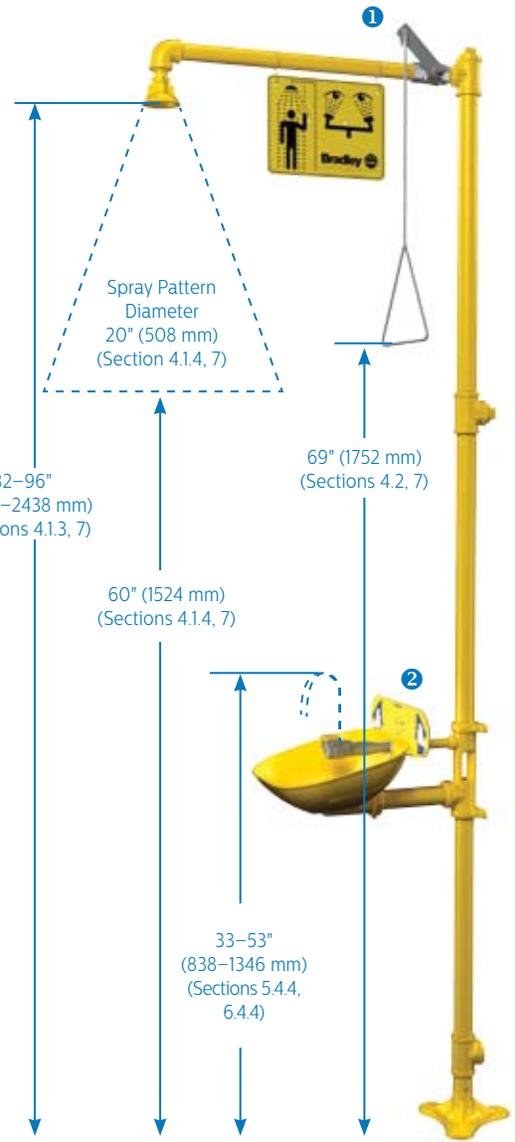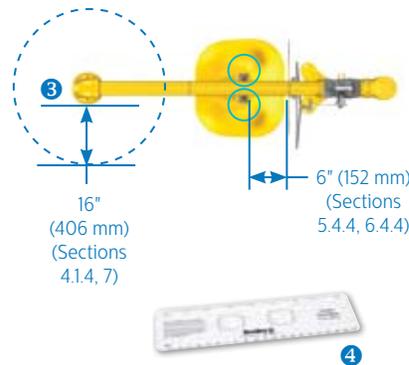

15-minute Flush	Tepid Water	Third-Party Certifications	Weekly Activations:	Annual Inspections
Compliant showers release a continuous flow of at least 20 GPM (76 L/Min) of tepid flushing fluid for a period of at least 15 minutes. (Sections 4.1.4, 4.4.1, 4.5.5, 4.5.6, 7.1.1) Compliant eye or eye/face wash fixture releases a continuous flow of flushing fluid for a minimum of 15 minutes. (Sections 5.1.6, 5.4.5, 5.4.6, 6.1.6, 6.4.5, 6.4.6, 7.1.2, 7.1.3)	(lukewarm) 60–100°F (15.6–37.8°C) encourages full 15-minute flush or until medical personnel arrive. (Definitions, Sections 4.5.6, 5.4.6, 6.4.6, Appendix B6)	Manufacturers may have their safety fixtures independently evaluated by a third-party testing organization. Look for certification when selecting a compliant fixture. (Definitions)	Flush lines and test by activating weekly. Inspection tags are often included with fixtures to document testing and to satisfy a safety audit. (Sections 4.6.2, 5.5.2, 6.5.2, 7.5.2)	ANSI recommends a comprehensive annual inspection of the facility to evaluate modified work space, assess new hazards introduced into the area, and to identify fixtures needing replacement or repair. (Section 7.5.5) (Section 4.6.5)

FREE Confidential Safety Evaluation • 800.BRADLEY • bradleysafety.com

Combination Drench Showers and Eye/Eye Face Washes

Combination Drench Showers and Eyewash Units

S19314EW

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic showerhead and bowl

Eyewash exceeds minimum water flow of 0.4 GPM (1.5 L/Min) at 30 psi (207 kPa)

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1 and 15154-2



S19314EW

S19314PZ

Same features as S19314P except with BSPP thread

Listed by Intertek to EN 15154-1 and 15154-2

S19314SB

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic showerhead and stainless steel bowl

Eyewash exceeds minimum water flow of 0.4 GPM (1.5 L/Min) at 30 psi (207 kPa)

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1 and 15154-2



S19314SB

S19314EWZ

Same features as S19314EW except with BSPP thread

Listed by Intertek to EN 15154-1 and 15154-2

S19314EWZS

All stainless steel piping

Plastic showerhead and bowl

Eyewash exceeds minimum water flow of 0.4 GPM (1.5 L/Min) at 30 psi (207 kPa)

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19314EWZS

S19314SBZ

Same features as S19314SB except with BSPP thread

Listed by Intertek to EN 15154-1 and 15154-2

S19314SBZS

All stainless steel piping

Plastic showerhead and stainless steel bowl

Eyewash exceeds minimum water flow of 0.4 GPM (1.5 L/Min) at 30 psi (207 kPa)

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19314SBZS

S19314P

8' (2.4 m) hand-held drench hose for body rinse

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic showerhead and bowl

Eyewash exceeds minimum water flow of 0.4 GPM (1.5 L/Min) at 30 psi (207 kPa)

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1 and 15154-2



S19314P

S19314LL

Hand or foot operation for eyewash

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic showerhead and stainless steel bowl

Eyewash exceeds minimum water flow of 0.4 GPM (1.5 L/Min) at 30 psi (207 kPa)

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1 and 15154-2



S19314LL

S19314LLZ

Same features as S19314LL except with BSPP thread

Listed by Intertek to EN 15154-1 and 15154-2

S19314LLZS

Hand or foot operation for eyewash

All stainless steel piping

Plastic showerhead and stainless steel bowl

Eyewash exceeds minimum water flow of 0.4 GPM (1.5 L/Min) at 30 psi (207 kPa)

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19314LLZS

S19314F

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic showerhead with stainless steel shroud and stainless steel bowl

Eyewash exceeds minimum water flow of 0.4 GPM (1.5 L/Min) at 30 psi (207 kPa)

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1 and 15154-2



S19314F

S19314FZ

Same features as S19314F except with BSPP thread

Listed by Intertek to EN 15154-1 and 15154-2

S19314FZS

All stainless steel piping

Plastic showerhead with stainless steel shroud and stainless steel bowl

Eyewash exceeds minimum water flow of 0.4 GPM (1.5 L/Min) at 30 psi (207 kPa)

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19314FZS

S19314UU

Hand or foot operation for eyewash

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic showerhead with stainless steel shroud and stainless steel bowl

Eyewash exceeds minimum water flow of 0.4 GPM (1.5 L/Min) at 30 psi (207 kPa)

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1 and 15154-2



S19314UU

S19314UUZ

Same features as S19314UU except with BSPP thread

Listed by Intertek to EN 15154-1 and 15154-2

Combination Drench Showers and Eye/Eye Face Washes

S19314UUZS
Hand or foot operation for eyewash
All stainless steel piping
Plastic showerhead with stainless steel shroud and stainless steel bowl
Eyewash exceeds minimum water flow of 0.4 GPM (1.5 L/Min) at 30 psi (207 kPa)
BSPB thread
Certified to AS4775 and AS4020
DVGW certified



S19314UUZS

S19314DC
Galvanized steel protected with BradTect corrosion-resistant yellow coating
Plastic showerhead and stainless steel bowl and dust cover
Eyewash exceeds minimum water flow of 0.4 GPM (1.5 L/Min) at 30 psi (207 kPa)
UL classified to meet ANSI/ISEA Z358.1
Listed by Intertek to EN 15154-1 and 15154-2



S19314DC

Combination Drench Showers and Eyewash Units with Hinged Dust Covers

S19314PDC
Galvanized steel protected with BradTect corrosion-resistant yellow coating
Plastic showerhead, bowl and dust cover
Eyewash exceeds minimum water flow of 0.4 GPM (1.5 L/Min) at 30 psi (207 kPa)
UL classified to meet ANSI/ISEA Z358.1
Listed by Intertek to EN 15154-1 and 15154-2



S19314PDC

S19314DCZ
Same features as S19314DC except with BSPB thread
Listed by Intertek to EN 15154-1 and 15154-2

S19314DCZS
All stainless steel piping
Plastic showerhead and stainless steel bowl and dust cover
Eyewash exceeds minimum water flow of 0.4 GPM (1.5 L/Min) at 30 psi (207 kPa)
BSPB thread
Certified to AS4775 and AS4020
DVGW certified



S19314DCZS

S19314PDCZ
Same features as S19314PDC except with BSPB thread
Listed by Intertek to EN 15154-1 and 15154-2

S19314PDCZS
All stainless steel piping
Plastic showerhead, bowl and dust cover
Eyewash exceeds minimum water flow of 0.4 GPM (1.5 L/Min) at 30 psi (207 kPa)
BSPB thread
Certified to AS4775 and AS4020
DVGW certified



S19314PDCZS

Combination Drench Showers and Eye/Face Wash Units

S19314FW
Dual eye/face wash
Galvanized steel protected with BradTect corrosion-resistant yellow coating
Plastic showerhead and bowl
Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)
UL classified to meet ANSI/ISEA Z358.1
Listed by Intertek to EN 15154-1 and 15154-2



S19314FW

S19314FWZ

Same features as S19314FW except with BSPP thread

Listed by Intertek to EN 15154-1 and 15154-2

S19314FWZS

Dual eye/face wash

All stainless steel piping

Plastic showerhead and bowl

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19314FWZS

S19314SBFWZS

Dual eye/face wash

All stainless steel piping

Plastic showerhead and stainless steel bowl

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19314SBFWZS

S19314AC

Hand or foot operation for eye/face wash

Dual eye/face wash

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic showerhead and stainless steel bowl

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1 and 15154-2



S19314AC

S19314SBFW

Dual eye/face wash

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic showerhead and stainless steel bowl

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1 and 15154-2



S19314SBFW

S19314ACZ

Same features as S19314AC except with BSPP thread

Listed by Intertek to EN 15154-1 and 15154-2

S19314SBFWZ

Same features as S19314SBFW except with BSPP thread

Listed by Intertek to EN 15154-1 and 15154-2

Combination Drench Showers and Eye/Eye Face Washes

S19314ACZS

Hand or foot operation for eye/face wash

Dual eye/face wash

All stainless steel piping

Plastic showerhead and stainless steel bowl

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

BSPB thread

Certified to AS4775 and AS4020

DVGW certified



S19314ACZS

S19314TTZS

Dual eye/face wash

All stainless steel piping

Plastic showerhead with stainless steel shroud and stainless steel bowl

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

BSPB thread

Certified to AS4775 and AS4020

DVGW certified



S19314TTZS

S19314TT

Dual eye/face wash

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic showerhead with stainless steel shroud and stainless steel bowl

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1 and 15154-2



S19314TT

Combination Drench Showers and Eye/Face Wash Units

S19314SPR

Hand or foot operation for eye/face wash

Dual eye/face wash

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Stainless steel showerhead and bowl

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1 and 15154-2



S19314SPR

S19314TTZ

Same features as S19314TT except with BSPB thread

Listed by Intertek to EN 15154-1 and 15154-2

S19314SPRZ

Same features as S19314SPR except with BSPB thread

Listed by Intertek to EN 15154-1 and 15154-2

S19314SPRZS

Hand or foot operation for eye/face wash

Dual eye/face wash

All stainless steel piping

Stainless steel showerhead and bowl

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

BSPP thread

Certified to AS4775 and AS4020



S19314SPRZS

S19314BFPBZS



Barrier-free design – fully accessible to people with physical disabilities

Dual eye/face wash

All stainless steel piping

Plastic showerhead and bowl

Eyewash exceeds minimum water flow of 0.4 GPM (1.5 L/Min) at 30 psi (207 kPa)

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19314BFPBZS

S19314BFPB



Barrier-free design – fully accessible to people with physical disabilities

Dual eye/face wash

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic showerhead and bowl

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1 and 15154-2



S19314BFPB

S19314BF



Barrier-free design – fully accessible to people with physical disabilities

Dual eye/face wash

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic showerhead and stainless steel bowl

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1 and 15154-2



S19314BF

S19314BFPBZ



Same features as S19314BFPB except with BSPP thread

Listed by Intertek to EN 15154-1 and 15154-2

S19314BFZ



Same features as S19314BF except with BSPP thread

Listed by Intertek to EN 15154-1 and 15154-2

Combination Drench Showers and Eye/Eye Face Washes

S19314BFZS



Barrier-free design – fully accessible to people with physical disabilities

Dual eye/face wash

All stainless steel piping

Plastic showerhead and stainless steel bowl

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19314BFZS

S19314PDCFWS

Dual eye/face wash

All stainless steel piping

Plastic showerhead, bowl and dust cover

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19314PDCFWS

Combination Drench Showers and Eye/Face Wash Units with Hinged Dust Covers

S19314PDCFWS

Dual eye/face wash

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic showerhead, bowl and dust cover

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1 and 15154-2



S19314PDCFWS

S19314DCFWS

Dual eye/face wash

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic showerhead and stainless steel bowl and dust cover

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1 and 15154-2



S19314DCFWS

S19314PDCFWS

Same features as S19314PDCFWS except with BSPP thread

Listed by Intertek to EN 15154-1 and 15154-2

S19314DCFWS

Same features as S19314PDCFWS except with BSPP thread

Listed by Intertek to EN 15154-1 and 15154-2

S19314DCFWS

Dual eye/face wash

All stainless steel piping

Plastic showerhead and stainless steel bowl and dust cover

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19314DCFWS

S19314DCBF



Barrier-free design – fully accessible to people with physical disabilities

Dual eye/face wash

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic showerhead and stainless steel bowl and dust cover

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1 and 15154-2



S19314DCBF

Combination Drench Shower and Eye/Face Wash Units without Eyewash Bowl

S19314GG

Dual eye/face wash

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic showerhead and no bowl

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1 and 15154-2



S19314GG

S19314DCBFZ



Same features as S19314DCBF except with BSPP thread

Listed by Intertek to EN 15154-1 and 15154-2

S19314GGZ

Same features as S19314GG except with BSPP thread

Listed by Intertek to EN 15154-1 and 15154-2

S19314DCBFZS



Barrier-free design – fully accessible to people with physical disabilities

Dual eye/face wash

All stainless steel piping

Plastic showerhead and stainless steel bowl and dust cover

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19314DCBFZS

S19314GGZS

Dual eye/face wash

All stainless steel piping

Plastic showerhead and no bowl

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

BSPP thread

Certified to AS4775 and AS4020

DVGW certified



S19314GGZS

Frost-Proof, Wall-Mounted Combination Drench Shower and EyeWash

S19-310TW 

Through-wall design

Galvanized steel protected with BradTect corrosion-resistant yellow coating

Plastic showerhead and no bowl

Available in three wall thicknesses:
 S19-310TW8 0–8" (0–203 mm)
 S19-310TW12 8–12" (203–305 mm) – standard
 S19-310TW18 12–18" (305–457 mm)

UL classified to meet ANSI/ISEA Z358.1



S19-310TW

S19314FSS

All stainless steel fixture

Bradley's stainless steel emergency fixtures are recommended for harsh environments

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1 & EN 15154-2



S19314FSS

S19314FSSZ

Same features as S19314FSS except with BSPP thread

Listed by Intertek to EN 15154-1 & EN 15154-2

Certified to AS4775 and AS4020

All Stainless Steel Combination Drench Showers and Eyewash or Eye/Face Wash Units

S19314BFSS 

Barrier-free design – fully accessible to people with physical disabilities

All stainless steel fixture

Corrosion-resistant for harsh environments

Bradley's stainless steel emergency fixtures are recommended for harsh environments

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1 & EN 15154-2



S19314BFSS

S19314SC

All stainless steel fixture and dust cover

Bradley's stainless steel emergency fixtures are recommended for harsh environments

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1 & EN 15154-2



S19314SC

S19314BFSSZ 

Same features as S19314BFSS except with BSPP thread

Listed by Intertek to EN 15154-1 & EN 15154-2

Certified to AS4775 and AS4020

S19314SCZ

Same features as S19314SC except with BSPP thread

Listed by Intertek to EN 15154-1 & EN 15154-2

Certified to AS4775 and AS4020

S19314SS

Hand or foot operation for eye/face wash

All stainless steel fixture

Bradley's stainless steel emergency fixtures are recommended for harsh environments

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1 & EN 15154-2



S19314SS

S19-310PVC

Corrosion-resistant schedule 80PVC

Stainless steel valve fittings

Plastic showerhead and bowl

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

UL classified to meet ANSI/ISEA Z358.1



S19-310PVC

S19314SSZ

Same features as S19314SS except with BSPP thread

Listed by Intertek to EN 15154-1 & EN 15154-2

Certified to AS4775 and AS4020

S19314SS16

Fixture is all type 316 corrosion-resistant stainless steel for harsh environments

Bradley's stainless steel emergency fixtures are recommended for harsh environments

Eye/face wash exceeds minimum water flow of 3 GPM (11 L/Min) at 30 psi (207 kPa)

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1 & EN 15154-2



S19314SS16

S19314SS16Z

Same features as S19314SS16 except with BSPP thread

Listed by Intertek to EN 15154-1 & EN 15154-2

Certified to AS4775 and AS4020



Drench Showerheads

Bradley's drench showers are available with either a plastic or stainless steel showerhead. The plastic showerheads are high-visibility yellow and made of impact-resistant material. For the most durable showerhead, select stainless steel which stands up to corrosion and aggressive impact.



Eye and Eye/Face Wash Bowls

Bradley's eye and eye/face wash bowls come in two different materials – plastic and stainless steel. The high-visibility plastic bowls are intended for general use. The impact-resistant plastic will stand up to regular wear and tear. For the most durable bowl, select stainless steel bowls for rugged environments, where impact and corrosion could be a problem.



Dust Covers

The most effective way to keep the unit clean and functioning properly is to have a dust cover over the eye or eye/face wash. See-through plastic dust covers provide effective dust protection, but also allow for easy inspection. These covers automatically open when the eye or eye/face wash is activated. Dust covers are available as standard equipment on many eye and eye/face washes, or can be ordered as a retrofit kit.



Foot Treadle

Foot treadles provide hands-free activation for eye and eye/face washes. Foot treadles are available as standard equipment on some eye and eye/face washes, or can be ordered as a retrofit kit.



Flow Controls

In the interest of water conservation, each shower head features an integral 20 GPM (76 L/Min) flow control. This item must be purchased separately for most competing brands.

S19314 Series Configurator

Don't see a model that meets your application? Use the selections below to build one to suit your needs. Select one option from each category. Fill in the squares below with the corresponding option letter or number. Use the resulting alphanumeric number to specify the model and configuration for your desired product.

1 Configuration



- A** Barrier-Free
- B** 24 in (61 cm) Drain Height
- C** 24 in (61 cm) Drain Height, Barrier-Free
- O** Standard, 6 in (15.2 cm) Drain Height

2 Pipe Material



- A** NPT*, Yellow BradTect Galvanized Steel, 1.25 in (32 mm)
- B** NPT*, All 304 Stainless Steel, 1.25 in (32 mm)
- C** NPT*, All 316 Stainless Steel*, 1.25 in (32 mm)
- D** NPT*, Chrome-Plated, 1.25 in (32 mm)
- F** BSPP^o, Yellow BradTect Galvanized Steel, 1.25 in (32 mm)
- G** BSPP^o, All 304 Stainless Steel, 1.25 in (32 mm)
- J** BSPP^o, Chrome-Plated, 1.25 in (32 mm)

3 Ball Valve



- 1** Stay-Open Shower and Eyewash, Chrome-Plated Brass
- 2** Stay-Open Shower and Eyewash, 316 SS
- 3** Self-Closing Shower and Stay-Open Eyewash, Chrome-Plated Brass**

4 Showerhead



- A** Plastic Showerhead, 3.1 in (7.9 cm) diameter Standard
- B** Plastic Showerhead, 10 in (25.4 cm) diameter Plastic Shroud
- C** Plastic Showerhead, 10.75 in (27.3 cm) diameter Stainless Steel Shroud
- D** 304 SS High Performance Showerhead, 1.5 in (3.8 cm) diameter
- E** 316 SS High Performance Showerhead, 1.5 in (3.8 cm) diameter

5 Eyewash or Eye/Face Wash



- A** Halo Eyewash
- B** Halo Eye/Face Wash
- D** Halo Eyewash, 304 SS Yoke
- E** Halo Eye/Face Wash, 304 SS Yoke
- F** Halo 304 Stainless Eye/Face Wash, 304 SS Yoke
- G** Halo Eyewash, 316 SS Yoke
- H** Halo Eye/Face Wash, 316 SS Yoke
- J** Halo 316 Stainless Eye/Face Wash, 316 SS Yoke

6 Bowl and Dust Cover



- A** Plastic Bowl, No Dust Cover
- B** Plastic Bowl, Plastic Dust Cover
- D** 304 SS, No Dust Cover
- E** 304 SS, 304 SS Dust Cover
- F** 304 SS, Plastic Dust Cover
- G** 316 SS, No Dust Cover
- H** 316 SS, 316 SS Dust Cover
- J** 316 SS, Plastic Dust Cover
- O** No Bowl or Dust Cover

▶ NPT (National Pipe Thread).

◊ BSPP (British Standard Pipe Parallel Threads)

* Not available with barrier-free configurations.

** Self-closing valves are not ANSI/ISEA Z358.1 compliant.

7 Activation



- A** 300 SS Handle
- B** 316 SS Handle
- C** 300 SS Handle with 300 SS Foot Pedal *
- D** 300 SS Handle with 316 SS Foot Pedal *
- E** 316 SS Handle with 316 SS Foot Pedal *

8 Drench Hose and Backflow Prevention



- A** Drench Hose Kit with Vacuum Breaker
- B** Drench Hose Kit with N9 Backflow Preventer
- C** Drench Hose Kit with 9D Backflow Preventer
- D** Drench Hose Kit without Backflow Preventer
- O** No Drench Hose and No Backflow Prevention

9 Freeze and Scald Protection



- N** Anti-Freeze Valve
- P** Anti-Scald Valve
- R** Anti-Freeze and Anti-Scald Valves
- O** No Anti-Freeze Valve and No Anti-Scald Valve

Fill in 1 through 9 to specify the Halo model and configuration for your desired project:

	1	2	3	4	5	6	7	8	9
S	1	9	3	1	4				

S19-300 Series

Overview

The heat trace combination unit is a custom emergency fixture selected by safety personnel searching for a combination drench shower and eye or eye/face wash that will not freeze when installed in a frigid environment, indoors or outdoors (-50°F/-45.5°C). The high-visibility fixture is insulated and covered by a yellow PVC shell, it features an integral freeze protection bleed valve, and is electrically rated as a Class I Division I or a Class I Division II explosion-proof fixture. Bradley's standard heat trace is equipped with galvanized pipe wrapped with heat trace cable; however corrosion-resistant stainless steel options are available upon request. Heat trace fixtures are available with an optional alarm system, indicator light, drench hose or anti-scald valve that complement this premium emergency fixture.

Key Features

- SpinTec showerhead improves water distribution
- Freeze protection valve
- 1¼" (32 mm) galvanized steel pipe
- All items comply with ANSI/ISEA Z358.1
- One-year warranty

Emergency Fixture Facts

In geographic areas where an emergency fixture may freeze, safety personnel should consider purchasing a freeze-protected fixture or additional accessories to prevent the pipes from freezing. ANSI/ISEA Z358.1 Section 6.4.5



Recommended Emergency TMV

Navigator EFX 25 (S19-2100)

The current ANSI standard calls for emergency eyewashes and drench showers to deliver tepid water (60–100°F/ 15.5–37.7°C) for 15 minutes. A thermostatic mixing valve is needed to mix the hot and cold water supply. Bradley's Navigator TMVs are the most reliable emergency TMVs on the market. One valve is required per plumbed unit.



Heat Trace Combination Drench Shower and Eye/eye-face wash

S19-300

Electric heat trace cable:

Thermal rating 5 watts/foot

Self regulated to -50°F (-45.5°C)

Protects against overheating and cold spots

¾" (19 mm) polyethylene pipe insulation

ABS plastic outer shell:

Easy to maintain

Four easy-to-remove sections

Sealed with vinyl trim

Thermostat opens at 64°F (18°C) and closes at 54°F (12°C)

Four-hub, aluminum junction box accepts ¾" (19 mm) conduit

Valve opens at 35°F (2°C) internal water temperature to prevent freezing

Stainless steel pull rod with triangular handle

Chrome-plated brass, stay-open ball valve

½" (13 mm) eyewash valve

1" (25 mm) shower valve

UL Plumbing listed to meet ANSI/ISEA Z358.1

CSA certified 161166

Additional product information, including
Technical Data and Installation Instructions,
is available online at bradleycorp.com

Standard selections are in bold. Units will ship with these features if not otherwise specified. Selection should be made in each category. Incoming supply (top or bottom) must be indicated.

Versions

- D2** **Class 1 Division 2 – Groups B, C, D**
- D1 Class 1 Division 1 – Groups C, D

Water Supply

- T Top Supply
- B Bottom Supply

Voltage

- 1** **120V**
- 2 220V

Showerhead

- A** **ABS Plastic**
- S Stainless Steel

Eyewash

- EFW** **Eye/Face Wash**
- EW Eyewash Only

Alarm

- N** **No Alarm**
- WA Waterproof Alarm
- D2A Class 1 Div 2 Alarm
- D1A Class 1 Div 1 Alarm

Indicator Light

- N** **No Light**
- L NEMA 3 Indicator Light
- D2L Class 1 Division 2 Light
- D1L Class 1 Division 1 Light

Drench Hose

- N** **No Drench Hose**
- H Drench Hose

Anti-Scald Valve

- N** **No Anti-Scald Valve**
- S Anti-Scald Valve

INDOOR & OUTDOOR MODELS

Overview

Protect your people from extreme environments with a customized safety solution. Turnkey shower, eyewash and drench hose systems offer an injured party a humane triage experience. Enclosed safety systems address the physical and psychological needs of the injured party by providing privacy, delivering warm water, warm ambient temperature and a shelter from the elements. Armed with a fire-rated insulated fiberglass structure, tepid water delivery capabilities, and reliable chemical and corrosion resistance, Bradley's enclosed safety shower provides superior washdown capability in emergency situations, while withstanding harsh chemicals.

Key Features

- Innovative drenching technology featuring:
 - SpinTec showerhead for improved water distribution
 - Halo rinsing platform
- **Superior design standards:**
 - Fiberglass-Reinforced Plastic
 - R-8 insulation rating
 - Indoor and Outdoor models
- **Premium features come standard:**
 - Integral drain
 - Portable
 - Drench hose
- Flame-retardant resin with a Class 1 Flame Spread Index per ASTM E-84
- 100% fiberglass surround construction highly resistant to chemicals and corrosion
- Ideal for both indoor and outdoor applications
- Custom engineered systems available

Emergency Fixture Facts

Safety systems with multiple drenching platforms, (shower, eyewash and drench hose) must be capable of simultaneous activation while delivering tepid water for a duration of 15 minutes. ANSI/ISEA Z358.1 Section 7.4.4

An enclosure is recommended to protect against cold ambient temperatures. ANSI/ISEA Z358.1 Appendix B6







Quick Compliance Guide

This guide serves as a supplement to the ANSI/ISEA Z358.1-2014 standard.

Enclosed Safety Showers

- Colder ambient temperature may require an enclosure for added protection. (Section B6)
- Valve mechanism opens in one second or less; it stays open until manually closed. (Sections 4.2, 5.2, 6.2, 7.1.1, 7.1.2, 7.1.3)
- Drench shower and eye or eye/face wash must operate simultaneously. (Section 7.4.4)
- Supply with flushing fluid ("potable water, preserved water, preserved buffered saline solution or other medically acceptable solution..."). (Definitions, Sections 4.1.1, 4.4.1, 5.1.1, 6.1.1, 7.1.2, 7.1.3)
- Locate 10 seconds or 55' (16.8 m) from contaminants or hazardous materials. Locate on same plane as the hazard, free of obstructions. (Sections 4.5.2, 5.4.2, 6.4.2, 7.1.1, 7.1.2, 7.1.3, 7.4.2, Appendix B5)
- Must resist corrosion in the presence of flushing fluid (Sections 4.1.5, 5.1.5, 6.1.5, 7.1.1, 7.1.2, 7.1.3)
- Protect eye and eye/face wash heads from contaminants. (Sections 5.1.3, 6.1.3, 7.1.2, 7.1.3)
- Requires a 16" (406 mm) radius from the center of the drench shower spray pattern to be free of obstructions. (Sections 4.1.4, 7.1.1)
- Required to be free of obstructions a minimum of 6" (152 mm) from the outside of the eye or eye/face wash sprayheads. (Sections 5.4.4, 6.4.4, 7.1.2, 7.1.3)
- Eye/face wash nozzle height 33–45" (83.8–114.3 cm) from standing surface. (Sections 5.4.4, 6.4.4, 7)
- Flow Rates:
An eyewash delivers a minimum of .4 GPM for 15 minutes. (Sections 5.1.6, 7.1.2)
An eye/face wash delivers a minimum of 3.0 GPM (11 L/Min) for 15 minutes. (Sections 6.1.6, 7.1.3)
- Use flow meter to check flow rate; use test gauge to test flow pattern. (Sections 5.1.8, 5.3.1, 6.1.7, 6.3, 7.1.2, 7.1.3)
- Use a Bradley test gauge (Model 269-1444) to check flow pattern. ①
- Environmental conditions often require freeze or scald protection equipment. (Sections 4.5.5, 5.4.5, 6.4.5, 7.1.1, 7.1.2, 7.1.3)

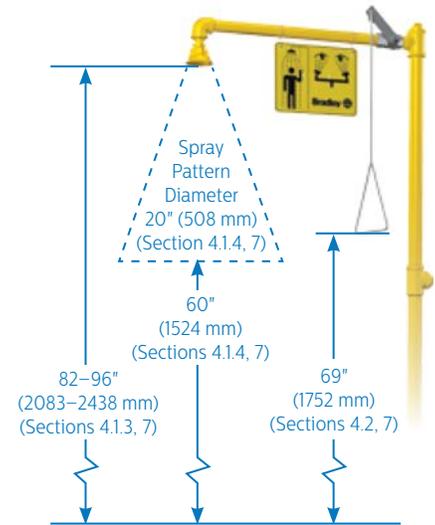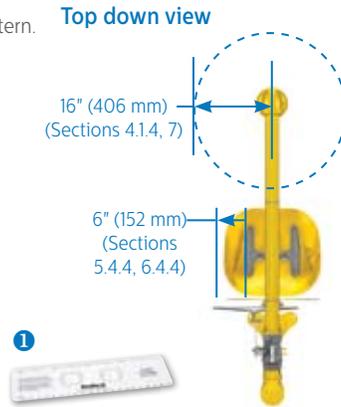

15-minute Flush	Tepid Water	Third-Party Certifications	Weekly Activations:	Annual Inspections
Compliant showers release a continuous flow of at least 20 GPM (76 L/Min) of tepid flushing fluid for a period of at least 15 minutes. (Sections 4.1.4, 4.4.1, 4.5.5, 4.5.6, 7.1.1) Compliant eye or eye/face wash fixture releases a continuous flow of flushing fluid for a minimum of 15 minutes. (Sections 5.1.6, 5.4.5, 5.4.6, 6.1.6, 6.4.5, 6.4.6, 7.1.2, 7.1.3)	(lukewarm) 60–100°F (15.6–37.8°C) encourages full 15-minute flush or until medical personnel arrive. (Definitions, Sections 4.5.6, 5.4.6, 6.4.6, Appendix B6)	Manufacturers may have their safety fixtures independently evaluated by a third-party testing organization. Look for certification when selecting a compliant fixture. (Definitions)	Flush lines and test by activating weekly. Inspection tags are often included with fixtures to document testing and to satisfy a safety audit. (Sections 4.6.2, 5.5.2, 6.5.2, 7.5.2)	ANSI recommends a comprehensive annual inspection of the facility to evaluate modified work space, assess new hazards introduced into the area, and to identify fixtures needing replacement or repair. (Section 7.5.5) (Section 4.6.5)

FREE Confidential Safety Evaluation • 800.BRADLEY • bradleysafety.com



S19372



S19388

Indoor Enclosed Safety Showers

S19372 SERIES

Tepid water inlet

S19374 SERIES

Hot water tank

S19378 SERIES

Tankless hot water heater

Outdoor Enclosed Safety Showers

S19382 SERIES

Tepid water inlet

S19384 SERIES

Hot water tank

S19387 SERIES

Self-contained

S19388 SERIES

Tankless hot water heater

Eye/Face Wash and Shower Models

Overview

The safety of your employees is paramount. Keltech electric tankless emergency water heaters control systems are engineered to ensure that water temperature is just right – not too hot, not too cold. Under constant flow and pressure, temperatures stay within +/-1°F of set point. If the flow rate changes drastically, there is no need to worry about being scalded. These units sense the transition and purge latent heat, keeping the output temperature below 90°F (32°C). A separate set of circuits monitors for "over temperature" conditions. Large internal passageways minimize pressure drop.

These units perform on demand for efficient energy usage. Unlike boilers, tankless water heaters only draw energy when needed. Utility costs are minimized because there is no need to keep a 300 gal (1136 L) tank heated 24/7/365. Easy to install – just add water and power. All you need is one electrical connection and a cold water line. All models are precision-engineered with materials, such as copper tubing and robust brass castings, that exceed the standards of any application – anywhere in the world.

Key Features

- No need to keep a 300 gal (1136 L) tank heated 24/7/365
- Easy to install – just add water and power. All you need is one electrical connection and a cold water line
- Under constant flow and pressure, temperatures stay within +/-1°F of set point
- Precision systems custom engineered to fit your application
- Meets ANSI/ISEA Z358.1 standards and third-party verified to UL/CSA standards
- Only electric tankless tempering systems that can be ASME and NB certified
- Optional features include NEMA 4X stainless steel enclosures, explosion proof purge system, and freeze protection to -20°F (-28°C)

Emergency Fixture Facts

ANSI requires that an emergency fixture be supplied with tepid flushing fluid between 60-100°F (15.5-37.7°C) to avoid premature cessation of the recommended 15 minute flush. ANSI/ISEA Z358.1 Section 7.4.5, Appendix B6



Brass/Copper heat exchangers meet NSF/ANSI 372

ASME Certification: Keltech units 63 kW and higher are the only electric tankless water heaters registered with the National Board and certified with the HLW stamp

For information contact your Bradley Representative or visit bradleycorp.com

For Safety Eye/Face Wash Applications

CLE SERIES

kW Range 18 – 25 kW

Flow Range 0.75 – 10 GPM (3 – 37.8 L/Min)

Standard Voltages 480V, 600V 3-Phase Delta

Temperature output fixed at 80°F (27°C)

Meets the ANSI/ISEA Z358.1 standards

Provide continuous tepid water for multiple incidents with zero recovery time and custom-tuned for minimal overshoot

85,000 – 170,000 BTUs

Manual reset cutoff

Auto reset high limit switch

Liquid-cooled solid state relays

NEMA 4 enclosure

Wall- or floor-mounted

¾" (19 mm) connections

ETL and cETL certified to UL and CSA Standards

Temperature safety values:
Controller alarm 90°F (32°C)
Auto reset high limit switch 95°F (35°C)
Manual reset cutoff 100°F (38°C)



SNA SERIES

kW Range 36 – 144 kW

Flow Range 1.5 – 50 GPM (5.7 – 189.2 L/Min)

Standard Voltages 480V, 600V 3-Phase Delta

Temperature output fixed at 80°F (27°C)

Meets the ANSI/ISEA Z358.1 standards

Provide continuous tepid water for multiple incidents with zero recovery time and custom-tuned for minimal overshoot

Dual flow activation for reduced overshoot and energy savings

122,800 – 491,300 BTUs

Manual reset cutoff

Auto reset high limit switch

Door cutoff switch

Emergency stop button

Liquid-cooled solid state relays

NEMA 4 enclosure

Floor-mounted

1¼" (32 mm) connections

ETL and cETL certified to UL and CSA Standards

Temperature safety values:
Controller alarm 90°F (32°C)
Auto reset high limit switch 95°F (35°C)
Overshoot purge 95°F (35°C)
Manual reset cutoff 100°F (38°C)



For Safety Shower Applications

S19361

Pre-assembled safety fixture and SNA heater skid system

Halo™ Eye/Face Wash and SpinTec™ Drench Shower

54 – 144 kW (491,300 BTUs)

Molded Duragrate® and integrated shower pan

Temperature overshoot purge system

NEMA 4 enclosure standard

AL3 building communication alarm included

Dual Flow Heater Activation
(Eye/Face Wash and/or Shower)

Internal fusing (included) adds safety and permits single power connection

Controller-locked temperature setting,
output fixed at 80°F (27°C)

Meets ANSI/ISEA Z358.1 standards

ETL and cETL certified to UL and CSA Standards

Emergency stop button and door cutoff switch



S19361F

Pre-assembled, freeze-protected safety fixture and SNA heater skid system

Bradley Heat Trace S19-300 with SpinTec™

54 – 144 kW (491,300 BTUs)

Molded Duragrate® and integrated shower pan

Temperature overshoot purge system

NEMA 4 enclosure standard

AL3 building communication alarm
option included

Dual Flow Heater Activation
(Eye/Face Wash and/or Shower)

Internal fusing (included) adds safety and permits single power connection

Controller-locked temperature setting,
output fixed at 80°F (27°C)

Meets ANSI/ISEA Z358.1 standards

ETL and cETL certified to UL and CSA Standards

Emergency stop button and
door cutoff switch





Emergency Thermostatic Mixing Valves

Overview

Bradley's Navigator® emergency thermostatic mixing valves provide tepid water (60–100°F/15.5°–37.7°C) by mixing cold and hot water to a predetermined temperature. Tepid water encourages injured workers to remain beneath the deluge of water released from the emergency fixture, for the entire ANSI required 15-minute flush. ANSI/ISEA Z358.1-1998 first required tepid water and the 2004 standard outlined that definition of the temperature range in its appendix. Each Navigator Emergency TMV features a fixed cold-water bypass that will allow cold water to flow should the hot water exceed the predetermined temperature reflecting Bradley's commitment to customers, quality and its dedication to manufacturing quality products that protect your employees.

Key Features

- Reliable, liquid-filled thermostat
- Accurate temperature control to within $\pm 3^\circ$
- Dial thermometer
- Checkstops on inlets
- Built-in cold water bypass
- Positive shut-off of hot supply when cold supply is lost
- Dirt and lime resistant
- Factory assembled and tested
- Universal mounting capability
- Valves are preset at 85°F (29°C) and are adjustable from 65°F (18°C) to 95°F (35°C)
- All items comply with ANSI/ISEA Z358.1

Emergency Fixture Facts

ANSI requires that an emergency fixture be supplied with tepid flushing fluid between 60–100°F (15.5°–37.7°C). ANSI/ISEA Z358.1 Section 7.4.5, Appendix B6

Thermostatic Mixing Valves

S19-2000 *	7 GPM (26 L/Min) @ 30 psi (207 kPa)	Accommodates one eyewash or eye/ face wash
S19-2100	26 GPM (98 L/Min) @ 30 psi (207 kPa)	Accommodates one one combination shower, one drench shower or multiple eyewashes
S19-2150 *	19.5 GPM (74 L/Min) @ 30 psi (207 kPa)	Accommodates one drench shower or multiple eyewashes
S19-2200	53.5 GPM (203 L/Min) @ 30 psi (207 kPa)	Accommodates up to two combination showers, two drench showers or multiple eyewashes
S19-2250 *	48 GPM (182 L/Min) @ 30 psi (207 kPa)	Accommodates one combination shower, up to two drench showers or multiple eyewashes
S19-2300	82 GPM (310 L/Min) @ 30 psi (207 kPa)	Accommodates up to three combination showers, three drench showers or multiple eyewashes
S19-2350 *	72.5 GPM (274 L/Min) @ 30 psi (207 kPa)	Accommodates up to two combination showers, three drench showers, or multiple eyewashes

ANSI Standard Z358.1 requires tempered water supply. Ratings provided at 30 psi (207 kPa), the minimum pressure required by ANSI/ISEA Z358.1 to be supplied to eyewash, eye/face wash and combination units. Reference Bradley's Technical Data Sheets for a full listing of flow capacities.

*ASSE 1071 and cUPC certified

Additional Product Options

Finish	
C	Chrome-plated
Piped Assembly	
P*	Piped assembly with inlet and outlet shutoff
Cabinets	
SS	Surface-mounted stainless steel
RS	Recessed stainless steel
SE	Surface-mounted white enamel
RE	Recessed white enamel
W	Plexiglas® window in door

* Option not available with S19-2000. Standard with cabinet-mounted valves.



S19-2000 EFX8



S19-2100 EFX25



S19-2200 EFX60



S19-2300 EFX125

Freeze and Scald Protection Valves

Bradley's freeze and scald protection valves coupled with Navigator tempering systems serve an important role. Although the tempering system supplies the fixture with tepid water, environmental conditions may cause the water to freeze or become scalding hot. To ensure the fixture is ready to use and the water is safe for your employees at all times, consider the addition of a freeze or scald protection valve, to bleed off water in extreme temperatures.

Freeze Protection Valve Kits

S45-1986

For use with eyewashes



S45-1987

For use with drench showers



*Classic combination fixtures require one each of S45-1986 and S45-1987. Halo combination fixtures only require one S45-1986.

Scald Protection Valve Kits

S45-1989

For use with eyewashes



S45-1990

For use with drench showers



*Classic combination fixtures require one each of S45-1989 and S45-1990. Halo combination fixtures only require one S45-1989.



Emergency Signaling Systems

Overview

Whether your intent is to prevent vandalism caused by false activations, or to be sure your safety team and medical personnel are notified during an emergency, signaling systems may be the solution. Each Bradley signaling system is equipped with a double pole, double throw flow switch. To complement the audible and visual indicator, each flow switch and central control board provides extra sets of contacts necessary to connect the fixture to a central control system that monitors the fixture. Signaling systems provide peace of mind, they discourage vandals, yet notify safety personnel when and where an emergency occurs.

Key Features

- Automatic, audible and visual system
- Signal light and horn activate when shower or eyewash is activated; pre-assembled
- Optional beacon or area lights
- Optional silence switch with auto reset
- Universal AC Input: 90-264 AC, 50-60 Hz
- Requires a minimum of 2.4 GPM (9 L/Min) water flow to activate
- ½" (13 mm) or 1¼" (32mm) NPT inlet piping
- Double pole, double throw flow switch

Emergency Fixture Facts

According to ANSI guidelines, audible signaling systems may be a desirable accessory to audibly or electronically alert safety personnel that an emergency occurred. ANSI/ISEA Z358.1, Appendix B4

S19-322 Series

- Recessed signaling system
- Automatic, audible and visual signal system
- Signal light and horn activate when shower or eye wash is activated; preassembled
- 1/2" (13mm) or 1 1/4" (32mm) NPT inlet piping
- Double pole, double throw flow switch
- For indoor applications
- Universal AC Input: 90-264 AC, 50-60 Hz
- NEMA 1 signaling system

S19-322E

UL listed 1/2" (32mm) flow switch

Flashing amber LED signal light

For eye or eye/face washes



S19-322D

UL listed 1 1/4" (32mm) flow switch

Flashing amber LED signal light

For drench showers or combination unit



S19-323 Series

- Automatic, audible and visual signaling system
- Signal light and horn activate when eyewash or shower is activated; preassembled
- Requires a minimum of 2.4 GPM (9 L/Min) water flow to activate
- 1/2" (13 mm) or 1 1/4" (32mm) NPT inlet piping
- Double pole, double throw flow switch
- For indoor and outdoor applications
- Extra set of contacts on central control board
- 6' (1.8 m) cable
- Universal AC Input: 90-264 AC, 50-60 Hz
- NEMA 3R signaling system

S19-323E

UL listed 1/2" (13 mm) brass flow switch

For eye or eye/face wash

Amber signal light



S19-323D

UL listed 1 1/4" (32mm) brass flow sw

For drench shower or combination u

Amber signal light



S19-324 Series

- Automatic, audible and visual signaling system
- Signal light and horn activate when eye wash or shower is activated; preassembled
- Requires a minimum of 2.4 GPM (9 L/Min) water flow to activate
- ½" (13 mm) or 1¼" (32mm) NPT inlet piping
- Double pole, double throw flow switch
- For indoor and outdoor applications
- Extra set of contacts on central control board
- Universal AC Input: 90-264 AC, 50-60 Hz

S19-324E

- Brass UL listed ½" (13mm) flow switch
- NEMA 4X signaling system
- 6' (1.8 m) Cable
- For eye or eye/face wash
- Silence switch with auto reset
- Amber signal light



S19-324E

S19-324D

- Brass, UL listed 1¼" (32 mm) flow switch
- NEMA 4X signaling system
- 6' (1.8 m) Cable
- For drench showers or combination units
- Silence switch with auto reset
- Amber signal light



S19-324D

S19-324DG, S19-324DGW

- Brass UL listed 1¼" (32 mm) flow switch
- NEMA 4X signaling system
- 6' (1.8 m) Cable
- Silence switch with auto reset
- Green beacon light
- White area light (S19-324DGW only)
- For drench showers or combination units
- Amber signal light



S19-324DGW

S19-324EG, S19-324EGW

- UL listed ½" (13mm) brass flow switch
- NEMA 4X signaling system
- 6' (1.8 m) Cable
- Silence switch with auto reset
- Green beacon light
- White area light (S19-324EGW only)
- For eye wash or eye/face washes
- Amber signal light



Explosion-Proof Emergency Signaling Sys (Class 1 Division 2, Groups B, C & D)

S19-324D2D

- NEMA 4
- Brass UL listed 1¼" (32 mm) flow switch
- For drench shower or combination units
- Amber signal light



S19-324D2D

Explosion-Proof Emergency Signaling System (Class 1 Division 1, Groups B, C and D)

S19-324D1D

- NEMA 4
- Brass UL listed 1¼" (32 mm) flow switch
- For drench shower or combination units
- Amber signal light



S19-324D1D

Flow Switches

S19-319B2

Brass

½" (13 mm) NPT

Activates eyewash and eye/face wash units



S19-319B2

S19-319B4

Brass

1¼ NPT

Activates combination units



S19-319B4

S19-319S2

Stainless steel

½" (13 mm) NPT

Activates eyewash and eye/face wash units



S19-319S2

S19-319S4

Stainless steel

1¼ NPT

Activates combination units



S19-319S4

For availability on a brass or stainless steel flow switch only,
contact Bradley Customer Service at 800-BRADLEY (800.272.3539)

S19-324 Series Configurator

Don't see a model that meets your application? Use the selections below to build one to suit your needs. Select one option from each category. Fill in the squares below with the corresponding option letter or number. Use the resulting alphanumeric number to specify the model and configuration for your desired product.

Model S19-324

General Area, NEMA4X, Signal System

1 Fixture Configuration



EF Eye or Eye/Face Wash

DC Drench or Combination

2 Activation



BS Brass Flow Switch

SS Stainless Steel Flow Switch

3 Audible Sound



TN1 Tone 1 - Ultra Loud Warble

TN2 Tone 2 - Ultra Loud Siren

TN3 Tone 3 - Ultra Loud Staccato

4 Silence/Reset Switch



O None

PM Panel Mount

FM Flex Mount with 15' Cable

5 Signal Light (Flashing)



SA Amber

SR Red

6 Beacon Light (Steady)

O None

BG Green

BB Blue



7 Area Light (Steady)

O None

AW White

AR Red



8 Cable Length (Flow Switch to Signaling System)

C6 6' Cable

C12 12' Cable

C50 50' Cable



Fill in 1 through 8 to specify the model and configuration for your desired project:

						1	2	3	4	5	6	7	8
S	1	9	3	2	4								

S19-324D1 Series Configurator

Don't see a model that meets your application? Use the selections below to build one to suit your needs. Select one option from each category. Fill in the squares below with the corresponding option letter or number. Use the resulting alphanumeric number to specify the model and configuration for your desired product.

Model S19-324D1

Class I, Division 1, Groups B, C, and D Signal System

	1 Fixture Configuration		5 Audible Sound		9 Area Light (Steady)
	EF Eye or Eye/Face Wash		TS Standard Single Tone		O None
	DC Drench or Combination		TM Multi-Tone (Installer Mounted)		AW White
	2 NEMA Rating		6 Silence/Reset Switch		AR Red
	4N NEMA 4		<i>* For use in gas groups C, D only</i>		10 Cable Length
	4X NEMA 4X		O None		C6 6' Cable
	3 Mounting		RS Reset Switch		C12 12' Cable
	PT Pipe Mount		7 Signal Light (Flashing)		C50 50' Cable
	WM Wall Mount		SA Amber		
	4 Activation		SR Red		
	BS Brass Flow Switch		8 Beacon Light (Steady)		
	SS Stainless Steel Flow Switch		O None		
			BG Green		
			BB Blue		

Fill in 1 through 10 to specify the model and configuration for your desired project:

	1	2	3	4	5	6	7	8	9	10
S	1	9	3	2	4	D	1			

S19-324D2 Series Configurator

Don't see a model that meets your application? Use the selections below to build one to suit your needs. Select one option from each category. Fill in the squares below with the corresponding option letter or number. Use the resulting alphanumeric number to specify the model and configuration for your desired product.

Model S19-324D2

Class I, Division 2, Groups B, C, and D Signal System

	<p>1 Fixture Configuration</p> <p>EF Eye or Eye/Face Wash</p> <p>DC Drench or Combination</p>		<p>5 Silence/Reset Switch</p> <p><i>* For use in gas groups C, D only</i></p> <p>0 None</p> <p>RS Reset Switch</p>		<p>8 Area Light (Steady)</p> <p>0 None</p> <p>AW White</p> <p>AR Red</p>
	<p>2 NEMA Rating</p> <p>4N NEMA 4</p> <p>4X NEMA 4X</p>		<p>6 Signal Light (Flashing)</p> <p>SA Amber</p> <p>SR Red</p>		<p>9 Cable Length</p> <p>C6 6' Cable</p> <p>C12 12' Cable</p> <p>C50 50' Cable</p>
	<p>3 Activation</p> <p>BS Brass Flow Switch</p> <p>SS Stainless Steel Flow Switch</p>		<p>7 Beacon Light (Steady)</p> <p>0 None</p> <p>BG Green</p> <p>BB Blue</p>		
	<p>4 Audible Sound</p> <p>TS Standard Single Tone</p> <p>TM Multi-Tone (Installer Mounted)</p>				

Fill in 1 through 9 to specify the model and configuration for your desired project:

	1	2	3	4	5	6	7	8	9
S	1	9	3	2	4	D	2		



S19-460, S19-430 and S19440 Series

Overview

Bradley deck-mounted or wall-mounted, dual head drench hoses qualify as an eyewash when installed according to the ANSI/ISEA Z358.1 guidelines for eyewashes. A dual head drench hose may be used to flush the eyes or body. In contrast, several single head drench hose models exist exclusively for the purpose of serving as auxiliary safety equipment during an emergency. Single head drench hoses may be deck-mounted, wall-mounted or installed as a retrofit in line with an already existing eyewash or drench shower in particularly hazardous locations.

Key Features

- Plastic eye/face wash sprayheads
- 8' (2.4 m) drench hose standard (except where noted)
- Squeeze-activated handle (except where noted)
- Locking clip – continuous water flow once activated
- Deck-mounted models include deck mounting hardware
- Wall-mounted models include wall mounting hardware (except where noted)
- All items comply with ANSI/ISEA Z358.1

Emergency Fixture Facts

Dual head drench hoses may take the place of a traditional eyewash if it complies with all eyewash performance requirements in Section 5 and/or Section 6 of the standard such as being mounted 6" (152 mm) from any obstruction and 33-53" (838-1346 mm) from the top of the spray pattern to the floor.

ANSI/ISEA Z358.1 Section 8.2.1

Backflow Preventers

To select the appropriate backflow preventer, check with local governing authorities on local codes and ordinances.

Recommended Emergency TMV

Navigator EFX 8 (S19-2000)

The current ANSI standard calls for emergency eyewashes and drench showers to deliver tepid water (60–100°F/15.5–37.7°C) for 15 minutes. A thermostatic mixing valve is needed to mix the hot and cold water supply. Bradley's Navigator TMVs are the most reliable emergency TMVs on the market. One valve is required per plumbed unit.



Quick Compliance Guide

This guide serves as a supplement to the ANSI/ISEA Z358.1-2014 standard.





Dual Head Eye/Face Wash & Drench Hose

- Considered an eye/face wash if it complies with the installation and performance requirements of the eye/face wash standard. (Sections 6, 8.2.1)
- Single-head drench hoses complement the 15-minute flush provided by a primary ANSI/ISEA Z358.1 compliant eyewash fixture. (Section 8)
- Valve mechanism opens in one second or less; it stays open until manually closed. (Sections 6.2, 8.2.1)
- Fixtures compliant as an eye/face wash must remain "on" once activated (Sections 6.2, 8.2.1) ①
- Supply with flushing fluid ("potable water, preserved water, preserved buffered saline solution or other medically acceptable solution...") (Definitions, Sections 6.1.1, 8.2.1) ②
- Locate 10 seconds or 55' (16.8 m) from contaminants or hazardous materials. Locate on same plane as the hazard, free of obstructions. (Section 6.4.2, Appendix B5)
- Protect unit heads from contaminants. (Sections 6.1.3, 8.2.1)
- Flow Rates: Eye/face wash unit delivers a minimum of 3.0 GPM (11 L/Min) for 15 minutes. (Section 6.1.6, 8.2.1)
- Use a flow meter to test flow rate; use a test gauge to test flow pattern. (Sections 6.1.7, 6.3, 8.2.1)

Top down view

Required to be free of obstructions a minimum of 6" (152 mm) from the outside of the eye or eye/face wash sprayheads. (Sections 6.4.4, 8.2.1) ③

Use a Bradley test gauge (Model 269-1444) to check flow pattern. ④

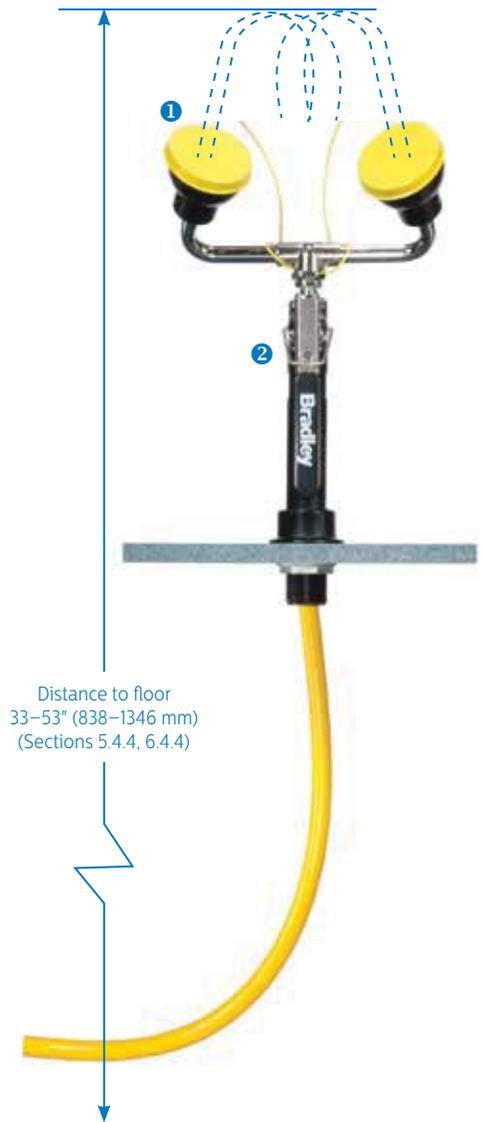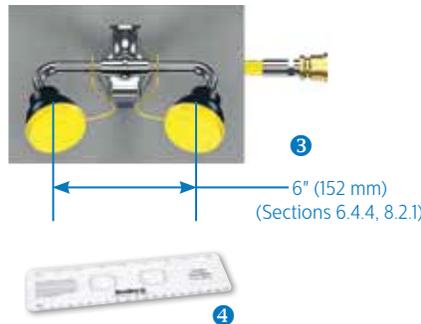

15-minute Flush	Tepid Water	Third-Party Certifications	Weekly Activations:	Annual Inspections
Compliant fixtures release a continuous flow of tepid flushing fluid for a minimum of 15 minutes. (Sections 6.1.6, 6.4.5, 6.4.6, 8.2.1)	(lukewarm) 60–100°F (15.6–37.8°C) encourages full 15 minute flush or until medical personnel arrive. (Definitions, Sections 6.4.6, 8.2.1, Appendix B6)	Manufacturers may have their safety fixtures independently evaluated by a third-party testing organization. Look for certification when selecting a compliant fixture. (Definitions)	Flush lines and test by activating weekly. Inspection tags are often included with fixtures to document testing and to satisfy a safety audit. (Sections 6.5.2, 8.2.1, 8.2.4.2)	ANSI recommends a comprehensive annual inspection of the facility to evaluate modified work space, assess new hazards introduced into the area, and to identify fixtures needing replacement or repair. (Sections 6.5.5, 8.2.4.5)

FREE Confidential Safety Evaluation • 800.BRADLEY • bradleysafety.com

Deck-Mounted Drench Hoses

S19-460

Single vertical sprayhead

UL classified to meet ANSI/ISEA Z358.1 as a supplemental eyewash only



S19-460

S19-465

Single angled sprayhead

UL classified to meet ANSI/ISEA Z358.1 as a supplemental eyewash only



S19-465

S19-460EFW

Dual vertical sprayheads

UL classified to meet ANSI/ISEA Z358.1



S19-460EFW

S19-465EFW

Dual angled sprayheads

UL classified to meet ANSI/ISEA Z358.1



S19-465EFW

Wall-Mounted Drench Hoses

S19-430A

Single vertical sprayhead

8' (2.4 m) yellow thermoplastic hose

UL classified to meet ANSI/ISEA Z358.1 as a supplemental eyewash only



S19-430A

S19-430D

Single vertical sprayhead

6' (1.8 m) flexible stainless steel hose

UL classified to meet ANSI/ISEA Z358.1 as a supplemental eyewash only



S19-430D

Retrofit Drench Hoses

S19-430EH

Single head drench hose

Retrofits to most eye or eye/face wash fixtures

UL classified to meet ANSI/ISEA Z358.1 as a supplemental eyewash only



S19-430EH

S19-430SH

Single head drench hose

Retrofits to most drench showers or combination units

UL classified to meet ANSI/ISEA Z358.1 as a supplemental eyewash only



S19-430SH

Wall-Mounted Drench Hoses with Recoil Hose

S1944011ABC

- Dual vertical sprayheads
- ANSI-compliant eye/face wash
- 12' (3.7 m) recoiling hose
- Squeeze handle activated
- UL classified to meet ANSI/ISEA Z358.1



S1944011ABC

S1944011BBC

- Dual angled sprayheads
- ANSI-compliant eye/face wash
- 12' (3.7 m) recoiling hose
- Squeeze handle activated
- UL classified to meet ANSI/ISEA Z358.1

S1944011CBC

- Single vertical sprayhead
- 12' (3.7 m) recoiling hose
- Squeeze handle activated
- UL classified to meet ANSI/ISEA Z358.1 as a supplemental eyewash only



S1944011CBC

S1944011CBD

- Single vertical sprayhead
- 25' (7.6 m) recoiling hose
- Squeeze handle activated
- UL classified to meet ANSI/ISEA Z358.1 as a supplemental eyewash only

S1944022ABC

- Dual vertical sprayheads
- ANSI-compliant eye/face wash
- 12' (3.7 m) recoiling hose
- Paddle activation handle
- UL classified to meet ANSI/ISEA Z358.1



S1944022ABC

Backflow Preventers

To select the appropriate backflow preventer, check with local governing authorities on local codes and ordinances.

S27-303

Dual check valve, Series 7



S45-2310

Dual check vacuum breaker with intermediate atmospheric vent, Series 9D



S45-2309

Dual check vacuum breaker with atmospheric vent, Series 9



140-226

Hose guide bracket
Mounts under the deck to guide the hose





Deck- and Wall-Mounted Eye and Eye/Face Washes

Overview

A variety of laboratory fixtures are available to accommodate traditional and non-traditional installations. Elementary schools, hospitals, universities and research facilities equip their premises with these versatile, yet unique fixtures. Laboratory fixtures may be faucet, deck, wall, or counter-mounted. Bradley offers a diverse variety of fixtures to provide eyewash solutions where space is restricted and safety is of the utmost importance.

Key Features

- Chrome-plated brass pipe
- Paddle or push down handle activation
- ½" (13 mm) Inlet
- All items comply with ANSI/ISEA Z358.1

Emergency Fixture Facts

The emergency fixture must be on the same level as the hazard. ANSI/ISEA Z358.1 Section 5.4.2

For additional safety products typically installed in laboratory applications, please consider:

Horizontal/Vertical Drench Showers	page 11
Pedestal-Mounted Eyewashes and Eye/Face Washes.	page 15
Wall-Mounted Eyewashes and Eye/Face Washes.	page 23

Recommended Emergency TMV

Navigator EFX 8 (S19-2000)

The current ANSI standard calls for emergency eyewashes and drench showers to deliver tepid water (60–100°F/15.5–37.7°C) for 15 minutes. A thermostatic mixing valve is needed to mix the hot and cold water supply. Bradley's Navigator TMVs are the most reliable emergency TMVs on the market. One valve is required per plumbed unit.



Faucet-Mounted Eyewash

S19-200B



One-step activation

Several adapters included

UL classified to meet ANSI/ISEA Z358.1

Lead-Free



S19-200B
faucet not included

Wall-Mounted

S19-240

Eyewash

Yellow PVC push handle

UL classified to meet ANSI/ISEA Z358.1



S19-240

Deck/Counter-Mounted Eyewash

S19-260

Flush-mounted, stainless steel bowl with eye/face wash

Push-down activation handle

12 $\frac{7}{8}$ " (327 mm) stainless steel bowl

1 $\frac{1}{4}$ " (32 mm) waste

UL classified to meet ANSI/ISEA Z358.1



S19-260

S19-270B

Stainless steel push handle

Eyewash swings 360 degrees

Right-hand activation

UL classified to meet ANSI/ISEA Z358.1



S19-270B

S19-270BL

Stainless steel push handle

Eyewash swings 360 degrees

Left-hand activation

UL classified to meet ANSI/ISEA Z358.1

Swing-Activated Eye and Eye/Face Washes

Overview

Eyewash or eye/face wash fixtures that are swing activated are often located on lavatory decks that need to be available for a variety of different uses. A swing-activated fixture provides access to an ANSI-compliant fixture, while simultaneously making full use of valuable, yet limited space. Choose from a variety of wall-mounted or deck-mounted designs that swing out of the way when the fixture is in its resting position, but is still accessible for use during an emergency.

Key Features

- Chrome-plated brass pipe
- Swing-down or swing-over activation controlled between two precise ceramic discs
- 20° activation and deactivation reduces splashing
- All items comply with ANSI/ISEA Z358.1
- Halo eyewashes and eye/face washes provide the most wash down coverage available
- Halo dust cover caps on the eyewash are hinged for a more secure hold – keeping dust and debris off the water spouts

Emergency Fixture Facts

ANSI identifies a door as a barrier. ANSI/ISEA Z358.1, Appendix B5.

For additional safety products typically installed in laboratory applications, please consider:

Horizontal/Vertical Drench Showers	page 11
Pedestal-Mounted Eyewashes and Eye/Face Washes.	page 15
Wall-Mounted Eyewashes and Eye/Face Washes.	page 23
Standard and Explosion proof Signaling Systems	page 55-57



Recommended Emergency TMV

Navigator EFX 8 (S19-2000)

The current ANSI standard calls for emergency eyewashes and drench showers to deliver tepid water (60–100°F/15.5–37.7°C) for 15 minutes. A thermostatic mixing valve is needed to mix the hot and cold water supply. Bradley's Navigator TMVs are the most reliable emergency TMVs on the market. One valve is required per plumbed unit.




Quick Compliance Guide

This guide serves as a supplement to the ANSI/ISEA Z358.1-2014 standard.



Laboratory Eye & Eye/Face Wash Fixtures

- Valve mechanism opens in one second or less; it stays open until manually closed. (Sections 5.2, 6.2) **1**
- Supply with flushing fluid, ("potable water, preserved water, preserved buffered saline solution or other medically acceptable solution...") (Definitions, Sections 5.1.1, 6.1.1)
- Locate 10 seconds or 55' (16.8 m) from contaminants or hazardous materials.
- Locate on same plane as the hazard, free of obstructions. (Sections 5.4.2, 6.4.2, Appendix B5)
- Protect unit heads from contaminants. (Sections 5.1.3, 6.1.3) **2**
- Flow Rates: Eyewash unit delivers a minimum of .4 GPM for 15 minutes. (Section 5.1.6) Eye/face wash unit delivers a minimum of 3.0 GPM (11 L/Min) for 15 minutes. (Section 6.1.6)
- Use a flow meter to test flow rate; use a test gauge to test flow pattern. (Sections 5.1.8, 5.3.1, 6.1.7, 6.3)

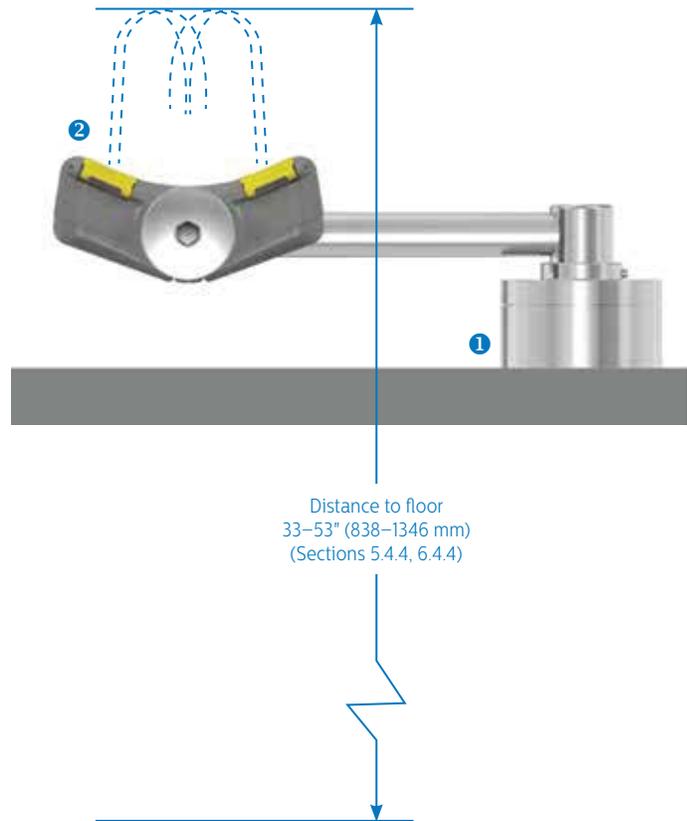


The Joint Commission 2009 EC Standard for Hospitals requires: "The hospital takes action to minimize or eliminate identified safety and security risks in the physical environment." Furthermore, hospitals are required to "Minimize risk associated with selecting, handling, storing, transporting, using, and disposing hazardous chemicals." Surveyors commonly refer to OSHA requirements and the ANSI Standard for further guidance on best demonstrated practices.

Top down view

Required to be free of obstructions a minimum of 6" (152 mm) from the outside of the eye or eye/face wash sprayheads. (Sections 5.4.4, 6.4.4) **3**

Use a Bradley test gauge (Model 269-1444) to check flow pattern. **4**

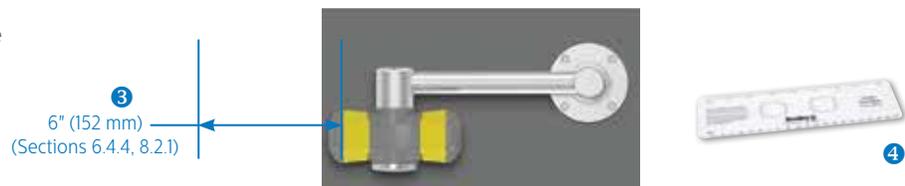

15-minute Flush	Tepid Water	Third-Party Certifications	Weekly Activations:	Annual Inspections
Compliant fixtures release a continuous flow of tepid flushing fluid for a minimum of 15 minutes. (Sections 5.1.6, 5.4.5, 5.4.6, 6.1.6, 6.4.5, 6.4.6)	(lukewarm) 60–100°F (15.6–37.8°C) encourages full 15 minute flush or until medical personnel arrive. (Definitions, Sections 5.4.6, 6.4.6, Appendix B6)	Manufacturers may have their safety fixtures independently evaluated by a third-party testing organization. Look for certification when selecting a compliant fixture. (Definitions)	Flush lines and test by activating weekly. Inspection tags are often included with fixtures to document testing and to satisfy a safety audit. (Sections 5.5.2, 6.5.2)	ANSI recommends a comprehensive annual inspection of the facility to evaluate modified work space, assess new hazards introduced into the area, and to identify fixtures needing replacement or repair. (Sections 5.5.5, 6.5.5)

FREE Confidential Safety Evaluation • 800.BRADLEY • bradleysafety.com

Eyewashes

S19274C 

Deck/counter-mounted eyewash

Durable, ceramic valve

Swings over sink for easy use

Universal right or left hand mounting options

UL classified to meet ANSI/ISEA Z358.1



S19274C

S19274HD 

Deck/counter-mounted eyewash

Durable, ceramic valve

Swings down over sink for easy use

UL classified to meet ANSI/ISEA Z358.1



S19274HD

S19274HDR 

Reduced pipe length

Deck/counter-mounted eyewash

Durable, ceramic valve

Swings down over sink for easy use

UL classified to meet ANSI/ISEA Z358.1

S19274HW 

Wall-mounted eyewash

Durable, ceramic valve

Swings down over sink for easy use

UL classified to meet ANSI/ISEA Z358.1



S19274HW

S19274HDB  

Deck/counter-mounted eyewash

Durable, ceramic valve

Swings down over sink for easy use

UL classified to meet ANSI/ISEA Z358.1



S19274HDB

S19274HWB  

Wall-mounted eyewash

Durable, ceramic valve

Swings down over sink for easy use

UL classified to meet ANSI/ISEA Z358.1

S19-270C

Deck/counter-mounted eyewash

Durable, ceramic valve

Swings over sink for easy use

Universal right or left hand mounting options

UL classified to meet ANSI/ISEA Z358.1



S19-270C

S19-270HD

Deck/counter-mounted eyewash

Durable, ceramic valve

Swings down over sink for easy use

UL classified to meet ANSI/ISEA Z358.1



S19-270HD

S19-270HW

Wall-mounted eyewash

Durable, ceramic valve

Swings down over sink for easy use

UL classified to meet ANSI/ISEA Z358.1



S19-270HW

S19-280D 

Deck/counter-mounted eyewash

Durable, ceramic valve

Swings down over sink for easy use

UL classified to meet ANSI/ISEA Z358.1



S19-280D

S19-280W 

Wall-mounted eyewash

Durable, ceramic valve

Swings down over sink for easy use

UL classified to meet ANSI/ISEA Z358.1

Eye/Face Washes

S19274E 

Deck/counter-mounted eye/face wash

Durable, ceramic valve

Swings over sink for easy use

Universal right or left hand mounting options

UL classified to meet ANSI/ISEA Z358.1



S19274E

S19-270E

Deck/counter-mounted eye/face wash

Durable, ceramic valve

Swings over sink for easy use

Universal right or left hand mounting options

UL classified to meet ANSI/ISEA Z358.1



S19-270E

S19274JD 

Deck/counter-mounted eye/face wash

Durable, ceramic valve

Swings down over sink for easy use

UL classified to meet ANSI/ISEA Z358.1



S19274JD

S19-270JD

Deck/counter-mounted eye/face wash

Durable, ceramic valve

Swings down over sink for easy use

UL classified to meet ANSI/ISEA Z358.1



S19-270JD

S19274JDB  

Deck/counter-mounted eye/face wash

Durable, ceramic valve

Swings down over sink for easy use

UL classified to meet ANSI/ISEA Z358.1



S19274JDB

S19-270JW

Wall-mounted eye/face wash

Durable, ceramic valve

Swings down over sink for easy use

UL classified to meet ANSI/ISEA Z358.1



S19-270JW

S19274JW 

Wall-mounted eye/face wash

Durable, ceramic valve

Swings down over sink for easy use

UL classified to meet ANSI/ISEA Z358.1



S19274JW

S19-290D 

Deck/counter-mounted eye/face wash

Durable, ceramic valve

Swings down over sink for easy use

UL classified to meet ANSI/ISEA Z358.1



S19-290W

S19274JWB  

Wall-mounted eye/face wash

Durable, ceramic valve

Swings down over sink for easy use

UL classified to meet ANSI/ISEA Z358.1

S19-290W 

Wall-mounted eye/face wash

Durable, ceramic valve

Swings down over sink for easy use

UL classified to meet ANSI/ISEA Z358.1



Recessed Drench Showers, Eye and Eye/Face Washes

Overview

The recessed, corrosion-resistant, brushed stainless steel units offer a sleek, modern look. Frequently installed in hospitals, high schools, universities and laboratories, these fixtures maximize the space available. Many of the fixtures in this category include an integral drain pan, which collects the water run-off from the eyewash and directs it into the drain, encouraging weekly activation. Halo eye or eye/face wash targets those areas of the body where a gentle spray of water is optimal.

Key Features

- SpinTec showerhead improves water distribution
- Fixtures exceed ANSI-mandated flow rates
- Flush-mounted, corrosion-resistant, type 304 stainless steel cabinet
- Various modes of activation are available (fully recessed, surfacemounted or pull down handles)
- Swing down activation controlled between two precise ceramic discs
- All items comply with ANSI/ISEA Z358.1
- Halo eyewashes and eye/ face washes provide the most washdown coverage available
- Halo dust cover caps on the eyewash are hinged for a more secure hold, keeping dust and debris off the water spouts

Emergency Fixture Facts

Emergency fixtures must be activated on a weekly basis and inspected annually. ANSI/ISEA Z358.1 Section 4.6.2, 5.5.2, 6.5.2, 7.5.5

Suggested Accessories

Standard and Explosion-Proof Signaling Systems	page 55–57
Drench Shower Testers	page 83

Other parts and accessories are listed beginning on page 83

Recommended Emergency TMV

Navigator EFX 25 (S19-2100)

The current ANSI standard calls for emergency eyewashes and drench showers to deliver tepid water (60–100°F/15.5–37.7°C) for 15 minutes. A thermostatic mixing valve is needed to mix the hot and cold water supply. Bradley's Navigator TMVs are the most reliable emergency TMVs on the market. One valve is required per plumbed unit.



Barrier-Free, Recessed Drench Showers

S19-125BF



Fully recessed, push-down, coated stainless steel handle for quick and easy activation

Extended stainless steel shroud

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1

S19-125BF



S19-125SBF



Same features as S19-125BF, except with stainless steel plate to conceal ball valve

Surface-mounted, coated stainless steel handle for quick and easy activation

Extended stainless steel shroud

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1

S19-125SBF



S19-125FMBF



Same features as S19-125BF, except with flush-mounted showerhead

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1

S19-125FMBF



S19-125SFMBF



Same features as S19-125SBF, except with flush-mounted, showerhead

UL classified to meet ANSI/ISEA Z358.1

Listed by Intertek to EN 15154-1

S19-125SFMBF



Cabinet-Mounted Swing-Down Eyewash

S19284H



Activated when arm is pulled down

Wide access panel in front of unit for easy accessibility and serviceability

UL classified to meet ANSI/ISEA Z358.1



S19284H

S19284J



Activated when arm is pulled down

Wide access panel in front of unit for easy accessibility and serviceability

UL classified to meet ANSI/ISEA Z358.1



S19284J

S19284HB



Same features as S19284H, except barrier-free

UL classified to meet ANSI/ISEA Z358.1



S19284HB

S19284JB



Same features as S19284J, except barrier-free

UL classified to meet ANSI/ISEA Z358.1



S19284JB

Recommended Emergency TMV

Navigator EFX 8 (S19-2000)

The current ANSI standard calls for emergency eyewashes and drench showers to deliver tepid water (60–100°F/15.5–37.7°C) for 15 minutes. A thermostatic mixing valve is needed to mix the hot and cold water supply. Bradley's Navigator TMVs are the most reliable emergency TMVs on the market. One valve is required per plumbed unit.



Barrier-Free, Cabinet Concealed Swing-Down Eyewash

S19294HB



Concealed, cabinet-mounted eyewash

Gas spring allows the door to descend in a smooth and controlled manner

Activated by opening the stainless steel door

Wide access panel in front of unit for easy accessibility and serviceability

Designed to mount in a 4" (102 mm) deep wall

UL classified to meet ANSI/ISEA Z358.1



S19294HB

S19294HBT



Same features as S19294HB, except with P-trap

UL classified to meet ANSI/ISEA Z358.1

Barrier-Free, Cabinet Concealed Swing-Down Eye/Face Wash

S19294JB



Concealed, cabinet-mounted eye/face wash

Gas spring allows the door to descend in a smooth and controlled manner

Activated by opening the stainless steel door

Wide access panel in front of unit for easy accessibility and serviceability

Bottom-fed emergency TMV may be installed in maintenance compartment below fixture (recommended S19-2000EFX)

Designed to mount in a 6" (152 mm) deep wall

UL classified to meet ANSI/ISEA Z358.1



S19294JB

S19294JBT



Same features as S19294JB, except with P-trap

UL classified to meet ANSI/ISEA Z358.1

Recommended Emergency TMV

Navigator EFX 8 (S19-2000)

The current ANSI standard calls for emergency eyewashes and drench showers to deliver tepid water (60–100°F/15.5–37.7°C) for 15 minutes. A thermostatic mixing valve is needed to mix the hot and cold water supply. Bradley's Navigator TMVs are the most reliable emergency TMVs on the market. One valve is required per plumbed unit.

S19-2000EFX for use only with S19294JB and S19294JBT.



Barrier-Free, Recessed Drench Shower and Eyewash

S19345HXB  

Extended, stainless steel shroud

Fully recessed, push-down, coated stainless steel handle

Wide access panel in front of unit for easy accessibility and serviceability

Gas spring allows the door to descend in a smooth and controlled manner

Designed to mount between a 4" (102 mm) wall

UL classified to meet ANSI/ISEA Z358.1



S19345HXB

Barrier-Free, Recessed Drench Shower and Eye/Face Wash

S19345JXB  

Extended, stainless steel shroud

Fully recessed, push-down, coated stainless steel handle

Wide access panel in front of unit for easy accessibility and serviceability

Gas spring allows the door to descend in a smooth and controlled manner

Designed to mount between a 4" (102 mm) wall

UL classified to meet ANSI/ISEA Z358.1



S19345JXB

S19345HXBT  

Same features as S19345HXB, except with P-trap

UL classified to meet ANSI/ISEA Z358.1

S19345JXBT  

Same features as S19345JXB, except with P-trap

UL classified to meet ANSI/ISEA Z358.1

S19345HFB  

Same features as S19345HXB, except with flush-mounted showerhead

UL classified to meet ANSI/ISEA Z358.1

S19345HFB



S19345JFB  

Same features as S19345JXB, except with flush-mounted showerhead

UL classified to meet ANSI/ISEA Z358.1

S19-345JFBT



S19345HFBT  

Same features as S19345HFB, except with P-trap

UL classified to meet ANSI/ISEA Z358.1

S19345JFBT  

Same features as S19345JFB, except with p-trap

UL classified to meet ANSI/ISEA Z358.1

Recommended Emergency TMV

Navigator EFX 60 (S19-2200)

The current ANSI standard calls for emergency eyewashes and drench showers to deliver tepid water (60–100°F/15.5–37.7°C) for 15 minutes. A thermostatic mixing valve is needed to mix the hot and cold water supply. Bradley's Navigator TMVs are the most reliable emergency TMVs on the market. One valve is required per plumbed unit.





Drench Showerheads

Recessed flush-mounted showerhead provides smallest footprint in ceiling. For the most durable showerhead, select stainless steel which stands up to corrosion and aggressive impact.



Eyewashes

When the safety risk targets the eye area, Bradley's eyewashes are the recommended solution for emergency care. The Halo eyewash sprayhead flows at approximately 5.1 GPM (19 L/Min), exceeding ANSI's 0.4 GPM (1.5 L/Min) flow rate. The flow gently flushes water directly on the eye to wash out contaminants.



Eye/Face Washes

When chemicals and other hazardous liquids can contaminate the face and eyes, an eye/face wash is the solution. Bradley's Halo eye/face wash sprayhead features integral flow controls that provide a soft flush of approximately 5.1 GPM (19 L/Min). Eye/face washes are considered premium fixtures that exceed ANSI's 3.0 GPM (11 L/Min) mandate.



Flow Controls

In the interest of water conservation, each shower head features an integral 20 GPM (76 L/Min) flow control. This item must be purchased separately for most competing brands.



On-Site[®] Portable Gravity-fed Eyewashes

Overview

The On-Site (S19-921) portable eyewash is the most innovative gravity-fed eyewash currently on the market. Employing a patented design, the On-Site is the only eyewash on the market that uses just 7 gallons of water that provides a full 15-minute flush, at the ANSI-mandated flow rate and maintains a consistent height throughout the spray pattern until the last drop of liquid is depleted from the tank. The clear yellow polycarbonate tank offers an exclusive vandal-resistant design that makes worker safety a priority.

Key Features

- Transparent tank allows solution level to be checked easily
- High-visibility yellow, molded pedestal and tank
- Vandal-resistant, patented design
- 7 gal/27 L (60 lbs/27 kg) provides full 15-minute flush
- Heater jacket available to prevent freezing
- Complies with ANSI/ISEA Z358.1
- One-year warranty

Emergency Fixture Facts

ANSI requires the visual inspection of self-contained eyewashes to be certain the tank is full and ready for use. ANSI/ISEA Z358.1 Section 5.5.3

Ideal for locations where a plumbed water source is not available.

Quick Compliance Guide

This guide serves as a supplement to the ANSI/ISEA Z358.1-2014 standard.




Self-Contained Eyewash Fixtures

- Eyewash unit delivers a minimum of .4 GPM for 15 minutes. (Section 5.3.2)
- Valve mechanism opens in one second or less; it stays open until manually closed. (Section 5.3.2)
- Supply with flushing fluid, ("potable water, preserved water, preserved buffered saline solution or other medically acceptable solution...") (Definitions, Section 5.1.1)
- Locate 10 seconds or 55' (16.8 m) from contaminants or hazardous materials. Locate on same plane as the hazard, free of obstructions. (Sections 5.4.2, Appendix B5)
- Use a test gauge to test flow pattern. (Section 5.4.7)
- Frigid conditions require the installation of freeze protection equipment. (Section 5.4.5) ①

Top down view

Required to be free of obstructions a minimum of 6" (152 mm) from the outside of the eyewash sprayheads. (Sections 5.4.4) ②

Use a Bradley test gauge (Model 269-1444) to check flow pattern. ③

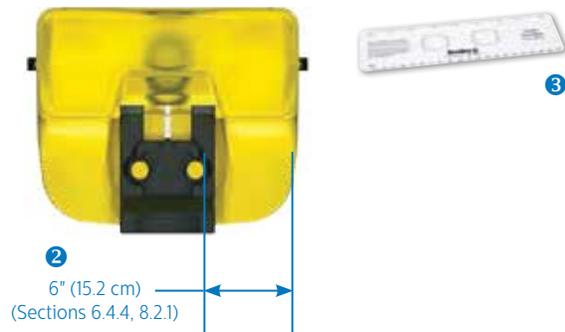

Front View



Distance to floor
33–53" (838–1346 mm)
(Sections 5.4.4, 6.4.4)

15-minute Flush	Tepid Water	Third-Party Certifications	Weekly Activations:	Annual Inspections
Compliant fixtures release a continuous flow of tepid flushing fluid for a minimum of 15 minutes. (Sections 5.1.6, 5.4.5, 5.4.6)	(lukewarm) 60–100°F (15.6–37.8°C) encourages full 15 minute flush or until medical personnel arrive. (Definitions, Sections 5.4.6, Appendix B6)	Manufacturers may have their safety fixtures independently evaluated by a third-party testing organization. Look for certification when selecting a compliant fixture. (Definitions)	Flush lines and test by activating weekly. Inspection tags are often included with fixtures to document testing and to satisfy a safety audit. (Sections 5.5.2)	ANSI recommends a comprehensive annual inspection of the facility to evaluate modified work space, assess new hazards introduced into the area, and to identify fixtures needing replacement or repair. (Sections 5.5.5)

FREE Confidential Safety Evaluation • 800.BRADLEY • bradleysafety.com

On-Site® Portable Gravity-fed Eyewash

S19-921

Hinged eyewash tray activates in one quick motion

Stainless steel clamps secure the tank during transport

Vandal-resistant unit; foreign objects cannot be introduced into tank because all openings are sealed once the tank is installed

7 gal (27 L) tank is one of the lightest portable eyewashes on the market

Wall bracket (can also deck mount)

UL classified to meet ANSI/ISEA Z358.1



S19-921

On-Site Heater Jacket Retrofit Kit

S19-921HR

Heater jacket ships attached to tank

No tools required

On-Site Waste Cart

S19-399

High-visibility yellow

Captures used fluid, 56 gal (212 L) capacity

Tapered sump, easy to drain



S19-399

On-Site Eyewash and Heater Jacket

S19-921H

Protects against freezing; down to -10°F (-23.3°C)

Insulated heater jacket conceals a 121-watt heater

Secondary thermostat prevents overheating if primary thermostat fails

Requires 120-volt AC line

UL classified to meet ANSI/ISEA Z358.1



S19-921H

On-Site Water Eyewash Kit

S19-949

Replacement cap

Nine liners

Inspection tag



S19-949

On-site foam liner

269-1379

Perforated foam liner

Sold individually

On-Site Transparent Tank

133-140

Replacement 7 gal (27 L) tank

Sold individually



133-140



Portable Pressurized Eyewashes

Overview

Looking for a portable eyewash that will withstand corrosive materials in isolated locations, can be used on trucks or areas without plumbing that require a 15-minute flush? Bradley's stainless steel portable pressurized tanks resist corrosion, and offer several options for customers that are looking for an eyewash with a drench hose, or even a tank outfitted with a heater jacket to prevent freezing. Portable pressurized tanks are a versatile, corrosion-resistant solution, to provide an ANSI-compliant fixture in remote or non-plumbed locations.

Portable pressurized fixtures balance the volume of water with a predetermined amount of pressure to maximize the time and volume of solution that provides a flush. The portable pressurized eyewash offers the convenience of a portable unit, is sold in a range of sizes, and the heater jacket option offers flexibility to handle a wide range of applications.

Key Features

- Built-in carrying handles
- Tire filler valve with 0 – 160 psi (1103 kPa) air gauge
- Pressure relief valve to prevent over pressurization
- 8' (2.4 m) drench hose (unless otherwise specified)
- Chrome-plated brass eyewash
- All items comply with ANSI/ISEA Z358.1

Emergency Fixture Facts

ANSI guidelines require that emergency fixtures supply potable water, preserved water, preserved buffered saline solution, or an alternative medically accepted solution.

ANSI/ISEA Z358.1 Section 3, Definitions

5 gal (19 L) Units

- Eyewash flow: 8 minutes
- Drench hose flow: 2.5 minutes
- Meets ANSI criteria as a personal wash station only

S19-670

Drench hose, no eyewash

S19-671

Eyewash only, no drench hose

S19-671H

Jacket prevents freezing

280-watt heater

Eyewash only

S19-672

Eyewash with drench hose



S19-671



S19-672

10 gal (39 L) Units

- Eyewash flow: 15 minutes
- Drench hose flow: 3.5 minutes
- UL classified to meet ANSI/ISEA Z358.1

S19-690

Eyewash with drench hose

S19-690LHS

Eyewash only, no drench hose

S19-690H

Jacket prevents freezing

510-watt heater

Eyewash only



S19-690LHS



S19-690H

15 gal (57 L) Units

- Eyewash flow: 18 minutes
- Drench hose flow: 5 minutes
- UL classified to meet ANSI/ISEA Z358.1

S19-788

Eyewash and drench hose

S19-788LHS

Eyewash only, no drench hose

S19-788H

Jacket prevents freezing

510-watt heater

Eyewash only



S19-788

Heater Jacket Retrofit Kits for Portable Pressurized Eyewashes

S19-671HR

Jacket for 5 gal (19L) tank

S19-690HR

Jacket for 10 gal (39 L) tank

S19-788HR

Jacket for 15 gal (57 L) tank

Optional Cart

S19-690A

Four-wheel, stainless steel transport cart

For use with fixtures without a heater jacket



S19-690A

On-Site Heater Jacket Retrofit Kit

S19-921HR

Heater jacket ships attached to tank

No tools required

On-Site Waste Cart

S19-399

High-visibility yellow

Captures used fluid, 56-gallon capacity

Tapered sump, easy to drain



S19-399

Drench Hose Spray Kits

Includes all necessary fittings and hanger for attaching hose to Bradley units to provide a body water drench

S19-430EH

Drench hose spray kit that attaches to eyewashes



S19-430EH

S19-430SH

Drench hose spray kit for use with drench showers



S19-430SH

Privacy Curtain

S19-330

Universal mounting

Waterproof, 3-ply reinforced vinyl laminate

Chemical and mildew resistant

Curtain Color: high-visibility yellow
Dimensions: 70"x 145" (1778 x 3683 mm)

Curtain rail and mounting brackets Stainless steel corrosion resistant Rail dimensions: 1½" x 42" diameter

For a model compatible with barrier-free fixtures, contact Bradley for more information

Not compatible with PVC or heat trace units



S19-330

Drench Shower Tester

S19-330ST

Heavy-duty tester for required weekly activation

Water-tight funnel with weighted bottom

Dimensions: 84" (2134 mm) long

8' (2.4 m) telescoping aluminum handle



S19-330ST

S19-322 Series

S19-322E
UL listed 1/2" (32mm) flow switch
NEMA 1 signaling system
Universal AC Input: 90-264 AC
Flashing amber LED signal light
For eye or eye/face washes



S19-322D
UL listed 1/4" (32mm) flow switch
NEMA 1 signaling system
Universal AC Input: 90-264 AC
Flashing amber LED signal light
For drench showers or combination units



S19-323 Series

S19-323E
UL listed 1/2" (13 mm) brass flow switch
NEMA 3R signaling system
6' (1.8 m) Cable
For eye or eye/face wash
Universal AC Input: 90-264 AC
Amber signal light



S19-323D
UL listed 1/4" (32mm) brass flow switch
NEMA 3R signaling system
6' (1.8 m) Cable
For drench shower or combination unit
Universal AC Input: 90-264 AC
Amber signal light



S19-324 Series

S19-324E
Brass UL listed 1/2" (13mm) flow switch
NEMA 4X signaling system
6' (1.8 m) Cable
For eye or eye/face wash
Silence switch with auto reset
Universal AC Input: 90-264 AC
Amber signal light



S19-324D
Brass, UL listed 1/4" (32 mm) flow switch
NEMA 4X signaling system
6' (1.8 m) Cable
For drench showers or combination units
Silence switch with auto reset
Universal AC Input: 90-264 AC
Amber signal light



S19-324DG, S19-324DGW
Brass UL listed 1/4" (32 mm) flow switch
NEMA 4X signaling system
6' (1.8 m) Cable
Silence switch with auto reset
Green beacon light
White area light (S19-324DGW only)
For drench showers or combination units
Universal AC Input: 90-264 AC
Amber signal light



S19-324 Series continued

S19-324EG, S19-324EGW

UL listed 1/2" (13mm) brass flow switch

NEMA 4X signaling system

6' (1.8 m) Cable

Silence switch with auto reset

Green beacon light

White area light (S19-324EGW only)

For eye wash or eye/face washes

Universal AC Input: 90-264 AC

Amber signal light



Retrofit Classic Dust Covers

S45-1964

Compatible with any Bradley classic plastic eyewash bowl

Fixture not included



S45-1964

S45-2396

For use with any Bradley classic eyewash bowl

Includes welded stainless steel clam shell cover, stainless handle with teather and quick release pin



S45-2396

Explosion-Proof Emergency Signaling System (Class 1 Division 2, Groups B, C & D)

S19-324D2D

Universal AC Input: 90-264 AC

NEMA 4X

Brass UL listed 1/4" (32 mm) flow switch

For drench shower or combination units

Amber signal light



S19-324D2D

Explosion-Proof Emergency Signaling System (Class 1 Division 1, Groups C and D)

S19-324D1D

Universal AC Input: 90-264 AC

NEMA 4X

Brass UL listed 1/4" (32 mm) flow switch

For drench shower or combination units

Amber signal light



S19-324D1D

**Don't see the signaling system you are looking for?
Go to page 59-61 to use the S19-324 Configurator**

Eyewash Handle, Ball Valve and Hardware

S30-070

Stainless steel handle

Hardware

1/2" (13 mm) NPT stay-open ball valve



S30-070

S30-072

Stainless steel handle

Hardware

1/2" (13 mm) NPT stay-open ball valve

For stainless steel hinged dust covers only

S30-074

Left-hand activation conversion kit for pedestal-mounted or combination fixtures

Stainless steel handle

Hardware

1/2" (13 mm) stay-open ball valve

S45-122

Plastic handle

Hardware

1/2" (13 mm) NPT stay-open ball valve



S45-122

Eyewash Handle, Ball Valve and Hardware Only

128-135

Plastic handle only

S08-336

Stainless steel handle only

Vertical valve applications only

S08-338

Stainless steel handle only

Horizontal valve applications only

S30-075

Left-hand activation conversion kit for pedestal-mounted or combination fixtures

Stainless steel handle

Hardware

For S19-270BL eyewash only

S30-087

Stainless steel handle

Hardware

For stainless steel hinged dust covers only

S45-123

Plastic handle

Hardware

S30-071

Stainless steel handle

Hardware

Eyewash Ball Valves Only

S27-282

Brass 1/2" NPT stay-open ball valve only

S27-287

Stainless steel 1/2" NPT stay-open ball valve only

Sprayhead and Spray Ring Assemblies

S45-2453

Includes orange flow control

2.4 GPM (9 L/Min) flow control inside each head; total flow from both heads is 4.8 GPM (18 L/Min)

Eye/face wash sprayheads only



S45-2453

S39-394

Eyewash head assembly with supply stem



S39-394

S39-396

Eye/face wash sprayhead assembly with supply stem



S39-396

S39-681

Eye/face wash sprayhead assembly

Stem not included

S39-682

Eye/face wash assembly

For use with PVC unit only

Stem not included

S05-127

Spray ring only

Can only be added to eyewash with cross-connection yoke

S39-397

Eyewash and spray ring assembly with supply stem



S39-397

Dust Caps

107-371

Dust caps only

Sold individually; two required per eyewash

Approximately 1" (25 mm) x 1" (25 mm)

Yellow plastic tether



107-371

S53-063

Dual eye/face wash dust caps only

Sold individually; two required per eyewash

2 1/4" (57 mm) x 1" (25 mm)

Beaded chain tether



S53-063

S53-310

Eyewash dust cap

Sold individually; two required per eyewash

1" (25 mm) x 1" (25 mm)

Not for use with portable pressurized tank eyewashes



S53-310

Bowls

154-058

10" (254 mm) diameter impact-resistant plastic eyewash bowl



154-058

187-053

10 3/4" (273 mm) diameter stainless steel eyewash bowl



187-053

113-1150

Brass stem only: for units with dual black eye/face heads

113-1151

Stainless steel stem only: for stainless steel units with dual black eye/face wash heads

Stem Spacers

113-1159

Stainless steel stem spacer

For use in fixtures with stainless steel bowl



113-1159

113-1185

Black plastic stem spacer

For use in fixtures with yellow plastic bowl



113-1185

Eyewash and Eye/Face Wash Flow Restrictors

125-167

3.7 GPM (14 L/Min) flow restrictor

Pink

For eyewash with face spray ring

Stem not included



125-167

125-032

3.5 GPM (13 L/Min) flow restrictor

Black

For swing activated or swing-down units

Stem Assemblies

Eyewash Fixtures Only

S21-071 Brass

S21-072 SS304



S21-071

Eyewash with Spray Ring Fixtures Only

S21-073 Brass

S21-074 SS303

S21-075 SS316

Classic Stem Assemblies

Sprayhead Assembly	Galvanized Fixture with Plastic Bowl	Galvanized Fixture with Stainless Steel Bowl	Standard Stainless Steel Fixture	316 Stainless Steel Fixture
Eyewash Only	S21-071 113-1185	S21-071 113-1159	S21-072 113-1159	S21-075 113-1159
Eye/Face Wash with Spray Ring	S21-073 113-1185	S21-073 113-1159	S21-074 113-1159	None
Eye/Face Wash with Dual Black Heads	113-1150	113-1150	113-1151	None

Spacer 113-1159 or 113-1185 is required for units that shipped on or before 11/2/2005.

Assemblies include stem and appropriate flow control.

Stems S21-036 and S21-050 are obsolete.

Replacement Parts – Halo

187-320

Plastic bowl



187-320

S05-190

Sprayhead assembly



S05-190

S05-192

Sprayhead assembly



S05-192

S05-204

304 stainless steel sprayhead assembly



S05-204

S05-205

316 stainless steel sprayhead assembly



S08-390

S08-390

Handle kit



S27-327

S27-327

Chrome-plated 1/2" ball valve

S27-328

Stainless Steel 1/2" ball valve



S27-328

S45-2675

Eyewash cover kit



S45-2675

S45-2676

Eye/Face wash cover kit



S45-2676

S65-339

O-ring and screen



S65-339

S88-068

O-ring screen and flow control



S88-068

S90-388

Stainless steel bowl cover kit



S90-388

S90-390

Plastic bowl cover kit



S90-390

S90-391

Stainless steel bowl kit



S90-391

S90-392

Stainless steel bowl kit

316 stainless steel

Drench Shower Handle for Standard Units

128-156A
25½" (648 mm) pull rod only
Standard pull rod shipped with non-barrier-free showers

128-156B
36" (914 mm) pull rod only



128-156A

Drench Shower Handle for Barrier-Free Units

128-156C 
48" (1219 mm) pull rod only

128-156D 
45½" (1156 mm) pull rod only
Standard pull rod shipped with barrier-free showers

128-156E 
57" (1448 mm) pull rod only

128-156F 
69" (1753 mm) pull rod only



128-156D

Drench Shower Handle for Heat Trace Units

128-156G
27" (686 mm) pull rod only

SpinTec Showerhead Retrofit Kits

Universal retrofit kits include all items shown

S24-192
Ornamental plastic shroud with ring – showerhead nozzle not included



S24-192

S24-193
Ornamental stainless steel shroud with ring – showerhead nozzle not included



S24-193

S24-194
Showerhead nozzle and 90° elbow



S24-194

S24-195
Ornamental plastic shroud with ring, showerhead nozzle and 90° elbow



S24-195

S24-196
Ornamental stainless steel shroud with ring, showerhead nozzle and 90° elbow



S24-196

S24-200
304 Stainless steel showerhead and 90° elbow



S24-200

SpinTec Showerhead Retrofit Kits

S24-202

In-ceiling recessed showerhead assembly, with 5 $\frac{7}{8}$ " (149 mm) white steel shroud, includes 90° elbow



S24-202

154-147

Ring only



154-147

Drench Shower Ball Valve

S27-276

Stainless steel 1" (25 mm) ball valve only

S27-278

Chrome-plated brass 1" (25 mm) ball valve only

S30-059

Chrome-plated brass 1" (25 mm) ball valve with lever



S30-059

S30-061

Stainless steel 1" (25 mm) ball valve with lever

Self-Closing Ball Valve

S19-0011

Note: Self-closing ball valves are not ANSI/ISEA Z358.1 compliant. Appendix B3. However, an exception may be made in a "school laboratory situation." Contact local authorities regarding specific application.

Drench Hose Replacement Part Valves

S39-817

Replacement valve with drench hose sprayhead



S39-817

Hoses

S89-002

8' (2.4 m) yellow thermoplastic hose

S89-003

6' (1.8 m) stainless steel hose



S89-002 & S89-003

269-053

12' (3.7 m) yellow thermoplastic hose

Recoiling

269-054

25' (7.6 m) yellow thermoplastic hose

Recoiling

Hose Guide Bracket

140-226

Drench hose guide bracket

For deck-mounted applications



140-226

Hose Spray Valve

S27-265

Replacement valve only

Backflow prevention

S27-303

Dual check valve, Series 7



S27-303

S45-2309

Dual check vacuum breaker, Series 9



S45-2309

S45-2310

Dual check vacuum breaker with intermediate atmospheric vent, Series 9D



S45-2310

Safety Signs

114-050

Drench shower sign



114-050

114-051

Eyewash sign



114-051

114-052

Combination shower and eyewash sign



114-052

114-050E

International safety drench shower sign



114-050E

114-051E

International safety eyewash sign



114-051E

114-052E

International safety combination drench shower and eyewash sign



114-052E

On-Site Water Preservative Kit

S19-949

Replacement cap

Nine liners

Inspection tag



S19-949

On-Site Foam Liner

269-1379

Perforated foam liner

Sold individually

Gravity Fed Tank

133-140

Seven gallon tank



133-140

Miscellaneous Supplies

269-964

Safety yellow touch-up paint

12-oz. aerosol



269-964

204-421

Inspection tag

Sold individually



204-421

269-1444

Eyewash test gauge



269-1444

Foot Treadle Kits

S39-395

Includes all necessary fittings for attaching to wall-mounted eyewashes for hand or foot operation



S39-395

S45-572

Includes all necessary fittings for attaching to Bradley pedestal-mounted eyewashes and combination showers for hand or foot operation



S45-572

S45-620

Same as S45-572, except designed for S19-310PVC shower only

S45-1314SS

Stainless steel type 316 foot treadle that includes all necessary type 304 fittings for attaching to Bradley pedestal-mounted eyewashes and combination showers/eyewashes for hand or foot operation

S45-1314SS16

Stainless steel type 316 foot treadle that includes all necessary type 316 fittings for attaching to Bradley pedestal-mounted eyewashes and combination showers/eyewashes for hand or foot operation

Optional Adapters

153-395

Female, 1³/₁₆" (21 mm) x 24—Chrome

153-396

Male, 3/₈" (10 mm) NPSM—Chrome

153-401

Female, 3/₄" Garden Hose—Chrome

Freeze Protection Valve Kits

S45-1986 & S45-1987

Completely open at 35°F (1.6°C) and closes at 45°F (7.2°C)

Both the S45-1986 (for eyewashes) and S45-1987 (for drench showers) are required for classic combination fixtures
Call Bradley for more information

Fittings supplied



S45-1986



S45-1987

Scald Protection Valve Kits

S45-1989 & S45-1990

Completely open at 105°F (40.5°C) and closes at 85°F (29.4°C)

Both the S45-1989 (for eyewashes) and S45-1990 (for drench showers) are required for classic combination fixtures
Call Bradley for more information

Fittings supplied



S45-1989



S45-1990

Standard Specifications

Halo S19214, S19224 & S19314 Series

Eyewash Bowl

14" (356 mm) corner to corner, yellow impact-resistant plastic, Type 304 corrosion-resistant stainless steel or Type 316 corrosion-resistant stainless steel

Sprayhead Assembly

All sprayhead assemblies include flow control to assure safe, steady water flow under varying water supply conditions (up to 90 PSI) and flip-top protective spray covers

Halo Eyewash

- ABS plastic soft-flow sprayheads designed to gently cleanse the eyes
- Exceeds minimum water flow: 0.4 GPM (1.5 L/Min) at 30 psi (207 kPa)
- Flip-open dust covers that open automatically when unit is activated
- Self-draining design eliminates standing water

Halo Eye/Face Wash

- ABS plastic soft-flow sprayheads designed to gently cleanse the eyes and face
- Exceeds minimum water flow: 3.0 GPM (11 L/Min) at 30 psi (207 kPa)
- Flip-open dust covers that open automatically when unit is activated
- Self-draining design eliminates standing water

SpinTec Showerhead

- 3.1" (79 mm) diameter
- Uniform distribution of water
- Integral flow control provides a minimum of 20 GPM (76 L/Min)

ANSI Compliance

Unless otherwise indicated, all units comply with the ANSI/ISEA Z358.1 standard

Eyewash Valve

1/2" stay-open eye and eye/face wash valve manufactured of the following materials and supplied with either type 304 or 316 stainless

steel handle that can be activated from both the left and right side of the unit

- Chrome-plated brass
- Type 316 stainless steel

Shower Valve

1" (25 mm) stay-open eye and eye/face wash valve manufactured of the following materials and supplied with either type 304 or 316 stainless steel pull rod

- Chrome-plated brass
- Type 316 stainless steel

Pipe and Fittings

- 1/4" piping assembly manufactured of one of the following materials
- Galvanized steel with BradTect safety yellow coating
- Type 304 corrosion-resistant stainless steel
- Type 316 corrosion-resistant stainless steel
- Chrome-plated red brass.

Water Supply

Wall-mounted and pedestal-mounted: 1/2" NPT female

Waste

Eyewash: 1/4" NPT female drain fitting

Transparent Plastic or Stainless Steel Dust Cover

- Protects entire bowl to keep contaminants, dust, and other debris from eyewash area
- Dust cover opens when push handle is activated
- Constructed of transparent yellow impact-resistant plastic, type 304 corrosion-resistant stainless steel or type 316 corrosion-resistant stainless steel.

Additional Features

- **Eyewash mounting**
Heavy-gauge aluminum with four clearance holes for wall mounting (hardware not included)
All units are barrier free when mounted at the correct height
- Separate supply and waste, eliminates cross contamination risk
- Contains an antimicrobial agent to protect the sprayhead
- UL recognized to meet the ANSI/ISEA Z358.1 Standard

Standard Specifications

Classic Models

(exceptions noted)

Eyewash Bowl

10" (254 mm) diameter, yellow, impact-resistant plastic or corrosion-resistant stainless steel

Sprayhead Assembly

All sprayhead assemblies include flow control to assure safe, steady water flow under varying water supply conditions (up to 90 psi/621 kPa) and pop-off protective spray covers

- **Eyewash**

Chrome-plated brass, soft-flow sprayheads designed to gently cleanse the eyes – stainless steel where specified
Exceeds minimum water flow: 0.4 GPM (1.5 L/Min) at 30 psi (207 kPa)

- **Eye/Face Wash, Dual Sprayheads**

Contains an antimicrobial agent to protect the sprayhead
ABS plastic perforated disc sprayheads designed to gently cleanse the eyes and face
Exceeds minimum water flow: 3.0 GPM (11 L/Min) at 30 psi (207 kPa)

- **Face Spray Ring**

Chrome-plated, circular spray ring designed with a wider spray pattern for full face spray

SpinTec Showerhead

- Yellow, impact-resistant plastic or corrosion-resistant stainless steel
- 3.1" (79 mm) diameter
- Uniform distribution of water
- Integral flow control provides a minimum of 20 GPM (76 L/Min)

Drench Hose

- 8' (2.4 m) yellow, reinforced thermoplastic hose (unless otherwise specified)
- 450 PSI burst strength
- Recoiling hose (where specified) retracts for storage while allowing easy extension in emergency situations

ANSI Compliance

Unless otherwise indicated, all units comply with the ANSI/ISEA Z358.1 standard

Drench Hose Series S19-430 thru S19-630 Specifications

Drench Hose Valve

Chrome-plated valve with extended reinforced handle remains open once handle is squeezed.

- S19-630: Uses a ½" (13 mm) NPT chrome-plated brass, stay-open ball valve operated by a stainless steel push handle

Water Supply

Drench hoses: ¾" (10 mm) NPT male thread with removable ½" NPT female reducing coupling

Series S19-921 On-Site® Gravity-Fed Eyewashes

On-Site Gravity-Fed Eyewash

Can be mounted on a wall or deck. Stainless steel bracket included for wall mounting. Molded handle design for easy transportability. Should be placed in a fixed location when completely assembled and filled with fluid.

- Seven-gallon fill capacity
- Easy to clean, refill, and check solution
- Meets 15-minute minimum flushing requirement at 0.4 GPM
- Transparent yellow, polycarbonate tank – visual reminder when it is time to clean or refill the tank
- Blow-molded design prevents leakage
- Opaque yellow, polypropylene pedestal with hinged eyewash tray
- Eyewash tray pulls down in one quick motion – water flow is activated by this motion
- Removable tank is inverted onto the pedestal, piercing a liner
- Weighs 23 lbs (10 kg) when empty and 60 lbs (27 kg) filled

On-Site Waste Cart

Utilized with the Gravity-Fed Eyewash product.

- High-visibility yellow, polyethylene with 56 gal (212 L) capacity
- Captures used fluid from unit
- Tapered sump allows for easy drainage

Gravity-Fed Heater Jacket

- 121-watt heater enclosed in an insulated jacket
- Secondary thermostat with warning light and manual reset button helps prevent overheating in case of primary thermostat failure
- Requires 120-volt AC line
- All UL-listed components

Drench Shower Series S19-110 thru S19-130 and Combination Units Series S19-310 Shower Specifications

Shower Valve

1" (25 mm) NPT chrome-plated brass, stay-open ball valve operated by a stainless steel pull rod with triangular handle.

- Barrier-free pull rod extends to 48" from floor
- S19-130F and S19-120G Cord operated with self-closing ball valve
Not compliant with ANSI/ISEA Z358.1

Pipe and Fittings

Standard: Galvanized steel pipe protected with BradTect yellow coating (unless otherwise specified).

- Vertical/horizontal shower: 1" (25 mm) pipe
- Freestanding shower, combination units: 1¼" pipe
- PVC combination shower: 2" (51 mm) Schedule 80

Water Supply

- Vertical/horizontal shower: 1" (25 mm) NPT female
- Freestanding shower, combination and barrier-free units: 1¼" NPT female

Drench Showers Series S19-120HFP; Eyewash Series S19-220HFP; Combination 310TW Frost-Proof Units

Eyewash Bowl/Sprayhead/Showerhead

See standard specifications

Through Wall Units

- Standard option is 8–12" (203–305 mm) wall thickness
- 0–8" (0–203 mm) and 12–18" offered as special orders

Valve

1" (25 mm) NPT chrome-plated brass, stay-open ball valve is hand operated by a stainless steel handle

Pipe and Fittings

1¼" galvanized steel pipe protected by BradTect yellow coating (unless otherwise specified)

Water Supply

- ½" (13 mm) NPT female (model S19-220HFP)
- 1" (25 mm) NPT female (model S19-120HFP)
- 1¼" (32 mm) NPT female (all other models)

Eyewash Series S19-200 thru S19-270JC; Combination Units Series S19-310 Plumbed Eyewash Specifications

Eyewash Valve

½" NPT chrome-plated brass, stay-open ball valve operated by a high-visibility yellow PVC or stainless steel (where specified) push handle.

- **Faucet-mounted unit**
Activates when water is turned on at faucet and activator pin on eyewash is pulled toward user
Applied water pressure keeps activator pin open
Faucet will maintain normal operation for hand washing, etc. when activator pin is closed
- **Swing-activated units (where indicated):**
The swinging motion of the unit operates eyewash valve – no additional handle is required

Pipe and Fittings

Standard: Galvanized steel pipe protected with BradTect yellow coating (unless otherwise specified); laboratory and swing-activated units are primarily chrome-plated brass.

- Wall-mounted eyewash, laboratory eyewash: ½" pipe
- Pedestal eyewash: 1¼" pipe

Water Supply

- Wall-mounted, pedestal-mounted, swing-activated eyewash ½" NPT female
- Laboratory: ½" NPT (unless otherwise specified)

Waste

Eyewash: Dome-type strainer and 1¼" NPT female drain fitting with tailpiece (P-trap to conform to local codes by others unless otherwise specified)

Hinged Stainless Steel Dust Cover

- Protects entire bowl to keep contaminants, dust, and other debris from eyewash area
- Dust cover springs open when push handle is activated

Additional Features

- **Eyewash wall bracket**
Heavy-gauge aluminum with three clearance holes for wall mounting (hardware not included)
Barrier-free unit is stainless steel with four clearance holes for wall mounting
- **S19-220BF stainless steel, wrap-around skirt:**
10" diameter corrosion-resistant stainless steel
Conceals plumbing – unit extends 20" from wall

Series S19-300 Heat Traced Showers

Showerhead/Sprayheads

See standard specifications

Shower Valve

1" (25mm) NPT chrome-plated brass, stay-open valve is operated by a stainless steel pull rod with triangular handle

Eyewash Valve

½" NPT chrome-plated brass, stay-open valve hand operated by a stainless steel handle

Pipe and Fittings

1¼" galvanized steel

Electric Heat Trace Cable*

- Wraps around pipe, cable is self-regulated to 50°F (10°C) to protect against overheating and cold spots
- Thermal rating: 5 watts/foot
- Service voltage: 120-volt AC or 240-volt AC
- Amperage/wattage: .7 amp/80 watts at 50°F (10°C) unit water temperature

Pipe Insulation

- ¾" polyethylene closed cell encases pipe and heat trace cable
- Vertical semi-split allows insulation to be easily removed and re-assembled

Protective Outer Shell

- UV-stabilized ABS plastic
- Four easy-to-remove sections
- Designed for quick repairs and maintenance
- Sealed with flexible vinyl trim for added weather protection
- Resists chemical and other harsh environments

Freeze Protection Valve

- Continual flow of water when internal temperatures drop below 35°F (2°C)
- Valve closes at 45°F (7°C)
- Max pressure rating of 200 psi (1379 kPa)

Thermostat*

Opens at 64°F (18°C) and closes at 54°F (12°C)

Junction Box

Four-hub aluminum accepts ¾" NPT conduit

Water Supply

- 1¾" (44 mm) NPT male top or bottom supply

**Standard specification components are rated Class 1, Division 2, Groups B, C, and D explosion proof. Electrical components are UL listed. A unit rated Class 1, Division 1, Groups C, and D explosion proof is also available.*

Series S19-670 thru S19-788 Pressurized Stainless Steel Eyewash Tanks

Eyewash Sprayhead/Drench Hose

- See standard specifications
- Available in 5 gal (19 L), 10 gal (39 L) and 15 gal (57 L) capacities. Built-in carrying handles and resilient bottom. Tire filler valve with 0-160 PSI (0-1100 kPa) air gauge. Pressure relief valve prevents accidental over pressurization.

NOTE: Do not exceed 130 PSI tank pressurization.

Portable Heated Units

- Secondary thermostat with manual reset button helps prevent overheating in case of primary thermostat failure
- Plugs into any 120-volt AC line
- All UL listed components.
- 10 gal (39 L) and 15 gal (57 L) units provide 15 minutes of tempered water flow from eyewash
- GFCI recommended

The Technical Data summarizes product features and components. Specification information is supplied as well as detailed information regarding standard equipment and options available. Dimensional information for the product is also provided on the Tech Data along with general application guidelines.

Each Installation Instruction provides the detailed information required for installing and maintaining your product. Shipped along with every product ordered, this document covers pre-installation information including rough-in requirements (where applicable), additional supplies required, and a list of components included with your product. Step-by-step instructions are supplied for assembly, along with a detailed parts breakdown which facilitates the quick identification of parts for service or replacement.



Halo vs. Classic Cross Reference Model Numbers

Product	Classic Model No.	New Halo No.
Pedestal-Mounted Eyewashes		
Eyewash, plastic bowl	S19-210	S19214EW
Eyewash, stainless steel bowl	S19-210B	S19214B
Pedestal-Mounted Eyewashes with Hinged Dust Cover		
Eyewash, plastic bowl w/ dust cover	N/A	S19214PDC
Eyewash, stainless steel bowl & hinged dust cover	S19-210DC	S19214DC
Pedestal-mounted Eye/Face Washes		
Eye/face wash, plastic bowl	S19-210FW	S19214FW
Eye/face wash, stainless steel bowl	S19-210Y	S19214Y
Eye/face wash, stainless steel bowl w/spray ring & 8' (2.4 m) hand-held drench hose	S19-210P	S19214P
Eye/face wash, stainless steel bowl, hand/foot operated	S19-210YF	S19214YF
Barrier-Free, Pedestal-Mounted Eye/Face Washes		
Eye/face wash, barrier-free, stainless steel bowl	S19-210BF	S19214Y
Pedestal-Mounted Eye/Face Washes with Hinged Dust Cover		
Eye/face wash, plastic bowl w/ dust cover	N/A	S19214PDCFW
Eye/face wash, stainless steel bowl & hinged dust cover	S19-210DCFW	S19214DCFW
Chrome-Plated Brass Finish Pedestal-Mounted Eyewashes		
Eyewash, chrome-plated brass piping & stainless steel bowl	S19-210U	
All Stainless Steel Pedestal-Mounted Eyewashes and Eye/Face Washes		
Eyewash, all stainless steel, corrosion-resistant	S19-210BSS	S19214BSS
Eyewash, all stainless steel with hinged dust cover	S19-210SC	S19214SC
Eye/face wash w/spray ring; all stainless steel, corrosion-resistant, hand/foot operated	S19-210SS	S19214SS
Wall-Mounted Eyewashes		
Eyewash, plastic bowl	S19-220	S19224EW
Eyewash, plastic bowl, w/tailpiece & P-trap	S19-220PT	S19224PT
Eyewash, stainless steel bowl	S19-220B	S19224B
Eyewash, stainless steel bowl, with tailpiece & P-trap	S19-220BPT	S19224BPT
Wall-Mounted Eyewashes with Hinged Dust Cover		
Eyewash, plastic bowl w/ dust cover	N/A	S19224PDC
Eyewash, stainless steel bowl & hinged dust cover	S19-220DC	S19224DC
Eyewash, stainless steel bowl & hinged dust cover, w/tailpiece & P-trap	S19-220DCPT	S19224DCPT
Wall-Mounted Eye/Face Washes		
Eye/face wash, plastic bowl	S19-220FW	S19224FW
Eye/face wash, plastic bowl, w/tailpiece & P-trap	S19-220FWPT	S19224FWPT
Eye/face wash, stainless steel bowl	S19-220T	S19224T
Eye/face wash w/spray ring, stainless steel bowl, 8' (2.4 m) hand-held drench hose	S19-220P	S19224P
Eye/face wash, stainless steel bowl, w/tailpiece & P-trap	S19-220TPT	S19224TPT
Eye/face wash w/spray ring, stainless steel bowl, hand/foot operated	S19-220Y	S19224Y
Wall-Mounted Eye/Face Washes with Hinged Dust Cover		
Eye/face wash, plastic bowl w/ dust cover	N/A	S19224PDCFW
Eye/face wash, stainless steel bowl & hinged dust cover	S19-220DCFW	S19224DCFW
Eye/face wash, stainless steel bowl & hinged dust cover, w/spray ring	S19-220DCR	S19224DCFW
Eye/face wash, stainless steel bowl & hinged dust cover, w/spray ring, tailpiece & P-trap	S19-220DCRPT	S19224DCRPT

Product	Classic Model No.	New Halo No.
Barrier-Free, Wall-Mounted Eyewashes		
Eyewash, barrier-free, plastic bowl (no wrap-around skirt)	S19-220ABF	N/A
Eyewash, barrier-free, stainless steel bowl (no wrap-around skirt)	S19-220BBF	N/A
Barrier-Free, Wall-Mounted Eye/Face Wash with Wrap-Around Skirt		
Eye/face wash w/spray ring, barrier-free, stainless steel bowl & wrap-around skirt	S19-220BF	N/A
All Stainless Steel Wall-Mounted Eyewashes and Eye/Face Washes		
Eyewash, all stainless steel, w/hinged dust cover	S19-220SC	S19224SC
Eye/face wash w/spray ring, all stainless steel	S19-220SS	S19224SS
Eye/face wash, all stainless steel except ABS plastic sprayheads	S19-220TSS	
Combination Drench Showers and Eyewash Units		
Eyewash; plastic showerhead & bowl	S19-310	S19314EW
Eyewash; plastic showerhead & bowl w/hose spray	S19-310P	S19314P
Eyewash; plastic showerhead, stainless steel bowl	S19-310SB	S19314SB
Eyewash; stainless steel bowl, hand/foot operated eyewash, plastic showerhead	S19-310LL	S19314LL
Eyewash; stainless steel bowl & showerhead	S19-310F	S19314F
Eyewash; stainless steel showerhead & bowl, hand/foot operated eyewash	S19-310UU	S19314UU
Combination Drench Showers and Eyewash Units with Hinged Dust Cover		
Eyewash; plastic showerhead & bowl w/ dust cover	N/A	S19314PDC
Eyewash; stainless steel bowl & hinged dust cover, plastic showerhead	S19-310DC	S19314DC
Combination Drench Showers and Eye/Face Wash Units		
Eye/face wash; plastic bowl & showerhead	S19-310FW	S19314FW
Eye/face wash; stainless steel bowl, plastic showerhead	S19-310SBFW	S19314SBFW
Eye/face wash; stainless steel bowl, plastic showerhead, hand/foot operated	S19-310AC	S19314AC
Eye/face wash; stainless steel showerhead & bowl	S19-310TT	S19314TT
Eye/face wash w/spray ring; stainless steel showerhead & bowl; hand/foot operated	S19-310SPR	S19314SPR
Eye/face wash w/spray ring; barrier-free, plastic bowl, plastic showerhead	S19-310BFPB	S19314BFPB
Eye/face wash w/spray ring; barrier-free, stainless steel bowl, plastic showerhead	S19-310BF	S19314BF
Combination Drench Showers and Eye/Face Wash Units with Hinged Dust Cover		
Eye/face wash; plastic showerhead & bowl w/ dust cover	N/A	S19314PDCFW
Eye/face wash; stainless steel bowl & hinged dust cover, plastic showerhead	S19-310DCFW	S19314DCFW
Eye/face wash; barrier-free, stainless steel bowl & hinged dust cover, plastic showerhead	S19-310DCBF	S19314DCBF
Combination Drench Showers and Eye/Face Wash Unit without Eyewash Bowl		
Eye/face wash; plastic showerhead (no bowl)	S19-310GG	S19314GG
All Stainless Steel Combination Drench Showers and Eyewash Units or Eye/Face Wash Units		
Eye/face wash w/spray ring, barrier-free, all stainless steel	S19-310BFSS	S19-314BFSS
Eyewash; all stainless steel, corrosion-resistant	S19-310FSS	S19-314FSS
Eyewash; chrome-plated red brass pipe & fittings, stainless steel bowl & showerhead	S19-310JJ	
Eyewash; all stainless steel w/hinged dust cover	S19-310SC	S19314SC
Eye/face wash w/spray ring; type 304 all stainless steel, hand/foot operated	S19-310SS	S19314SS
Eyewash; type 316 all stainless steel, hand/foot operated	S19-310SS16	S19314SS16

Halo S19214 & S19224 Series Certification Reference

Halo Model No.	Description	UL certified to ANSI/ISEA	Intertek certified to EN standards	IAPMO Oceana certified to AS4775 & AS4020	DVGW certified
Eyewashes					
S19214EW	Halo Eyewash, plastic bowl	•	•		
S19214EWZ	Halo Eyewash, plastic bowl		•		
S19214EWZS	Halo Eyewash, plastic bowl			•	•
S19214B	Halo Eyewash, stainless steel bowl	•	•		
S19214BZ	Halo Eyewash, stainless steel bowl		•		
S19214BZS	Halo Eyewash, stainless steel bowl			•	•
S19224EW	Halo Eyewash, plastic bowl	•	•		
S19224EWZ	Halo Eyewash, plastic bowl		•		
S19224EWZS	Halo Eyewash, plastic bowl			•	•
S19224PT	Halo Eyewash, plastic bowl, p-trap	•	•		
S19224PTZ	Halo Eyewash, plastic bowl, p-trap		•		
S19224PTZS	Halo Eyewash, plastic bowl, p-trap				•
S19224B	Halo Eyewash, stainless steel bowl	•	•		
S19224BZ	Halo Eyewash, stainless steel bowl		•		
S19224BZS	Halo Eyewash, stainless steel bowl			•	•
S19224BPT	Halo Eyewash, stainless steel bowl, p-trap	•	•		
S19224BPTZ	Halo Eyewash, stainless steel bowl, p-trap		•		
S19224BPTZS	Halo Eyewash, stainless steel bowl, p-trap				•
Eyewashes with Dust Cover					
S19214PDC	Halo Eyewash, plastic bowl w/ dust cover	•	•		
S19214PDCZ	Halo Eyewash, plastic bowl w/ dust cover		•		
S19214PDCZS	Halo Eyewash, plastic bowl w/ dust cover			•	•
S19214DC	Halo Eyewash, stainless steel bowl & hinged dust cover	•	•		
S19214DCZ	Halo Eyewash, stainless steel bowl & hinged dust cover		•		
S19214DCZS	Halo Eyewash, stainless steel bowl & hinged dust cover			•	•
S19224PDC	Halo Eyewash, plastic bowl w/ dust cover	•	•		
S19224PDCZ	Halo Eyewash, plastic bowl w/ dust cover		•		
S19224PDCZS	Halo Eyewash, plastic bowl w/ dust cover			•	•
S19224DC	Halo Eyewash, stainless steel bowl & hinged dust cover	•	•		
S19224DCZ	Halo Eyewash, stainless steel bowl & hinged dust cover		•		
S19224DCZS	Halo Eyewash, stainless steel bowl & hinged dust cover			•	•
S19224DCPT	Halo Eyewash, stainless steel bowl & hinged dust cover, p-trap	•	•		
S19224DCPTZ	Halo Eyewash, stainless steel bowl & hinged dust cover, p-trap		•		
S19224DCPTZS	Halo Eyewash, stainless steel bowl & hinged dust cover, p-trap				•
Eye-Face Washes					
S19214FW	Halo Eye/face wash, plastic bowl	•	•		
S19214FWZ	Halo Eye/face wash, plastic bowl		•		
S19214FWZS	Halo Eye/face wash, plastic bowl			•	•
S19214P	Halo Eye/face wash, stainless steel bowl w/ hose spray	•	•		
S19214PZ	Halo Eye/face wash, stainless steel bowl w/ hose spray		•		
S19214Y	Halo Eye/face wash, stainless steel bowl	•	•		
S19214YZ	Halo Eye/face wash, stainless steel bowl		•		
S19214YZS	Halo Eye/face wash, stainless steel bowl			•	•
S19214YF	Halo Eye/face wash, stainless steel bowl, hand/foot operated	•	•		
S19214YFZ	Halo Eye/face wash, stainless steel bowl, hand/foot operated		•		

Halo Model No.	Description	UL certified to ANSI/ISEA	Intertek certified to EN standards	IAPMO Oceana certified to AS4775 & AS4020	DVGW certified
Eye-Face Washes					
S19214YFZS	Halo Eye/face wash, stainless steel bowl, hand/foot operated			•	•
S19224FW	Halo Eye/face wash, plastic bowl	•	•		
S19224FWZ	Halo Eye/face wash, plastic bowl		•		
S19224FWZS	Halo Eye/face wash, plastic bowl			•	•
S19224FWPT	Halo Eye/face wash, plastic bowl, p-trap	•	•		
S19224FWPTZ	Halo Eye/face wash, plastic bowl, p-trap		•		
S19224FWPTZS	Halo Eye/face wash, plastic bowl, p-trap				•
S19224T	Halo Eye/face wash, stainless steel bowl	•	•		
S19224TZ	Halo Eye/face wash, stainless steel bowl		•		
S19224TZS	Halo Eye/face wash, stainless steel bowl			•	•
S19224P	Halo Eye/face wash, stainless steel bowl w/ hose spray, tailpiece	•	•		
S19224PZ	Halo Eye/face wash, stainless steel bowl w/ hose spray, tailpiece		•		
S19224TPT	Halo Eye/face wash, stainless steel bowl, p-trap	•	•		
S19224TPTZ	Halo Eye/face wash, stainless steel bowl, p-trap		•		
S19224TPTZS	Halo Eye/face wash, stainless steel bowl, p-trap				•
S19224Y	Halo Eye/face wash, stainless steel bowl, hand/foot operated, tailpiece	•	•		
S19224YZ	Halo Eye/face wash, stainless steel bowl, hand/foot operated, tailpiece		•		
S19224YZS	Halo Eye/face wash, stainless steel bowl, hand/foot operated, tailpiece			•	•
Eye-Face Washes with Dust covers					
S19214PDCFW	Halo Eye/face wash, plastic bowl w/ dust cover	•	•		
S19214PDCFWZ	Halo Eye/face wash, plastic bowl w/ dust cover		•		
S19214PDCFWZS	Halo Eye/face wash, plastic bowl w/ dust cover			•	•
S19214DCFW	Halo Eye/face wash, stainless steel bowl & hinged dust cover	•	•		
S19214DCFWZ	Halo Eye/face wash, stainless steel bowl & hinged dust cover		•		
S19214DCFWZS	Halo Eye/face wash, stainless steel bowl & hinged dust cover			•	•
S19224PDCFW	Halo Eye/face wash, plastic bowl w/ dust cover	•	•		
S19224PDCFWZ	Halo Eye/face wash, plastic bowl w/ dust cover		•		
S19224PDCFWZS	Halo Eye/face wash, plastic bowl w/ dust cover			•	•
S19224DCFW	Halo Eye/face wash, stainless steel bowl & hinged dust cover	•	•		
S19224DCFWZ	Halo Eye/face wash, stainless steel bowl & hinged dust cover		•		
S19224DCFWZS	Halo Eye/face wash, stainless steel bowl & hinged dust cover			•	•
S19224DCRPT	Halo Eye/face wash, stainless steel bowl & hinged dust cover, p-trap	•	•		
S19224DCRPTZ	Halo Eye/face wash, stainless steel bowl & hinged dust cover, p-trap		•		
S19224DCRPTZS	Halo Eye/face wash, stainless steel bowl & hinged dust cover, p-trap				•
All Stainless Steel Eye/Face Wash					
S19214BSS	Halo stainless steel eye/face wash and bowl	•	•		
S19214BSSZ	Halo stainless steel eye/face wash and bowl		•	•	•
S19214SC	Halo stainless steel eye/face wash, bowl and cover	•	•		
S19214SCZ	Halo stainless steel eye/face wash, bowl and cover		•	•	•
S19214SS	Halo stainless steel eye/face wash and bowl with foot activation	•	•		
S19214SSZ	Halo stainless steel eye/face wash and bowl with foot activation		•	•	•
S19224SC	Halo stainless steel eye/face wash, bowl and cover	•	•		
S19224SCZ	Halo stainless steel eye/face wash, bowl and cover		•	•	•
S19224SS	Halo stainless steel eye/face wash and bowl	•	•		
S19224SSZ	Halo stainless steel eye/face wash and bowl		•	•	•

Halo S19314 Series Certification Reference

Halo Model No.	Description	UL certified to ANSI/ISEA	Intertek certified to EN standards	IAPMO Oceana certified to AS4775 & AS4020	DVGW certified
Eyewashes					
S19314EW	Halo Eyewash, plastic showerhead & bowl	•	•		
S19314EWZ	Halo Eyewash, plastic showerhead & bowl		•		
S19314EWZS	Halo Eyewash, plastic showerhead & bowl			•	•
S19314P	Halo Eyewash, plastic showerhead & bowl w/ hose spray	•	•		
S19314PZ	Halo Eyewash, plastic showerhead & bowl w/ hose spray		•		
S19314SB	Halo Eyewash, plastic showerhead, stainless steel bowl	•	•		
S19314SBZ	Halo Eyewash, plastic showerhead, stainless steel bowl		•		
S19314SBZS	Halo Eyewash, plastic showerhead, stainless steel bowl			•	•
S19314LL	Halo Eyewash, plastic showerhead, stainless steel bowl, hand/foot activated	•	•		
S19314LLZ	Halo Eyewash, plastic showerhead, stainless steel bowl, hand/foot activated		•		
S19314LLZS	Halo Eyewash, plastic showerhead, stainless steel bowl, hand/foot activated			•	•
S19314F	Halo Eyewash, plastic showerhead w/ stainless steel shroud & bowl	•	•		
S19314FZ	Halo Eyewash, plastic showerhead w/ stainless steel shroud & bowl		•		
S19314FZS	Halo Eyewash, plastic showerhead w/ stainless steel shroud & bowl			•	•
S19314UU	Halo Eyewash, plastic showerhead w/ stainless steel shroud & bowl, hand/foot operated eyewash	•	•		
S19314UUZ	Halo Eyewash, plastic showerhead w/ stainless steel shroud & bowl, hand/foot operated eyewash		•		
S19314UUZS	Halo Eyewash, plastic showerhead w/ stainless steel shroud & bowl, hand/foot operated eyewash			•	•
Eyewashes with Dust Cover					
S19314PDC	Halo Eyewash, plastic showerhead & bowl w/ dust cover	•	•		
S19314PDCZ	Halo Eyewash, plastic showerhead & bowl w/ dust cover		•		
S19314PDCZS	Halo Eyewash, plastic showerhead & bowl w/ dust cover			•	•
S19314DC	Halo Eyewash, plastic showerhead, stainless steel bowl & hinged dust cover	•	•		
S19314DCZ	Halo Eyewash, plastic showerhead, stainless steel bowl & hinged dust cover		•		
S19314DCZS	Halo Eyewash, plastic showerhead, stainless steel bowl & hinged dust cover			•	•
Eye-Face Washes					
S19314FW	Halo Eye/face wash, plastic showerhead & bowl	•	•		
S19314FWZ	Halo Eye/face wash, plastic showerhead & bowl		•		
S19314FWZS	Halo Eye/face wash, plastic showerhead & bowl			•	•
S19314SBFW	Halo Eye/face wash, plastic showerhead, stainless steel bowl	•	•		
S19314SBFWZ	Halo Eye/face wash, plastic showerhead, stainless steel bowl		•		
S19314SBFWZS	Halo Eye/face wash, plastic showerhead, stainless steel bowl			•	•
S19314AC	Halo Eye/face wash, plastic showerhead, stainless steel bowl, hand/foot operated eyewash	•	•		
S19314ACZ	Halo Eye/face wash, plastic showerhead, stainless steel bowl, hand/foot operated eyewash		•		
S19314ACZS	Halo Eye/face wash, plastic showerhead, stainless steel bowl, hand/foot operated eyewash			•	•
S19314TT	Halo Eye/face wash, plastic showerhead w/ stainless steel shroud & bowl	•	•		

Halo Model No.	Description	UL certified to ANSI/ISEA	Intertek certified to EN standards	IAPMO Oceana certified to AS4775 & AS4020	DVGW certified
Eye-Face Washes					
S19314TTZ	Halo Eye/face wash, plastic showerhead w/ stainless steel shroud & bowl		•		
S19314TTZS	Halo Eye/face wash, plastic showerhead w/ stainless steel shroud & bowl			•	•
S19314SPR	Halo Eye/face wash, stainless steel showerhead & bowl, hand/foot operated eyewash	•	•		
S19314SPRZ	Halo Eye/face wash, stainless steel showerhead & bowl, hand/foot operated eyewash		•		
S19314SPRZS	Halo Eye/face wash, stainless steel showerhead & bowl, hand/foot operated eyewash			•	
S19314BFPB	Halo Eye/face wash, barrier-free, plastic showerhead & bowl	•	•		
S19314BFPBZ	Halo Eye/face wash, barrier-free, plastic showerhead & bowl		•		
S19314BFPBZS	Halo Eye/face wash, barrier-free, plastic showerhead & bowl			•	•
S19314BF	Halo Eye/face wash, barrier-free, plastic showerhead, stainless steel bowl	•	•		
S19314BFZ	Halo Eye/face wash, barrier-free, plastic showerhead, stainless steel bowl		•		
S19314BFZS	Halo Eye/face wash, barrier-free, plastic showerhead, stainless steel bowl			•	•
Eye-Face Washes with Dust covers					
S19314PDCFW	Halo Eye/face wash, plastic showerhead & bowl w/ dust cover	•	•		
S19314PDCFWZ	Halo Eye/face wash, plastic showerhead & bowl w/ dust cover		•		
S19314PDCFWZS	Halo Eye/face wash, plastic showerhead & bowl w/ dust cover			•	•
S19314DCFW	Halo Eye/face wash, plastic showerhead, stainless steel bowl & hinged dust cover	•	•		
S19314DCFWZ	Halo Eye/face wash, plastic showerhead, stainless steel bowl & hinged dust cover		•		
S19314DCFWZS	Halo Eye/face wash, plastic showerhead, stainless steel bowl & hinged dust cover			•	•
S19314DCBF	Halo Eye/face wash, barrier-free, plastic showerhead, stainless steel bowl w/ dust cover	•	•		
S19314DCBFZ	Halo Eye/face wash, barrier-free, plastic showerhead, stainless steel bowl w/ dust cover		•		
S19314DCBFZS	Halo Eye/face wash, barrier-free, plastic showerhead, stainless steel bowl w/ dust cover			•	•
Eye-Face Washes without Eyewash Bowl					
S19314GG	Halo Eye/face wash, plastic showerhead, no bowl	•	•		
S19314GGZ	Halo Eye/face wash, plastic showerhead, no bowl		•		
S19314GGZS	Halo Eye/face wash, plastic showerhead, no bowl			•	•
All Stainless Steel Eye/Face Wash					
S19314BFSS	Halo stainless steel eye/face wash and showerhead, barrier free	•	•		
S19314BFSSZ	Halo stainless steel eye/face wash and showerhead, barrier free		•	•	
S19314FSS	Halo stainless steel eye/face wash and showerhead	•	•		
S19314FSSZ	Halo stainless steel eye/face wash and showerhead		•	•	
S19314SC	Halo stainless steel eye/face wash and bowl, cover and showerhead	•	•		
S19314SCZ	Halo stainless steel eye/face wash and bowl, cover and showerhead		•	•	
S19314SS	Halo stainless steel eye/face wash and showerhead with foot activation	•	•		
S19314SSZ	Halo stainless steel eye/face wash and showerhead with foot activation		•	•	
S19314SS16	Halo 316 stainless steel eye/face wash and showerhead with foot activation	•	•		
S19314SS16Z	Halo 316 stainless steel eye/face wash and showerhead with foot activation		•	•	

Numerical Index

MODEL NO.	PG	MODEL NO.	PG	MODEL NO.	PG	MODEL NO.	PG	MODEL NO.	PG
Fixtures		S19214BZS	17	S19224DCFWZS	28	S19-270B	67	S19314DCZ	36
Keltech CLE Series	52	S19214DC	18	S19224DCPT	26	S19-270BL	67	S19314DCZS	36
Keltech SNA Series	52	S19214DCZ	18	S19224DCPTZ	26	S19-270C	70	S19314DCBF	41
Keltech S19361	52	S19214DCZS	18	S19224DCPTZS	26	S19-270E	71	S19314DCBFZ	41
Keltech S19361F	52	S19214DCFW	19	S19224DCRPT	28	S19-270HD	70	S19314DCBFZS	41
S19-110	10	S19214DCFWZ	19	S19224DCRPTZ	28	S19-270HW	70	S19314DCFW	40
S19-110BF	10	S19214DCFWZS	20	S19224DCRPTZS	29	S19-270JD	71	S19314DCFWZ	40
S19-110BFSS	10	S19214EW	17	S19224EW	24	S19-270JW	71	S19314DCFWZS	40
S19-110BFSSZ	10	S19214EWZ	17	S19224EWZ	24	S19274C	70	S19314EW	34
S19-110SS	10	S19214EWZS	17	S19224EWZS	24	S19274E	71	S19314EWZ	34
S19-110SSZ	10	S19214FW	18	S19224FW	26	S19274HD	70	S19314EWZS	34
S19-120	12	S19214FWZ	18	S19224FWZ	26	S19274HDR	70	S19314F	35
S19-120A	12	S19214FWZS	18	S19224FWZS	26	S19274HDB	70	S19314FZ	35
S19-120ABF	13	S19214P	19	S19224FWPT	26	S19274HW	70	S19314FZS	35
S19-120BF	13	S19214PZ	19	S19224FWPTZ	26	S19274HWP	70	S19314FW	36
S19-120FM	13	S19214PDC	17	S19224FWPTZS	26	S19274JD	71	S19314FWZ	37
S19-120FMBF	13	S19214PDCZ	17	S19224P	27	S19274JDB	71	S19314FWZS	37
S19-120G	12	S19214PDCZS	17	S19224PZ	27	S19274JW	71	S19314FSS	42
S19-120HFP	12	S19214PDCFW	19	S19224PDC	25	S19274JWB	71	S19314FSSZ	42
S19-120P	12	S19214PDCFWZ	19	S19224PDCZ	25	S19-280D	70	S19314GG	41
S19-120SS	12	S19214PDCFWZS	19	S19224PDCZS	25	S19-280W	70	S19314GGZ	41
S19-120SSZ	12	S19214SC	20	S19224PDCFW	28	S19284H	74	S19314GGZS	41
S19-120SSBF	13	S19214SCZ	20	S19224PDCFWZ	28	S19284HB	74	S19314LL	35
S19-120SSBFZ	13	S19214SS	20	S19224PDCFWZS	28	S19284J	74	S19314LLZ	35
S19-120T	12	S19214SSZ	20	S19224PT	24	S19284JB	74	S19314LLZS	35
S19-125BF	73	S19214Y	18	S19224PTZ	24	S19-290D	71	S19314P	34
S19-125FMBF	73	S19214YZ	18	S19224PTZS	24	S19-290W	71	S19314PZ	34
S19-125SBF	73	S19214YZS	18	S19224SC	29	S19294HB	75	S19314PDC	36
S19-125SFMBF	73	S19214YF	18	S19224SCZ	29	S19294HBT	75	S19314PDCZ	36
S19-130	13	S19214YFZ	19	S19224SS	29	S19294JB	75	S19314PDCZS	36
S19-130A	13	S19214YFZS	19	S19224SSZ	29	S19294JBT	75	S19314PDCFW	40
S19-130ABF	14	S19-2150	54	S19224T	26	S19-300	47	S19314PDCFWZ	40
S19-130BF	14	S19-2200	54	S19224TZ	27	S19-310PVC	43	S19314PDCFWZS	40
S19-130F	14	S19-220BF	29	S19224TZS	27	S19-310TW	42	S19314SB	34
S19-130SS	13	S19-220HFP	29	S19224TPT	27	S19314AC	37	S19314SBZ	34
S19-130SSZ	13	S19224B	24	S19224TPTZ	27	S19314ACZ	37	S19314SBZS	34
S19-130SSBF	14	S19224BZ	24	S19224TPTZS	27	S19314ACZS	38	S19314SBFW	37
S19-130SSBFZ	14	S19224BZS	24	S19224Y	27	S19314BF	39	S19314SBFWZ	37
S19-2000	54	S19224BPT	25	S19224YZ	27	S19314BFZ	39	S19314SBFWZS	37
S19-2000EFX	54	S19224BPTZ	25	S19224YZS	28	S19314BFZS	40	S19314SC	42
S19-200B	67	S19224BPTZS	25	S19-2250	54	S19314BFPB	39	S19314SCZ	42
S19-2100	54	S19224DC	25	S19-2300	54	S19314BFPBZ	39	S19314SPR	38
S19214BSS	20	S19224DCZ	25	S19-2350	54	S19314BFPBZS	39	S19314SPRZ	38
S19214BSSZ	20	S19224DCZS	25	S19-240	67	S19314BFSS	42	S19314SPRZS	39
S19214B	17	S19224DCFW	28	S19-240FW	67	S19314BFSSZ	42	S19314SS	43
S19214BZ	17	S19224DCFWZ	28	S19-260	67	S19314DC	36	S19314SSZ	43

MODEL NO.	PG	MODEL NO.	PG	MODEL NO.	PG	MODEL NO.	PG	MODEL NO.	PG
SI9314SS16	43	SI944011CBC	65	Replacement Parts		SI9-0011	91	S45-2309	65, 92
SI9314SS16Z	43	SI944011CBD	65	107-371	87	SI9-949	93	S45-2310	65, 92
SI9314TT	38	SI944022ABC	65	113-1150	88	S21-071	88	S45-2453	87
SI9314TTZ	38	SI9-460	64	113-1151	88	S21-072	88	S45-2675	89
SI9314TTZS	38	SI9-460EFW	64	113-1159	88	S21-073	88	S45-2676	89
SI9314UU	35	SI9-465	64	113-1185	88	S21-074	88	S45-572	94
SI9314UUZ	35	SI9-465EFW	64	114-050	93	S21-075	88	S45-620	94
SI9314UUZS	36	SI9-670	82	114-050E	93	S24-192	90	S53-063	87
SI9-319B2	58	SI9-671	82	114-051	93	S24-193	90	S53-310	87
SI9-319B4	58	SI9-671H	82	114-051E	93	S24-194	90	S65-339	89
SI9-319S2	58	SI9-672	82	114-052	93	S24-195	90	S88-068	89
SI9-319S4	58	SI9-690	82	114-052E	93	S24-196	90	S89-002	91
SI9-322D	56	SI9-690H	82	125-032	88	S24-200	90	S89-003	91
SI9-322E	56	SI9-690LHS	82	125-167	88	S24-202	91	S90-388	89
SI9-323D	56	SI9-788	82	128-135	86	S27-265	92	S90-390	89
SI9-323E	56	SI9-788H	82	128-156A	90	S27-276	91	S90-391	89
SI9-324D	57	SI9-788LHS	82	128-156B	90	S27-278	91	S90-392	89
SI9-324E	57	SI9-921	80	128-156C	90	S27-282	87		
SI9-324DG	57	SI9-921H	80	128-156D	90	S27-287	87		
SI9-324EG	57	SI9-921HR	80	128-156E	90	S27-303	65, 92		
SI9-324DGW	57	SI9-949	80	128-156F	90	S27-327	89		
SI9-324EGW	57	Accessories		128-156G	90	S27-328	89		
SI9-324D2D	57	SI9-322D	84	133-140	80, 93	S30-059	91		
SI9-324D1D	57	SI9-322E	84	140-226	65, 92	S30-061	91		
SI9345HFB	76	SI9-323D	84	153-395	94	S30-070	86		
SI9345HFBT	76	SI9-323E	84	153-396	94	S30-071	86		
SI9345HXB	76	SI9-324D	84	153-401	94	S30-072	86		
SI9345HXBT	76	SI9-324D1D	85	154-058	88	S30-074	86		
SI9345JFB	76	SI9-324D2D	85	154-147	91	S30-075	86		
SI9345JFBT	76	SI9-324DG	84	187-053	88	S30-087	86		
SI9345JXB	76	SI9-324DGW	84	187-320	89	S39-394	87		
SI9345JXBT	76	SI9-324E	84	204-421	93	S39-395	94		
SI9372	50	SI9-324EG	85	269-053	91	S39-396	87		
SI9374	50	SI9-32EGW	85	269-054	91	S39-397	87		
SI9378	50	SI9-330	83	269-1379	80, 93	S39-681	87		
SI9382	50	SI9-330ST	83	269-1444	93	S39-682	87		
SI9384	50	SI9-399	83	269-964	93	S39-817	91		
SI9387	50	SI9-430EH	83	S05-127	87	S45-122	86		
SI9388	50	SI9-430SH	83	S05-190	89	S45-123	86		
SI9-399	80	SI9-671HR	83	S05-192	89	S45-1314SS	94		
SI9-430A	64	SI9-690A	83	S05-204	89	S45-1314SS16	94		
SI9-430D	64	SI9-690HR	83	S05-205	89	S45-1986	54, 94		
SI9-430EH	64	SI9-788HR	83	S08-336	86	S45-1987	54, 94		
SI9-430SH	64	SI9-921HR	83	S08-338	86	S45-1989	54, 94		
SI944011ABC	65	S45-1964	85	S08-390	89	S45-1990	54, 94		
SI944011BBC	65	S45-2396	85						



Complimentary & Confidential Evaluation

We offer a confidential no-charge evaluation of your workspaces to assess your current situation and suggest a plan for your emergency equipment needs.

262 251 6000
800 BRADLEY bradleycorp.com
W142 N9101 Fountain Boulevard
Menomonee Falls, WI 53051 USA
3928-7.5-0816

